VE Series II SEDAN AND SPORTWAGON

VE Sedan and Sportwagon
Owner's Handbook

GM Holden Ltd, ABN 84 006 893 232 (hereinafter Holden)

Change of name, address or ownership

In the event of a Safety Recall, or for various reasons, Holden may need to contact you as the owner of this vehicle.

If you have recently changed your address, or name, or purchased this vehicle second-hand, please help us to help you by taking a few minutes to fill in and mail the forms at the beginning of the Service/warranty booklet.

For information about GM Holden's privacy policy or to update owner details online, please visit Holden's website at www.holden.com.au

Note Please refer to the inside front cover of the Service/ warranty booklet for the Vehicle Identification Certificate.

Printed in Australia
Part No. 92239594
May 2011 (MY11 VE Sedan and Sportwagon. Print 6)

© 2011 GM Holden Ltd
Reproduction in whole or part is prohibited without written approval from GM Holden Ltd, ABN 84 006 893 232

Introduction 2
In brief 4
Keys, doors, and windows 16
Seats, restraints 34
Storage 54
Instruments and controls 67
Lighting 109
Infotainment system 116
Climate control 200
Driving and operating 208
Vehicle care 250
Service and maintenance 318
Technical data 320
Customer information 329
Index 331

Introduction

We thank you for choosing Holden and want to assure you of our continuing interest in your driving pleasure and satisfaction.

This handbook applies to the current VE series II model. Therefore, due to different models and options, you may find reference in this Handbook to some equipment not fitted to your own vehicle.

Please note that all information, illustrations and specifications in this Handbook are based on the latest production information available at the time of printing. Holden reserves the right to make changes at any time without notice and without incurring any obligation.

Introduction

Your vehicle is a designed combination of advanced technology, safety, environmental friendliness and economy.

This Owner's Handbook provides you with all the necessary information to enable you to drive your vehicle safely and efficiently.

Make sure your passengers are aware of the possible risk of accident and injury which may result from improper use of the vehicle.

Using this manual

- The In brief section will give you an initial overview.
- The table of contents at the beginning of this manual and within each chapter shows where the information is located.
- The index will enable you to search for specific information.
- Directional data, e.g. left or right, or front or back, always relate to the direction of travel.
- Depending on the model variant, integrated special equipment and accessories, the scope of equipment of your vehicle can differ from the descriptions in this Owner's Handbook.
- The *Bluetooth*® word mark and logo are registered trademarks and are owned by the Bluetooth SIG, Inc.
- ESP® is a registered trademark of Daimler Chrysler AG.
- iPod® is a registered trademark of Apple Inc.

Danger, warnings and cautions

⚠Danger

Text marked ⚠ **Danger** provides information on risk of fatal injury. Disregarding this information may endanger life.

⚠Warning

Text marked ⚠ **Warning** provides information on risk of accident or injury. Disregarding this information may lead to injury.

Caution

Text marked **Caution** provides information on possible damage to the vehicle. Disregarding this information may lead to vehicle damage.

In brief

Initial drive information

Unlocking the vehicle

Remote keyless entry

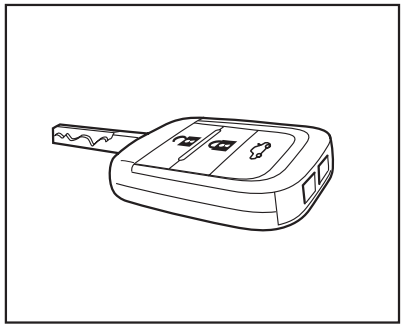

: Lock and arm the alarm

: Unlock and disarm the alarm

: Boot unlock (Sedan)

Keys and locks, see page 16.

Doors, see page 20.

Manual door locks

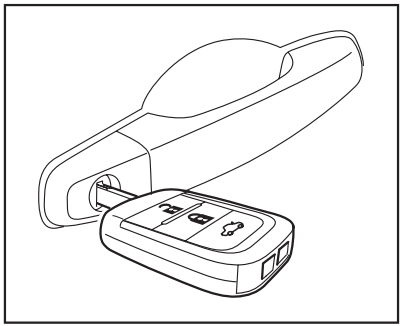

To lock, insert the key into the driver's door lock and turn towards the rear of the vehicle, then turn it back to the vertical position and remove.

This will lock all doors including the tailgate (Sportwagon).

To unlock, turn the key once towards the front of the vehicle to unlock the driver's door. Turn it twice towards the front of the vehicle to unlock all doors and the tailgate (Sportwagon).

Keys and locks, see page 16.

Doors, see page 20.

Seat adjustment

The vehicle may have the following levers and switches for seat adjustment.

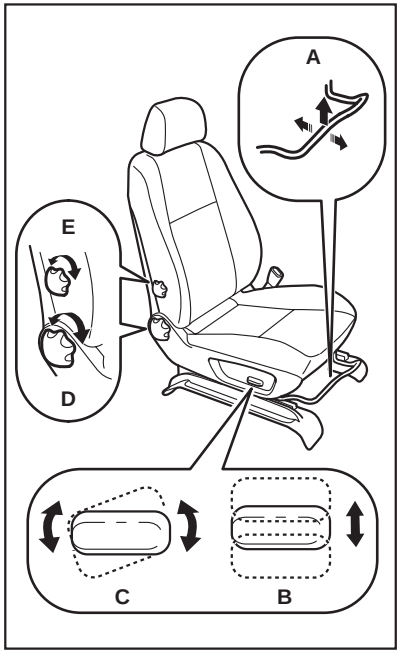

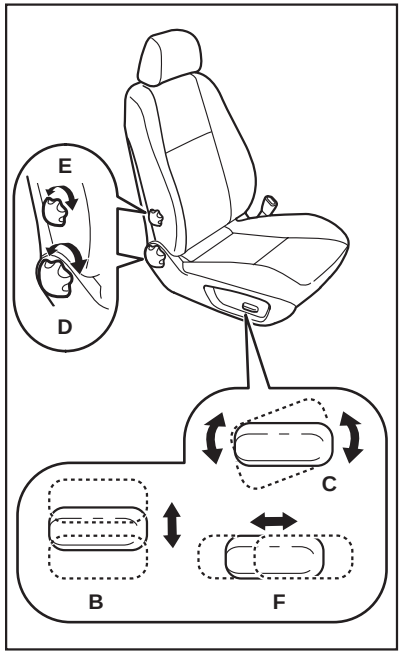

A. Lift for forwards/backwards
B. Up/down
C. Tilt
D. Recline back

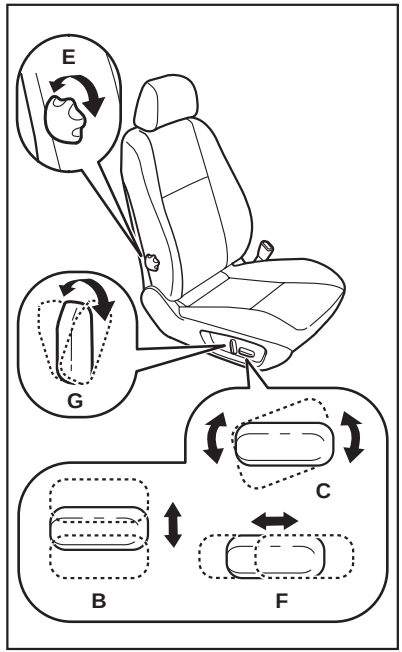

E. Lumbar
F. Forwards/backwards
G. Recline

Front seats, see page 35.

Head restraints

⚠Warning

The head restraint is a safety feature. Do not use the head restraint to rest the head upon.

The centre of the head restraint should be at eye level, never at neck level.

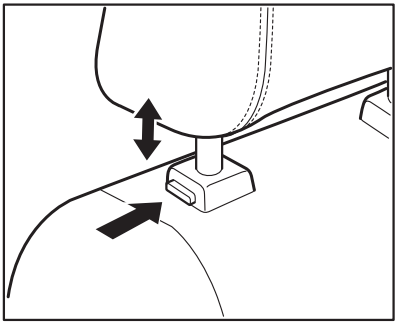

Lift the head restraint up to raise it.

Push the locking button and push the head restraint down to lower it.

Front head restraints cannot be removed.

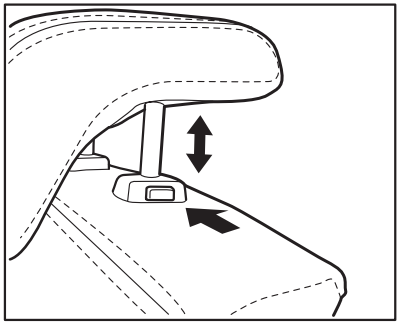

The vehicle may have adjustable rear head restraints, these can be removed.

Head restraints, see page 34.

Child restraints, see page 49.

Seat belt

Pull the metal tongue across your body into the buckle, until it clicks into place.

The belt should not be twisted. It should lie flat and fit firmly across your hips.

To remove, press the release button on the buckle to allow the belt to retract.

Three point belt, see page 41.

Mirror adjustment

Rear view mirror

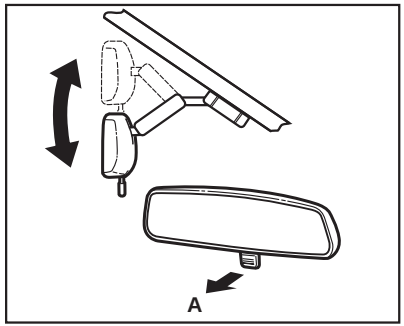

Push the lever (A) on the lower edge of the mirror towards the front of the vehicle, then adjust the position of the mirror.

To reduce headlamp glare from following vehicles, pull the lever (A) towards the rear of the vehicle.

Interior mirrors, see page 29.

Exterior mirrors

Power mirrors

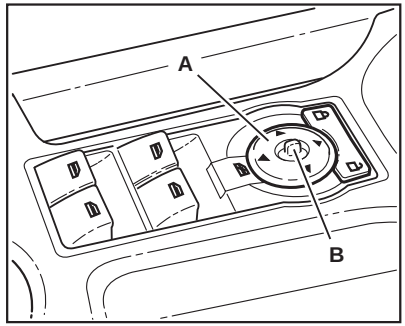

To adjust the external rear view mirrors, turn the ignition on and use switches (A) and (B) in the centre console.

Exterior mirrors, see page 27.

Steering wheel adjustment

⚠Warning

Do not attempt to adjust the steering wheel while driving.

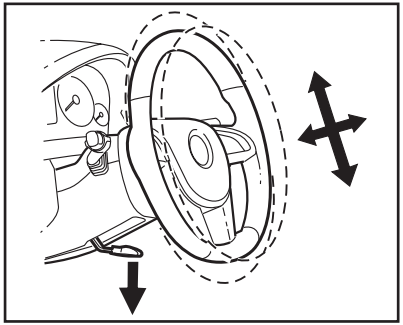

1. Move the lever down to unlock.
2. Move the steering wheel up, down, closer or away.
3. Move the lever up to lock.
4. Ensure the steering wheel is locked in position before driving.

Controls, see page 70.

Instrument panel overview

(Omega, Berlina, Calais, Calais V-Series)

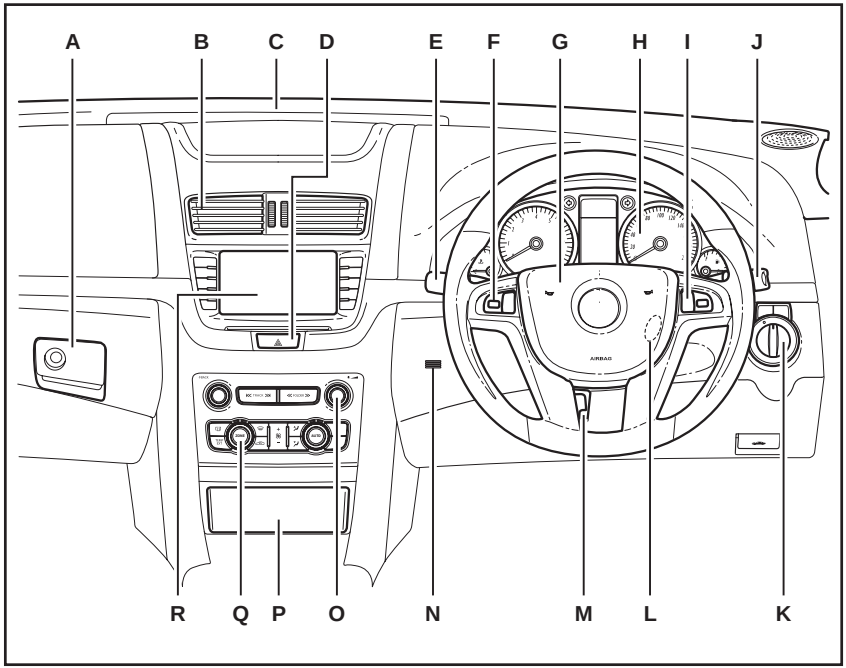

A. Glove box 54
B. Vents 201
C. Sunlight sensor 207
D. Hazard warning flasher 111
E. Lever for wipers/washers 71
F. Steering wheel controls:
Audio button 120
Trip button 92
Enter button 92
G. Horn pad 71
H. Warning lights, gauges and indicators 74
I. Steering wheel controls:
Bluetooth® phone button 120
Navigation button 120
Volume/mute switch 120
J. Lever for:
Turn signals 112
High/low beam 110
Cruise control 227
K. Lamp control 109
L. Ignition lock/switch (behind steering wheel) 211
M. Steering wheel adjustment 70
N. In-car temperature sensor 207
O. Infotainment system controls 119
P. Storage compartment 55
Dual fuel (LPG) selector switch ... 242
Q. Climate control switches 201
R. Infotainment screen 119

Instrument panel overview

(SV6, SS, SS V-Series)

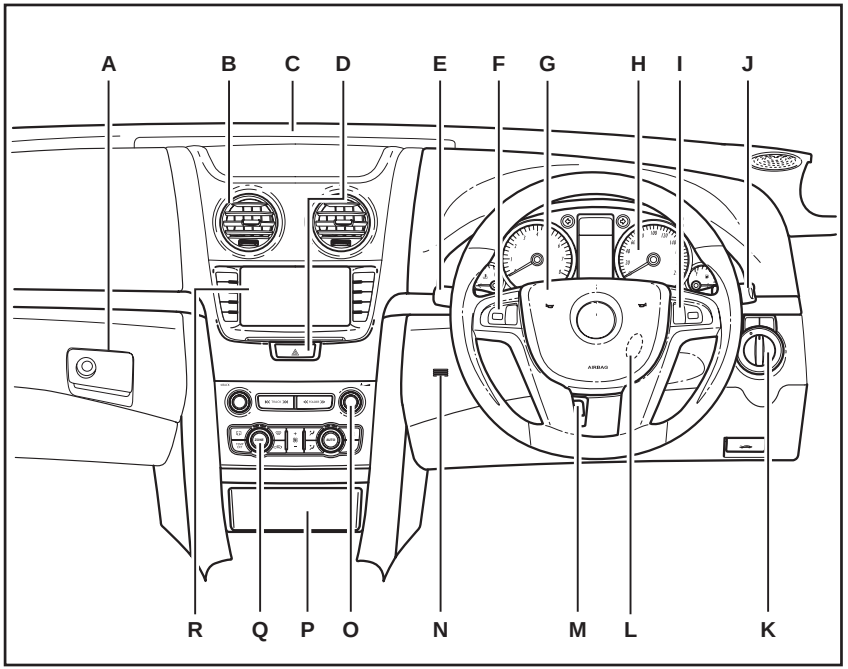

A. Glove box 54
B. Vents 201
C. Sunlight sensor 207
D. Hazard warning flasher 111
E. Lever for wipers/washers 71
F. Steering wheel controls:
   Audio button 120
   Trip button 92
   Enter button 92
G. Horn pad 71
H. Warning lights, gauges and indicators 74
I. Steering wheel controls:
   Bluetooth® phone button 120
   Navigation button 120
   Volume/mute switch 120
J. Lever for:
   Turn signals 112
   High/low beam 110
   Cruise control 227
K. Lamp control 109
L. Ignition lock/switch (behind steering wheel) 211
M. Steering wheel adjustment 70
N. In-car temperature sensor 207
O. Infotainment system controls 119
P. Storage compartment 55
Q. Climate control switches 201
R. Infotainment screen 119

Interior lighting

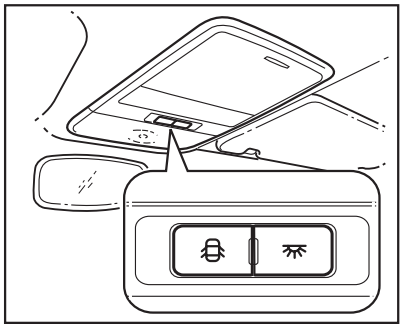

: On/off

: Door activated

Dome lamps, see page 113.

Reading lamps, see page 114.

Boot, cargo and glove box lamps, see page 114.

Battery saver, see page 115.

Exterior lighting

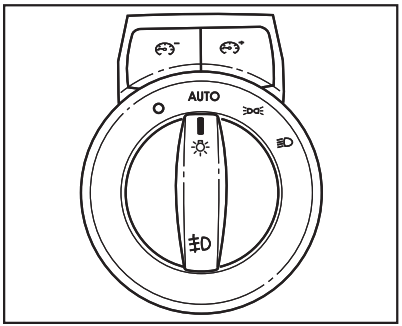

O: Off

AUTO: Automatic headlamps

: Park lamps

: Headlamps

: Fog lamps

: Instrument lighting dimmer

Exterior lighting, see page 109.

High/low beam

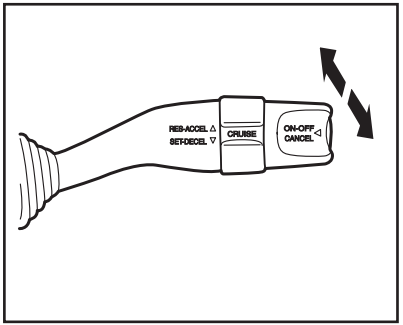

High beam: Push lever

Low beam: Pull lever from high beam position

Headlamp flash: Pull lever

The high beam lamps can be flashed even if the headlamps and/or ignition are off.

Exterior lighting, see page 109.

High/low beam, see page 110.

Turn signals

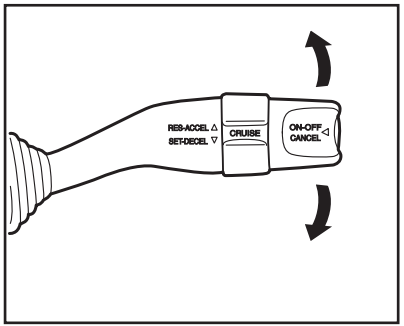

Left: Lever up

Right: Lever down

Exterior lighting, see page 109.

Turn signals, see page 112.

Hazard warning flasher

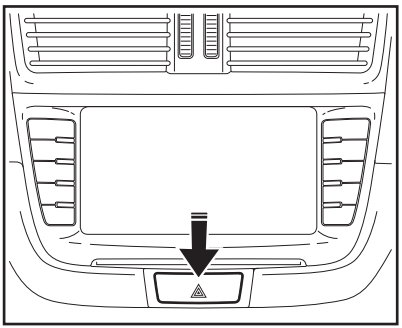

Press △ to turn the hazard warning flasher on and off when the ignition is in any position.

Hazard warning flashers, see page 111.

Horn

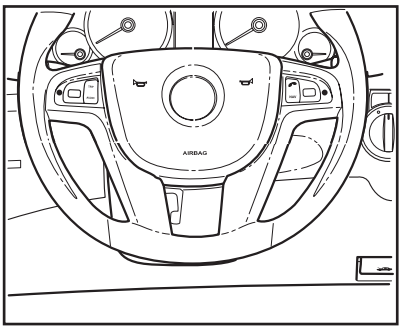

Press on either side.

Washer and wiper systems

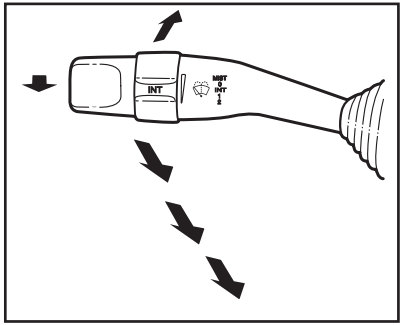

Mist: Wipers cycle while the lever is held up

0: Off

INT: Intermittent wipe

1: Slow

2: Fast

Pull to wash the windscreen. The wipers will cycle for a short time.

Windscreen wiper/washer, see page 71.

Washer fluid, see page 266.

Climate control

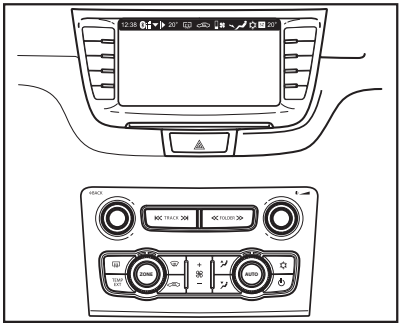

The climate control panel is located in the centre of the dashboard.

Settings for the driver and passenger can be adjusted independently.

Climate control, see page 200.

Air conditioning system, see page 201.

Windscreen demister, see page 205.

Rear window demister, see page 205.

Transmission

4 speed transmission

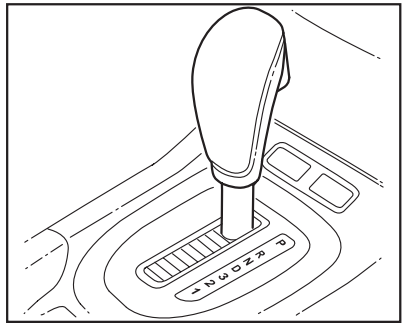

P: Park

R: Reverse

N: Neutral

D: Drive

3: 3rd gear

2: 2nd gear

1: 1st gear

Automatic transmission, see page 213.

Sport shift mode, see pages 216 and 218.

6 speed transmission

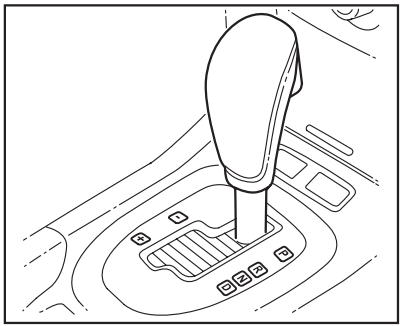

P: Park

R: Reverse

N: Neutral

D: Drive

+/–: Active select mode (A/S)

For A/S mode, move the shift lever to position **D** then push to the left.

Briefly pull or push the lever rearward or forward and release.

Automatic transmission, see page 213.

Active select mode, see page 220.

Manual transmission

Manual transmissions have six forward gears and a reverse gear. The shift pattern is shown on top of the shift lever.

To select **R**, move the shift lever sideways against spring pressure to engage reverse gear.

Manual transmission, see page 221.

Manual operating, see page 222.

Starting off

Check before starting

- Check that windows, mirrors and lamps are clean.
- Visually check tyre inflation. Check the tyre pressures each week.
- Ensure that all doors are closed and secured.
- Position your seat for comfortable driving.
- Adjust rear view mirrors.
- Fasten seat belts.
- Check that the warning indicators illuminate when turning the ignition on.

Starting and operating, see page 208.

Starting the engine, see page 212.

Starting the engine

⚠Warning

Do not switch the engine off while the vehicle is moving as there will not be any power assist for brakes or steering.

Never remove the key while the vehicle is moving, as this will lock the steering.

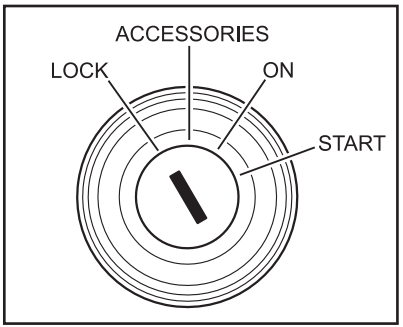

LOCK: The key is inserted and removed only from the LOCK position.

ACCESSORIES: When the key is in the ACCESSORIES position, the audio system and wipers operate.

ON: When the key is in the ON position, the engine is ready to start and all electrical systems are active.

Do not leave the switch in the ON position for a prolonged period, unless the engine is running, otherwise the vehicle battery will discharge.

START: Turn the key to the START position momentarily and then release.

The engine starts automatically.

The key returns to the ON position when released.

Ignition positions, see page 211.

Parking

1. Apply the park brake.
2. Automatic transmission: Select position **P**.

   Manual transmission: If facing uphill or on flat ground, select 1st gear. If facing downhill, select reverse gear.
3. Shut all windows.
4. Turn the ignition off and remove the key.
5. Press on the key to lock all doors and to arm the alarm system.

Keys, doors and windows

Keys and locks 16
Doors 20
Vehicle security 25
Exterior mirrors 27
Interior mirrors 29
Windows 29
Roof 31

Keys and locks

Keys

Sedan

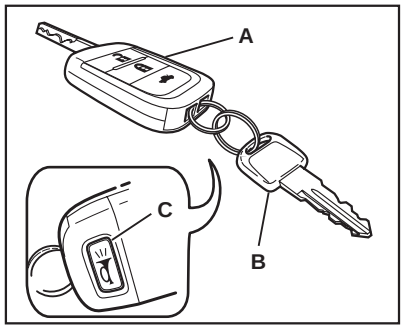

The key (A) operates all locks and the ignition, except for the glove box (B).

- Press (A) to lock the doors and to arm the alarm system.
- Press (A) to unlock the doors and to disarm the alarm system. See Doors on page 20.
- Press (A) to unlatch the boot lid. See Boot (Sedan) on page 22.

Sportwagon

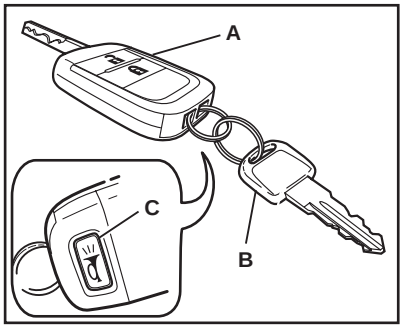

The key (A) operates all locks and the ignition, except for the glove box (B).

- Press (A) to lock the doors, tailgate and to arm the alarm system.
- Press (A) to unlock the doors, tailgate and to disarm the alarm system. See Locking and unlocking on page 20 and Tailgate (Sportwagon) on page 24.

Panic/vehicle locate button

- To locate the vehicle, press (C) briefly.

  The exterior lamps will flash and the horn will chirp.
- In an emergency, press and hold (C) for at least 2 seconds.

  The horn will sound and the turn signals will flash.
- To cancel, press (C) or insert the key and turn the ignition on.

Foldaway key blade

The vehicle may have a foldaway key blade.

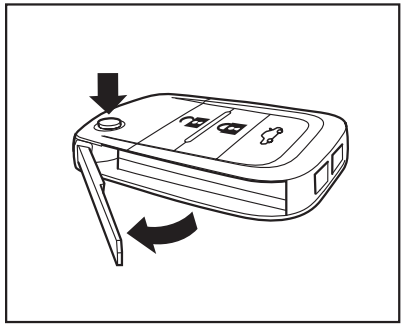

1. Press the button to extend the key blade.
2. To retract the key blade, press the button and fold the blade into the key.

Note

- The key engages audibly.
- A fixed blade key is supplied as the second key.

Matching transmitter(s) to your vehicle

Two keyless entry transmitters are coded to the vehicle.

If the vehicle's key is lost, inform a Holden Dealer immediately so the vehicle can be reprogrammed and will no longer recognise the missing key.

Additional transmitters also require re-coding to match the new transmitter.

Glove box key

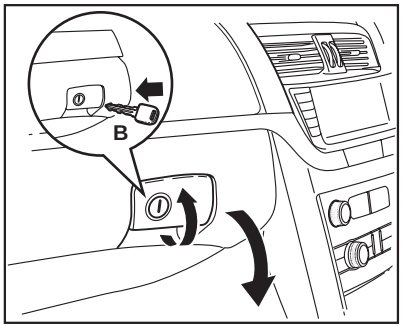

The glove box (B) key locks and unlocks the glove box.

Valuables can be locked in the glove box and the key taken with you, separately from the ignition key.

Personal identity keys

The vehicle may have personal identity keys. Two sets of settings can be stored.

- All features can be customised. See Vehicle personalisation on page 104.
- Settings are stored when a personal identity key is removed from the ignition.
- Press to recall the settings.

The features remembered by each of the two memories are:

- Climate control settings
- Radio settings
- Trip computer settings

On some vehicles, the following settings are also remembered on button activation:

- Driver's seat adjustment
- Exterior mirror position
- Exterior mirror position when reverse gear is selected. See Power mirrors on page 27.

Features revert to the last setting used for each key.

Note

- Two different memories are available, memory one and memory two.

  If a third key is made, the third key becomes memory one and the other two keys become identical memory two keys.
- The personal settings will not be applied until the button is pressed on the key and is identified.
- If the vehicle battery has been disconnected, some settings may be forgotten.

  The adjustments will be remembered the next time the features are adjusted.

About the keys

- The remote control in the key has a range of approximately 10 metres.
- The range depends on the charge of the key battery, on ambient conditions, the key's location and the area between them.
- If the key buttons do not work, move closer to the vehicle.
- Take care that no button is pressed unintentionally, especially when the vehicle is out of sight.
- Metallic window tint reduces the range of the key.
- on the key functions when in the ignition, in any position, and when removed from the vehicle.
- If any door/tailgate, is open when is pressed, the horn will chirp five times.
- The key buttons may not work if the vehicle is parked near strong radio activity, such as under TV towers (most likely in high lookout car parks).
- Ensure that other keys on the key ring are not between the key and the vehicle.
- Always store spare keys in a safe, dry place.
- Do not disassemble the keys.
- At times, a decrease in range may occur, which is normal.
- If the transmitter does not work:

  You may need to stand closer during rainy or snowy weather.

  Other vehicles or objects may be blocking the signal.

  If you are still having trouble, contact a Holden Dealer.
- The lithium battery should last approximately three years with normal use. See Replace battery in remote key on page 86.

  Have a flat key battery replaced by a Holden Dealer.
- If pressing the key buttons does not work, the doors/tailgate can be locked and unlocked by turning the key in the driver's door lock:

  Turn the key towards the rear of the vehicle (once) to lock all doors/tailgate.

  Turn the key towards the front of the vehicle once to unlock the driver's door, twice to unlock all doors/tailgate.

  Opening the door will cause activation of the alarm after a preset period of time. If this occurs, insert the key into the ignition and turn on.
- If the vehicle is delivered with only one key, or the key shows signs of damage, contact your Holden Dealer as soon as possible.

Infocard

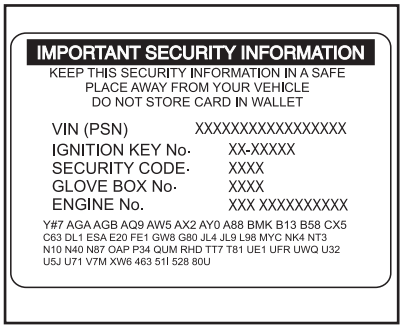
IMPORTANT SECURITY INFORMATION
KEEP THIS SECURITY INFORMATION IN A SAFE PLACE AWAY FROM YOUR VEHICLE DO NOT STORE CARD IN WALLET
VIN (PSN) XXXXXXXXXXXXXXXXX
IGNITION KEY No. XX-XXXXX
SECURITY CODE. XXXX
GLOVE BOX No. XXXX
ENGINE No. XXX XXXXXXXXXX
Y#7 AGA AGB AQ9 AW5 AX2 AY0 A88 BMK B13 B58 CX5 C63 DL1 ESA E20 FE1 GW8 G80 JL4 JL9 L98 MYC NK4 NT3 N10 N40 N87 OAP P34 QUM RHD TT7 T81 UE1 UFR UWQ U32 U5J U71 V7M XW6 463 51I 528 80U

The security card lists various security numbers for the vehicle, including key numbers.

Keep the card in a safe place, away from the vehicle.

If a key is lost, a replacement can be ordered through any Holden Dealer by quoting the key code number, security code number and providing proof of ownership.

Doors

Locking and unlocking

To customise features, see Vehicle personalisation on page 104 and Vehicle security on page 25.

When locking the vehicle:

- An open door/tailgate will remain unlocked.
- The horn will chirp five times.
- If the driver's door is open when the button is pressed, all doors/tailgate, will be locked and the driver's door lock and snib will be unlocked immediately.

Press once to:

- Lock all doors/tailgate.
- Arm the alarm (after a short delay).
- Switch the interior dome lamp off (if the switch is set to door position).
- Flash the exterior turn signals.
- Deactivate the power windows (after a predetermined time).

Press a second time to:

- Arm the alarm immediately, bypassing the 30 second delay period.
- The horn will chirp.

Press once to:

- Unlock either the driver's door only or all doors/tailgate.
- Disarm the alarm.
- Switch on the interior dome lamp (if the switch is set to the position) and power windows for a short time.
- Flash the exterior turn signals.
- Switch on the approach lighting for a predetermined time. See Approach lighting on page 111.

Press a second time to:

- Unlock all the other doors/tailgate (if pressing the first time, unlocked the driver's door only).
- Flash the exterior turn signals.
- Reactivate the approach lighting.

Manual door locks

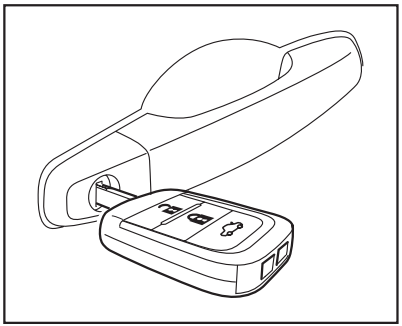

- To lock, insert the key into the driver's door lock and turn towards the rear of the vehicle, then turn back to the vertical position and remove.

  This will lock all doors/tailgate and arm the alarm system.
- To unlock, insert the key into the driver's door lock and turn it once towards the front of the vehicle to unlock the driver's door. Turn it twice towards the front of the vehicle to unlock all doors/ tailgate.

Note

This will not disarm the alarm system.

If the vehicle is unlocked using the key in the door lock while the alarm is armed, opening a door will activate the alarm. See Vehicle Security on page 25.

Locking/unlocking from inside

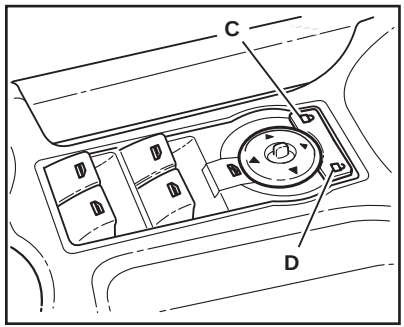

- To lock, press (C) on the centre console to lock all doors/tailgate. This will not arm the alarm.
- To unlock, press (D) on the centre console to unlock all doors/tailgate.

Door lock snibs

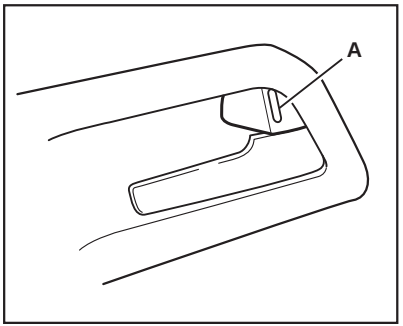

- Pull the snib (A) to lock the door.
- A door is locked when the lock snib (A) is flush with the door handle.
- A door is unlocked when the lock snib (A) is showing red.
- Pulling the snib (A) on any of the doors, locks only that door.
- Do not operate the driver's door lock snib when the door is open.

Free turning door locks

The door lock cylinder is designed to free turn if it is forcefully rotated without the correct key or if the correct key is not fully inserted.

1. To reset, turn the lock with the correct key fully inserted until its slot is vertical.
2. Remove the key, then re-insert it.
3. If the lock still free turns, turn the key 180 degrees and repeat the procedure.

Note

This feature is provided as a theft deterrent, to prevent the lock being forced open.

The force required to make the key free turn, reduces each time.

Do not attempt to demonstrate or test this feature.

Always remember to fully insert the key when locking and unlocking the doors.

If any problems occur, contact a Holden Dealer.

Child safety rear door locks

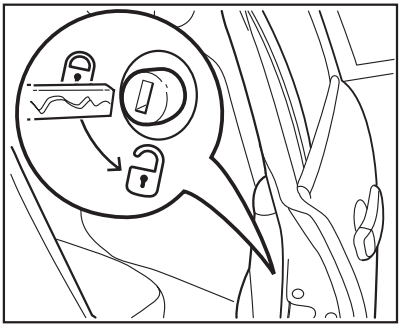

Child safety locking helps prevent rear doors being accidentally opened by small children in the vehicle.

The locks are accessible when the door is open.

To prevent the doors from being opened from the inside, use the ignition key to turn the switch away from the vertical position.

⚠Warning

For safety, always check that the lock is operating correctly (after setting) by trying to open the door from inside the vehicle.

Boot (Sedan)

Key button

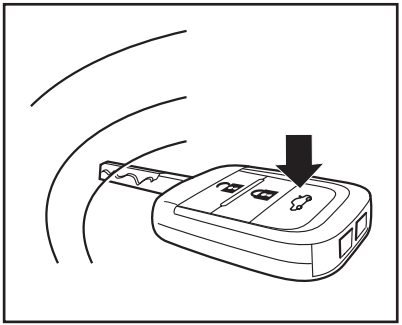

Press and hold on the key to unlock/open the boot.

Boot release button

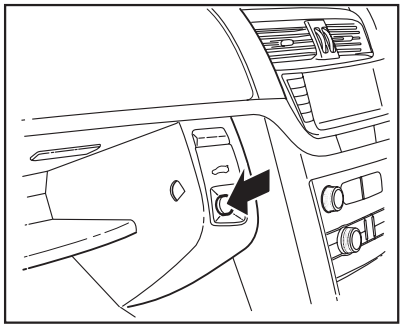

- The boot release button is located inside the glove box. Pressing this button will unlock/ open the boot.
- After partially opening the boot lid, gas struts take over to lift and hold the boot lid in the open position.
- Unlock the boot only when the vehicle is stationary.
- The boot locks automatically when closed.

Note

- The boot release button in the glove box is disabled when all doors are locked, the alarm is enabled or the vehicle is moving at greater than 13 km/h.
- If the boot is not closed properly when the vehicle is locked the security warning lamp will flash immediately upon locking (without the 30 second illumination period).

  If this happens unlock the vehicle, close the boot and relock the vehicle.

Emergency boot release

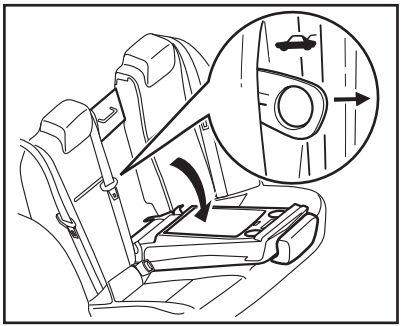

An emergency boot release is provided behind the centre of the rear seat.

1. Press the lock button (located at the top centre of the middle seat) all the way down to unlock the seatback.
2. Fold it down to gain access to the release handle.
3. Pull the release handle sideways, towards the centre of the vehicle, to open the boot.

The release handle is also visible from within the boot.

Tailgate (Sportwagon)

⚠Warning

To prevent dangerous exhaust fumes entering the vehicle, close the tailgate when the engine is running. If it is necessary to leave the tailgate open (while carrying bulky cargo) close all windows, switch heater controls to 'fresh' and set fan to highest speed.

Key button

Press to unlock all the doors and the tailgate.

If the **Two stage unlock** feature has been selected in the vehicle personalisation menu, press the unlock button a second time.

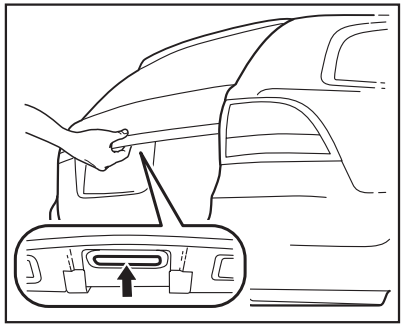

To open the tailgate press the button below the handle.

After partially opening, gas struts take over to lift and hold the tailgate in the open position.

Manual tailgate release

If the battery has been disconnected or is flat, the tailgate unlock button will not operate.

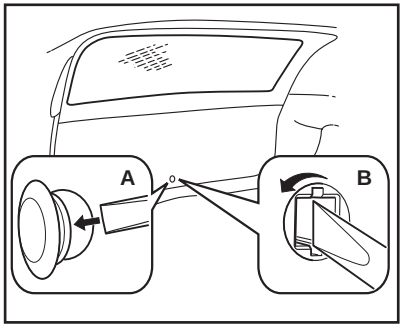

To open the tailgate, access the cargo area from inside the vehicle.

1. Using a flat-blade screwdriver, remove the rubber cover at (A).
2. Insert a flat-blade screwdriver into the hole (B) and turn anticlockwise.

Locking the tailgate

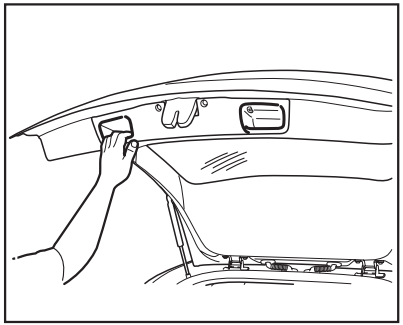

Use the handle to pull down the tailgate then close firmly.

Press on the key to lock all the doors and tailgate.

If the tailgate is not closed properly when the vehicle is locked, the horn will chirp rapidly five times. All doors will lock except the tailgate.

⚠Warning

To avoid injury and/or damage to the vehicle, check each time, before the tailgate is closed, that the contact area is unobstructed.

Vehicle security

Vehicle alarm system

- When on the key is pressed or when the vehicle is locked using the key in the driver's door lock, the alarm is armed automatically (after about 30 seconds).

  The security warning lamp will illuminate for 30 seconds then begin flashing on the instrument panel.
- The alarm system is disarmed automatically when on the key is pressed.
- While the alarm system is armed, the boot/tailgate can still be opened without activating the alarm by pressing on the key.

  The alarm will be disarmed for the boot/tailgate only.
- Closing the boot/tailgate will rearm the alarm for the boot/tailgate after a short delay.

Note

While the alarm is armed, it will activate if:

- Any door/tailgate is opened.
- Any door/tailgate is unlocked without pressing on the key.

Activate/deactivate

If activated, the alarm sounds and the turn signals flash.

To deactivate the alarm, do one of the following:

- Press the button on the key.
- Turn on the ignition.
- Allow the alarm to time out after about 30 seconds and reset itself, to guard against further break-in attempts.

Anti-theft alarm system

If the horn chirps when on the key is pressed, an attempted break-in has occurred.

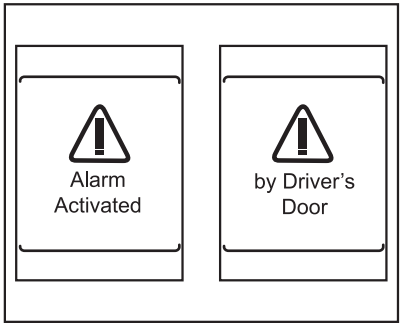

- If the alarm has been activated, the **Alarm Activated** animated symbol is displayed for about 1 second followed by an animated symbol showing which trigger point has activated the alarm.
- If there is more than one trigger point, an animated symbol for each of them will follow.
- Each animated symbol will be displayed for about 1 second before the display returns to **Alarm Activated**.
- The animated symbols are shown in a continuous cycle until the **TRIP** button is pressed.

The following messages are possible depending upon the model and what has activated the alarm:

- **by Bonnet**: if the bonnet has been opened.
- **by Boot/tailgate**: if the boot (Sedan) or tailgate (Sportwagon) has been opened.
- **by Passenger doors**: if one of the passenger doors has been opened.
- **by Driver's door**: if the driver's door has been opened.

Immobiliser

This vehicle is fitted with an immobiliser. It prevents unauthorised engine starting.

The ignition key will be recognised by the vehicle when the key is inserted into the ignition.

When difficulties in starting the vehicle are experienced, check the following:

- Extend the blade fully before inserting into the ignition.
- Do not have large bundles of keys attached to the ignition key.
- Do not have keys from other vehicles attached to the ignition key.
- Do not attempt to start the vehicle with a non-approved key.

If the vehicle still fails to start, contact a Holden Dealer.

Note

- Do not disassemble the key.
- Replacement keys can only be programmed by a Holden Dealer.
- If the vehicle key is lost, inform your Holden Dealer immediately so the vehicle can be reprogrammed and will no longer recognise the missing key.
- A maximum of four keys can be programmed to suit one vehicle.

Exterior mirrors

Power mirrors

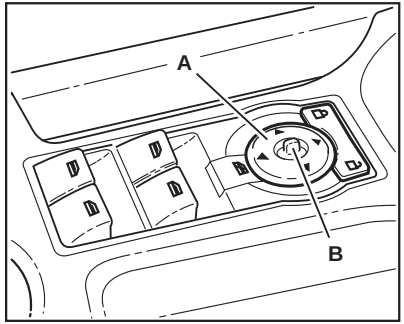

To adjust the external rear view mirrors, turn the ignition on and use the switches in the centre console:

- Move switch (B) to the right to operate the driver side mirror.
- Move switch (B) to the left to operate the passenger side mirror.
- Press the arrows on switch (A) to adjust the mirror in the direction the arrow is pointing.
- Move switch (B) back to its centre position to deactivate switch (A).

⚠Warning

The passenger side mirror is convex shaped, to provide a wider view. Objects in this mirror are closer than they appear.

Curb view assist mirrors

The vehicle may have an external mirror DIP.

The mirror DIP allows movement of the passenger side external mirror automatically to a preset view, for reversing the vehicle.

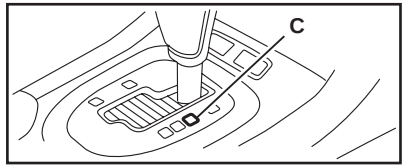

To operate the mirror DIP:

1. Turn the ignition on.

2. Move the shift lever to **R** position (C).

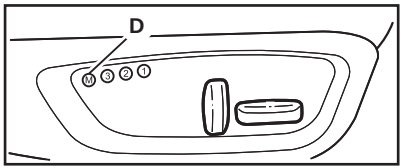

3. Briefly press **M** (D) on the driver's seat.

   A double chime sounds if the mirror DIP is activated (preset).

   A single chime sounds if the mirror DIP is deactivated (no preset).
4. To change from activated to deactivated mirror DIP or vice versa, briefly press **M** (D) again.

To adjust the mirror DIP:

1. Activate the mirror DIP as above.

   The passenger side mirror will move to the position currently set.
2. Adjust the mirror to the desired view. See Power mirrors on page 27.
3. Move the shift lever out of **R** (C).
4. To store the setting, briefly press **M** (D).

Note

- To store the setting together with your seat position settings, briefly press **M** (D) followed by the desired memory button (1, 2 or 3).
- The passenger side mirror will move to the preset view, the next time the shift lever is moved to **R** (C).
- The vehicle's memory also remembers whether the mirror DIP was activated or not.
- To recall all the stored settings, press either the memory button (1, 2 or 3) or push on your personal identity key. See Memory settings for different drivers on page 38 and Personal identity keys on page 18.

Heated mirrors

If the vehicle is equipped with heated rear view mirrors, the heating is switched on automatically when the rear window demister is switched on.

Interior mirrors

Rear view mirror

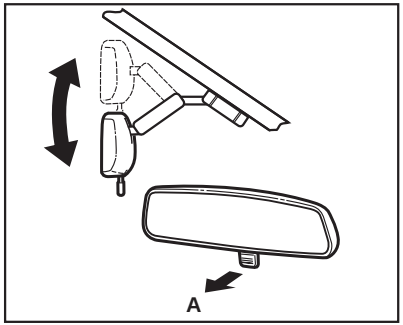

Push the lever (A) on the lower edge of the mirror towards the front of the vehicle, then adjust the position of the mirror.

To reduce headlamp glare from following vehicles, pull the lever (A) towards the rear of the vehicle.

Note
The rear view clarity is reduced when the mirror is set to the anti-glare position.

Return the lever back to its original position as soon as the glare has disappeared.

Sun visor mirrors

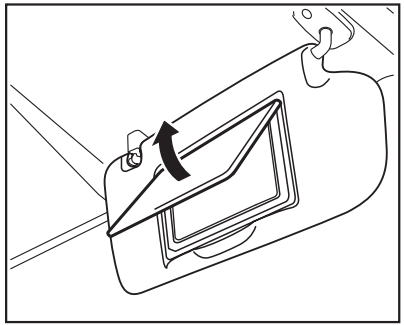

To view the mirror, pull the cover up from the lower edge.

If the vehicle has illuminated lamps, they turn on and off when the cover is opened and closed.

Windows

Power windows

⚠Warning

Before operating the power windows, check they are free of obstructions and that passengers and pets are not in the proximity of the moving window.

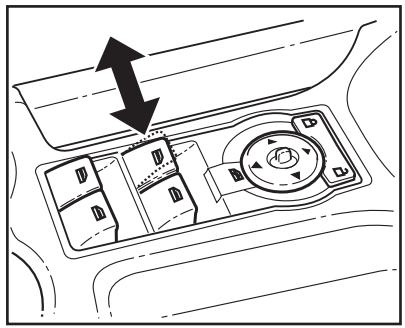

The power window switches are located between the front seats.

Push and hold or pull and hold the required button, to raise or lower a window.

The window stops moving up as soon as the button is released.

The power windows can be operated:

- When the ignition is turned on.
- When on the key is pressed from inside the vehicle. The windows can be operated for 10 minutes, provided no door is opened.
- If any door is opened within 45 seconds from the ignition key being turned to the lock position, the windows remain operational for 45 seconds.

The power windows are disabled when:

- Any door is opened after 45 seconds, from the ignition key being turned to the lock position.

Front windows

Auto down

- Press and hold the switch down for at least half a second, then release.
- Press down again or pull up the switch to interrupt the automatic operation.
- Rock the button to open the window in short steps.

Auto up

The vehicle may have an auto up function.

- Pull and hold the switch up for at least half a second, then release.
- Press down or pull up the switch again to interrupt the automatic operation.
- Rock the button to close the window in short steps.

Note
If the window encounters any resistance during closing, it will stop immediately and open again.

Rear windows

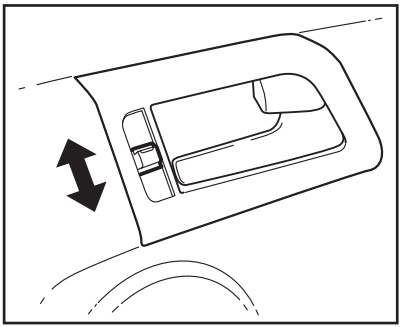

The rear windows can also be operated by switches located on the rear doors.

Child safety switch

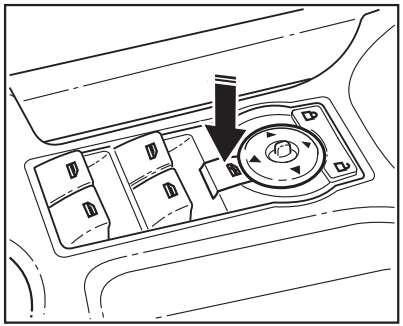

Press the rear child safety switch to activate/deactivate the rear door switches.

Assist grips

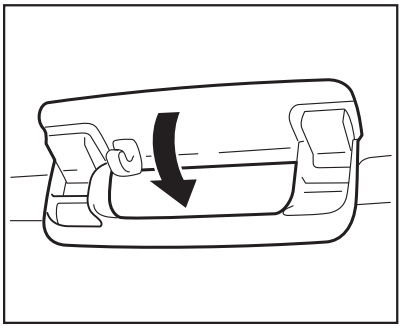

Assist grips are provided above the doors.

When released, they fold up against the roof.

⚠Warning

Do not hold onto assist grips while seated in the vehicle.

Use the hooks above the doors only to hang up lightweight articles of clothing.

Do not place any objects in the pockets of hanging items.

Roof

Sunroof

The vehicle may have a sunroof.

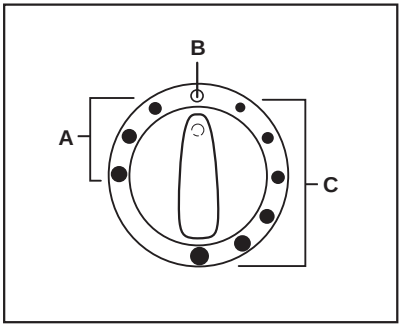

The sunroof:

- Switch is located in the roof between the sun visors
- Can be tilted or slid back into the roof
- Will operate with the ignition in the accessories or on position

Opening the sunroof

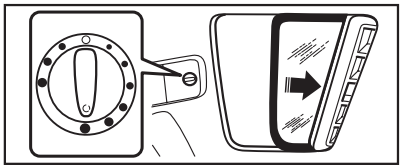

- Turn the switch clockwise to one of the six opening positions (C).
- The sunroof drags the sunshade open as it slides open. It does not close the sunshade.

Tilting the sunroof

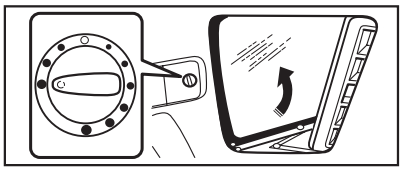

Turn the switch anticlockwise to one of the three tilt positions (A).

Closing the sunroof

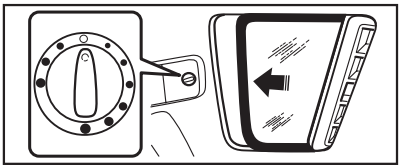

Turn the switch to the closed position (B).

Obstruction detection

If the sunroof:

- Detects an obstruction when closing from the sliding position, it immediately returns to the full open slide position.
- Detects an obstruction when closing from the tilt position, it immediately returns to the full open tilt position.

The sunroof will not move again until the switch is pressed upwards or a different position is selected.

Note

- Obstruction detection is also active when the sunroof is moving from one level of tilt or slide opening to the next, in the closing direction.
- If an obstruction is detected during an auto-close operation, the sunroof returns to the full open or tilted position and switches off.

Caution
Obstruction detection only operates when the sunroof is closing. Before opening the sunroof, ensure that there are no obstructions, e.g. a roof rack.

Auto-close function

When the ignition is turned off, the sunroof closes automatically after 3 seconds.

When turning the ignition on with the switch in one of the open or tilt positions, the sunroof will not return to the position automatically.

To return it to the position set, press the switch upwards.

To stop auto-closing, do one of the following at any time after turning the ignition off:

- Press the switch.
- Turn the switch to a different position.

Recall function

Use the recall function if the sunroof position is not the same as the position set on the switch.

It can be activated if one of the following has occurred:

- The switch was rotated to the position while the sunroof was switched off.
- The obstruction detection function has reversed the sunroof to the fully open slide or tilt position.

Press the switch upwards and the sunroof will move to the position set on the switch.

Do not press the switch for more than 5 seconds.

⚠Warning

Keep hands and fingers clear of the sunroof tilting mechanism when operating it. The scissor action of the parts when moving may cause serious personal injury and/or may dismember fingers.

⚠Warning

Fitting an aftermarket sunroof may void the warranty on your vehicle and could result in injury to the vehicle occupants in the event of an accident.

Cleaning and maintenance

Caution

The tinted glass panel on the sunroof is heat and UV resistant. Ensure that due care is taken and that the directions below are followed when cleaning.

Regularly clean the glass, flocked seal and roof flanges with a moist, soft cloth.

Seats, restraints

Head restraints 34
Front seats 35
Rear seats 39
Seat belts 40
Airbag system 43
Child restraints 49

Head restraints

⚠Warning

This safety feature is not intended to rest the head upon. It is solely for the reduction of whiplash neck movement in an accident involving your vehicle.

The centre of the head restraint should be at eye level, never at neck level.

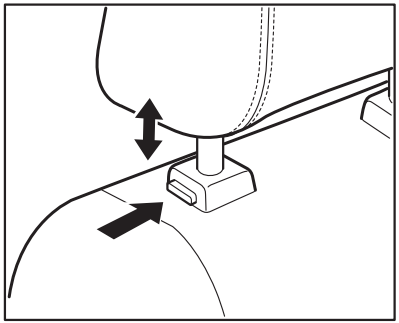

Lift the head restraint up to raise it.

Push the locking button and push the head restraint down to lower it.

Front head restraints cannot be removed.

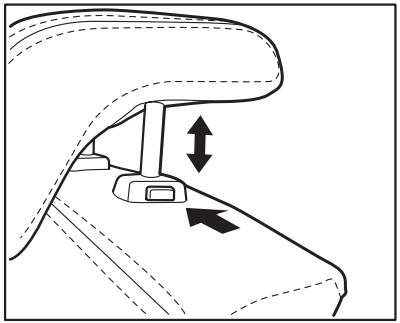

The vehicle may have adjustable rear head restraints, these can be removed. See Child restraints on page 49.

Front seats

Seat position

⚠Warning

To avoid reducing the effectiveness of seat belts, seatbacks should only be upright or at most semi-reclined when the vehicle is moving.

⚠Warning

Do not fit unauthorised seat covers, unauthorised seat covers may impair the operation of the side impact airbags (SIAB).

Always sit centrally in the seat.

Do not place any object between the seat and the door. See Airbag system on page 43.

Power seat adjustment

⚠Warning

Do not adjust the driver's seat when the vehicle is moving as the seat could move suddenly causing the driver to lose control.

⚠Warning

Before moving the seat ensure that the path both in front of and behind the seat is clear of obstructions.

Seat adjustment

The vehicle may have the following levers and switches for seat adjustment.

Forwards/backwards (Type A)

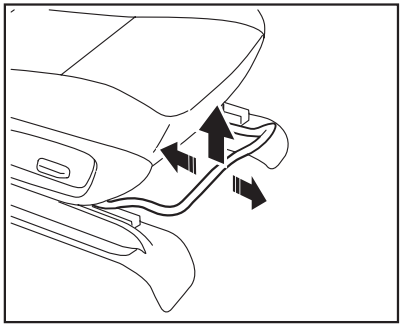

Move the seat forwards or backwards by lifting the bar at the front and sliding the seat.

Release the bar to re-engage the latch.

Recline (Type A)

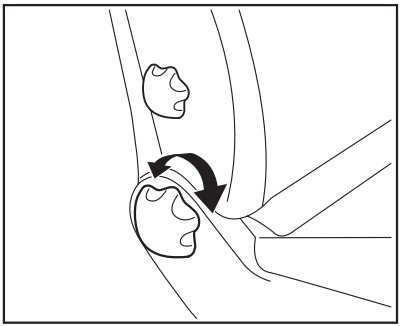

Recline the seatback by rotating the lower hand wheel.

Lumbar

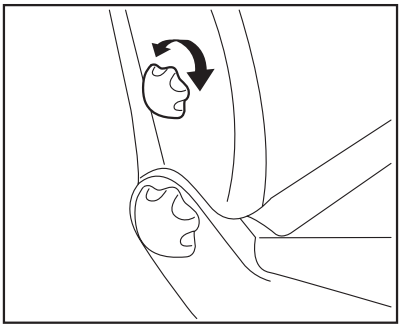

Adjust the lumbar support by rotating the upper hand wheel.

Up/down

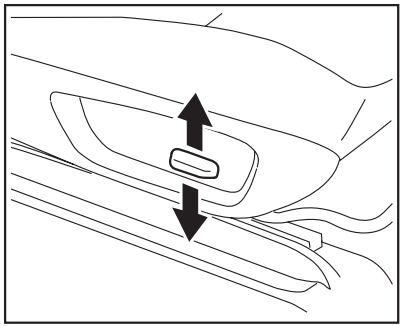

Raise or lower the seat by moving the horizontal switch up or down.

Tilt

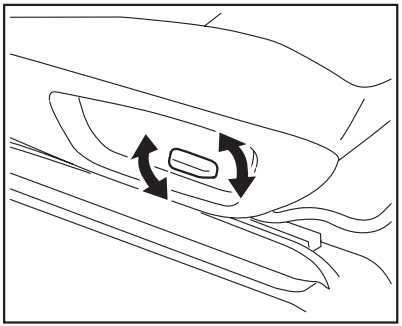

Tilt the seat up at the front by tilting the front of the horizontal switch up.

Tilt the seat down at the back by tilting the back of the horizontal switch down.

Forwards/backwards (Type B)

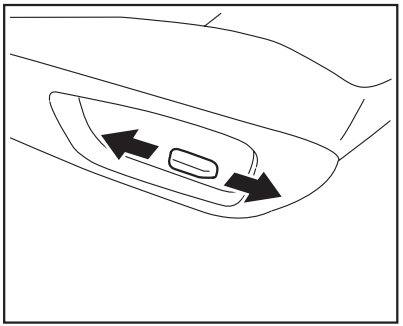

Move the seat forwards or backwards by moving the horizontal switch forwards or backwards.

Recline (Type B)

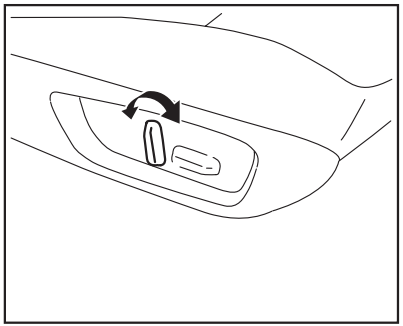

Adjust the seatback by tilting the vertical switch forwards or backwards.

Memory settings for different drivers

The vehicle may have seat and mirror position memory.

Up to three different settings may be stored.

⚠Warning

Before moving the seat ensure that the path both in front of and behind the seat is clear of obstructions.

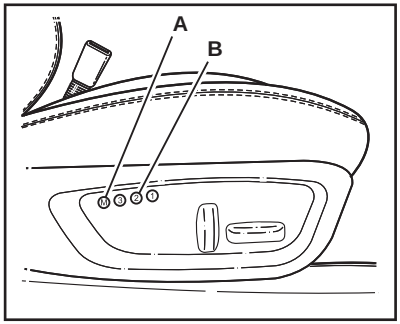

To store a setting:

1. Adjust the driver's seat by using the switches. See Power seat adjustment on page 35.
2. Adjust the external mirrors. See Power mirrors on page 27.
3. Adjust the passenger mirror DIP settings. See Curb view assist mirrors on page 27.
4. Turn the ignition on.
5. Move the shift lever to **P** or **N**.
6. Press **M** (A) and a chime will sound.

7. Within 5 seconds, press and hold the desired memory button **1**, **2** or **3** (B). Two chimes will sound.
8. Move the shift lever to **R**. This will move the passenger mirror to the DIP position and store this setting.

To recall a setting, press the desired memory button **1**, **2** or **3** (B) and hold until the seat is in position.

Note
Releasing the button will halt seat movement.

Using personal identity keys

The vehicle may have personal identity keys.

When is pressed the seat will move to the last position used for that key. See Personal identity keys on page 18.

Rear seats

⚠Warning

Do not press the release button on the top of the seatback while the vehicle is moving. This could cause damage or injuries to the occupants.

Do not allow passengers to sit on the folded seatbacks while the vehicle is in motion. Unrestrained luggage or passengers on a folded seatback could be thrown within or ejected from the vehicle in a sudden stop or accident.

Caution

Do not trap the seat belt when returning the seatback or seat section to the upright position.

Sedan

The middle section opens forward to give access the boot area or to carry long loads.

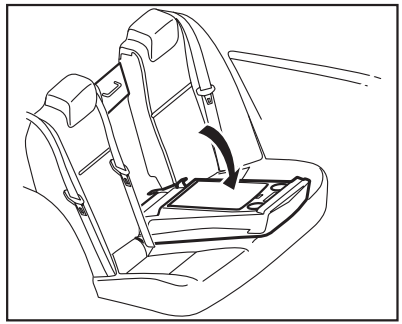

1. Press the lock button at the top centre of the middle seat.
2. Push the middle section back into place to close.
3. Ensure the lock button is fully engaged.

If the latch is not fully engaged a red warning colour will be visible around the button.

Sportwagon

The rear seatback is divided into two sections, either or both may be folded down.

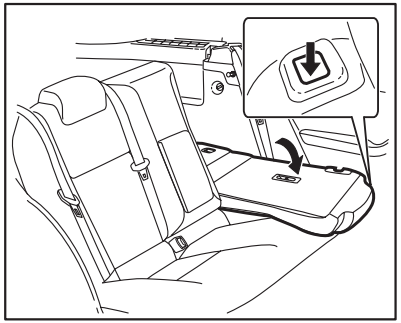

1. Press the lock button near the head restraint to fold down.
2. Fold back to return to the upright position.

Note

Try to move the seatback to check the latch is engaged.

If the latch is not fully engaged a red warning colour will be visible around the button.

Rear armrest

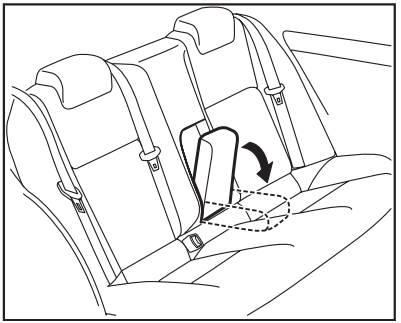

The vehicle may have a rear middle armrest.

- Pull the armrest down to use.
- Push the armrest up when it is no longer required.

Note

Ensure the armrest is folded up before folding the seatback forward.

Seat belts

How to wear seat belts properly

⚠Warning

Seat belts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders, as applicable; wearing the lap section of the belt across the abdominal area must be avoided.

Seat belts should be adjusted as firmly as possible, consistent with comfort, to provide the protection for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer.

Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid.

Belts should not be worn with straps twisted.

Each belt assembly must only be used by one occupant; it is dangerous to put a belt around a child being carried on the occupant's lap.

No modifications or additions should be made by the user which will either prevent the seat belt adjusting devices from operating to remove slack, or prevent the seat belt assembly from being adjusted to remove slack.

Three point belt

Fitting

The belt should not be twisted. It should lie flat and fit firmly across your hips.

1. Pull the metal tongue across your body.
2. Clip it into the buckle.
3. When the metal tongue is locked safely into place you will hear a click.
4. Give a gentle pull on the buckle to ensure full engagement.
5. Settle the belt at the hip.
6. Run your hand under the sash from hip to shoulder.

The belt should fit comfortably. Any extra belt length retracts automatically.

Note

For your safety, wear the lap section of the seat belt as low as possible on your hips, not on your waist or abdomen.

The Emergency-locking Retractor Belt allows you to move while the vehicle is travelling normally, but locks immediately on fast braking, impact with a solid object or any quick movement by the wearer.

Removing

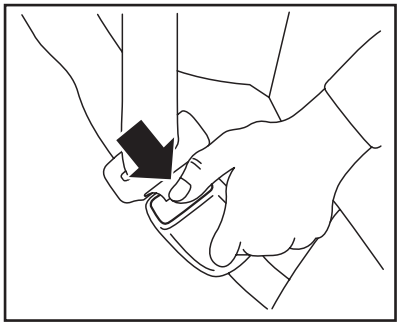

1. Press the release button on the buckle.
2. Allow the belt to retract.
3. Check that it fully retracts without twisting or turning.

Shoulder height adjust

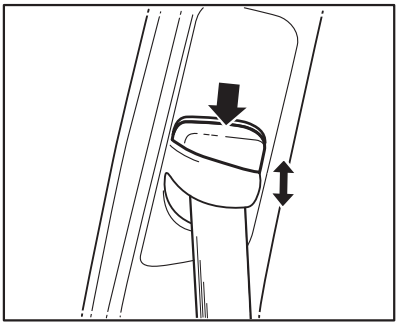

The vehicle may have seat belt shoulder height adjustment.

Adjust the position of the seat belt anchor to suit the height of the wearer.

1. Press and hold the button.
2. Move up or down as required.
3. Release the button.
4. Ensure that the anchor clicks into position.

⚠Warning

For your safety, do not adjust the seat belt shoulder height while driving.

Seat belt use during pregnancy

Seat belts work for everyone, including pregnant women. Like all occupants, they are more likely to be seriously injured if they do not wear a seat belt.

A pregnant woman should wear a three point belt with the lap portion of the belt worn as low as possible below the rounding of their stomach, throughout the pregnancy.

Seat belt care

⚠Warning

Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water. The belt should be replaced if webbing becomes frayed, contaminated or damaged.

Replacing seat belts after a crash

⚠Warning

It is essential to replace the entire assembly after it has been worn in a severe impact even if damage to the assembly is not obvious.

Airbag system

Airbags and child restraints

⚠Warning

WARNING – EXTREME HAZARD

Do not use a rearward facing child restraint on a seat protected by an airbag in front of it.

The child could be seriously injured if the airbag inflates, as the child's head would be very close to the inflating airbag.

Remember that it is safest for children to be seated in the rear seats. See Child restraints on page 49.

⚠Warning

Airbags are part of the supplemental restraint system (SRS) as they assist, but do not replace seat belts. Airbags do not deploy in every accident. Various factors dictate whether they deploy including speed, angle of collision and object hit. Airbags are not designed to inflate if the vehicle is hit from the rear or is involved in a rollover. Seat belts must be worn by all passengers whenever the vehicle is moving.

Airbags inflate with great force. If you are too close to an inflating airbag it may cause injury.
Seat belts help keep you in position for airbag inflation in the event of a collision.

Front airbag system

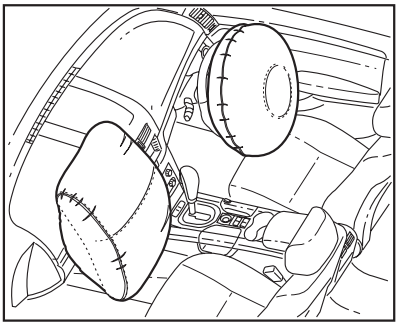

The airbag system consists of one airbag in the steering wheel, and one in the dashboard on the passenger side. These are identified by the word **AIRBAG**.

⚠Warning

The horn pad must not be covered with adhesive or any other material.

The driver should adjust the seat as far rearward as possible while still maintaining control of the vehicle.

The wording **AIRBAG** above the glove box and a label attached under the sun visor indicate that a passenger airbag is fitted.

⚠Warning

Do not place any objects on or over the dashboard or between an airbag and yourself.

Do not hang anything from the sun visor or mirror.

Passengers must not rest their feet on the dashboard.

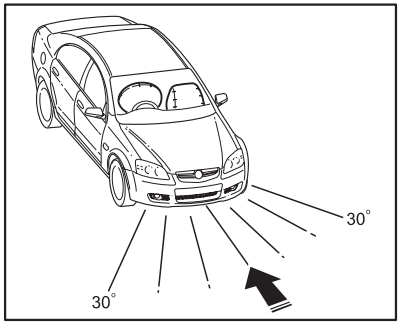

Front airbags will inflate in certain severe frontal or near frontal impacts. Front airbags are not designed to inflate if the vehicle is struck from the side, rear or, in rollovers. Always wear a seat belt.

Side impact airbags (SIAB)

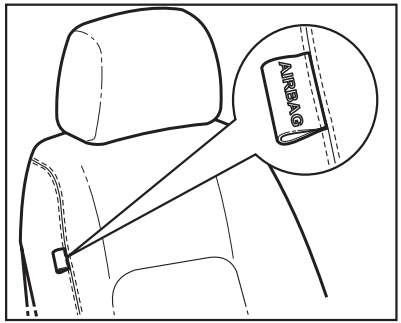

SIAB are stored in the sides of the front seats, the side closest to the door.

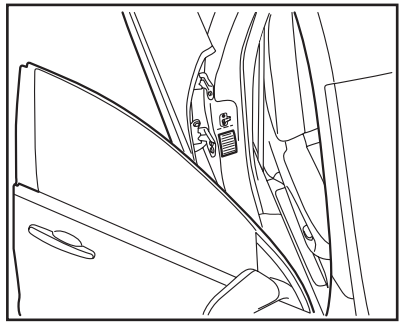

SIAB are identified by labels with the words **AIRBAG** on the seatback and **FRONT SEAT SIDE IMPACT AIRBAGS** on the door pillar.

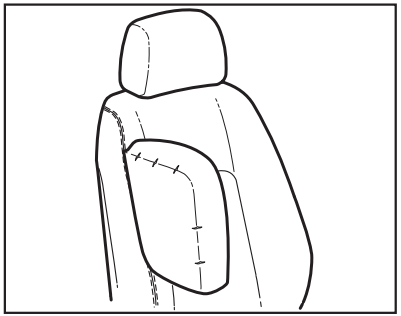

Note
SIAB deploy in most, but not all, severe side impacts.

Because there is limited time available to detect some side impacts, it is not possible to deploy the SIAB in all serious accidents.

A SIAB will deploy in certain severe side impacts. SIAB are not designed to inflate if the vehicle is struck from the front, rear, or in rollovers. Always wear a seat belt.

⚠Warning

Do not fit unauthorised seat covers as they may impair the deployment of the Side Impact Airbags (SIAB).

Do not position your body or any object (including pillows) between front seats and doors.

Do not lean on, or sleep against, the door. Always sit centrally in the seat.

Always wear a seat belt.

Curtain airbag system

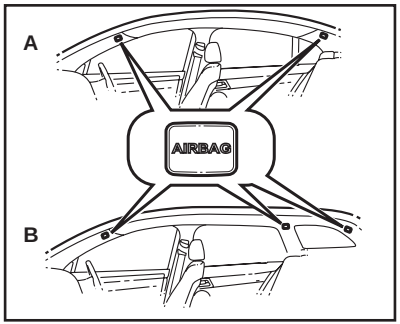

Curtain airbag labels are on the vehicle in the positions shown for Sedan (A) and Sportwagon (B).

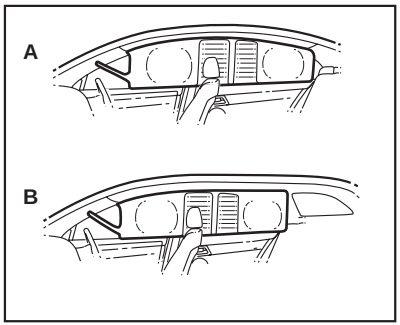

Note

Curtain airbags deploy in most, but not all, severe side impacts.

Because there is limited time available to detect some side impacts, it is not possible to deploy the curtain airbags in all serious accidents.

Curtain airbags are not designed to inflate if the vehicle is struck from the front, rear, or in rollovers. Always wear a seat belt.

⚠Warning

Do not position your body or any object (including pillows) in the area in which the airbag inflates.

There must be no objects in the area in which the airbag inflates. Refer to the illustration.

Use the hooks above the doors only to hang up light articles of clothing.

Do not place any objects in the pockets of the hanging items.

Do not hold onto the assist grips (above the doors) while seated in the vehicle.

Do not lean on, or sleep against the front or rear doors. Always sit centrally in the seat.

Always wear a seat belt.

What will you see after an airbag inflates?

Airbags inflate and deflate within milliseconds.

Fifteen seconds after any airbag or seat belt pretensioner has been activated (the vehicle has stopped and provided there is battery power), the vehicle will:

- Switch off the engine.
- Switch off the fuel pump.
- Switch on the hazard lamps.
- Switch on the interior lamp.
- Unlock the doors.

Switch the ignition off and then on if restarting the engine is required.

Notices for customer installed equipment

⚠Warning

Fitting other types of roo/ nudge bars may affect crash performance, airbag performance and engine cooling. See Fitting roo/nudge bars on page 249.

SRS check

The on the instrument panel illuminates for a few seconds when the ignition is turned on. This indicates the SRS is operational.

Contact a Holden Dealer immediately:

- If does not illuminate when the ignition is turned on.
- If illuminates when driving.
- If the warning **Airbag Fault** is displayed on the instrument panel.

The SRS may not function correctly in the event of an accident. See Airbag and belt tensioners on page 77.

Replacing SRS parts after a crash

Note

After an accident where the SRS has deployed, the systems, associated parts and hardware must be checked and replaced as required.

Seats, associated parts and hardware must also be checked and replaced as required.

The SRS should also be inspected after an accident if:

- The dashboard area or steering wheel is scratched, cracked or damaged.
- The front seats and upholstery are damaged.
- The headliner or trim panels are damaged.

It is recommended that this work be carried out by a Holden Dealer or approved repairer.

Seat belt pretensioners

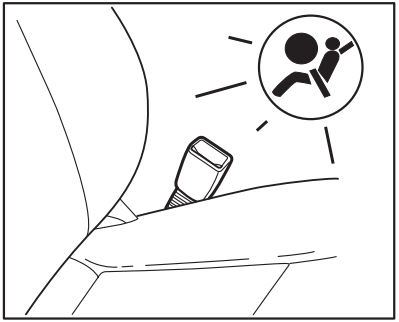

Front seat belt pretensioners are part of the SRS. In certain severe collisions the seat belts are tightened by the seat belt pretensioners.

Child restraints

⚠Warning

WARNING – EXTREME HAZARD

Do not use a rearward facing child restraint on a seat protected by an airbag in front of it.

The child could be seriously injured if the airbag inflates, as the child's head would be very close to the inflating airbag.

Remember that it is safest for children to be seated in the rear seats.

⚠Warning

This manual provides you with general information concerning child restraints only.

The driver is required by law to ensure that passengers are suitably restrained. In most States and Territories of Australia and New Zealand, specific laws may exist which require children to be seated in approved child restraints.

Holden strongly recommends that you refer to your specific State or Territory regulations to determine which child restraint is suitable for your child.

⚠Warning

Always ensure that the seat belt fits firmly around the child restraint.

If a child cannot see out of the window, do not raise him/her by means of an ordinary cushion. It will not stay in place in a collision and the child can slip out of the straps and become entangled.

Note

Fitting some child seats may require removal of the rear head restraint(s).

1. Raise the head restraint fully.
2. Insert a small probe into the hole on the non adjusting pole guide.
3. Press the probe inwards.
4. Simultaneously, press the release button.
5. Lift the head restraint up and out.
6. Store the head restraint in a safe location.

Reinstall the head restraint when the child seat is no longer fitted.

⚠Warning

Always follow the child restraint manufacturer's fitting instructions when installing a child restraint into the vehicle.

Note

Refer to the relevant legislation, an approved child restraint fitting station or capsule manufacturer's information for the recommended type of child restraint to use.

Infants

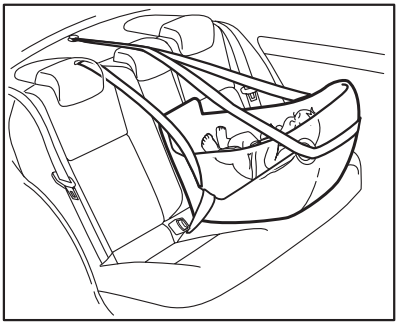

Rearward facing infant capsules are designed so that in the event of a collision, impact forces will be evenly spread over the baby's back, with minimal jarring to the vulnerable head and neck area.

Young children

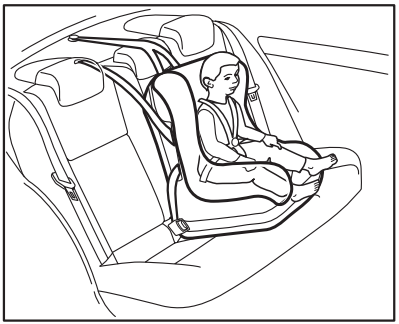

Forward facing child seats are for use when the child is able to sit and easily hold their head upright.

Booster seats

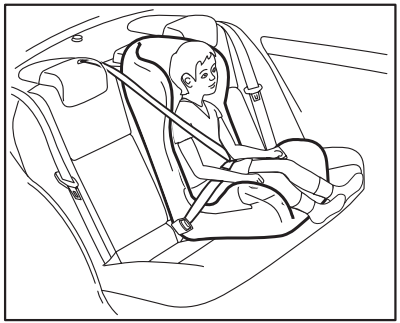

Booster seats are for when children outgrow a typical forward facing child seat, but are still too small for three point seat belts.

Older children

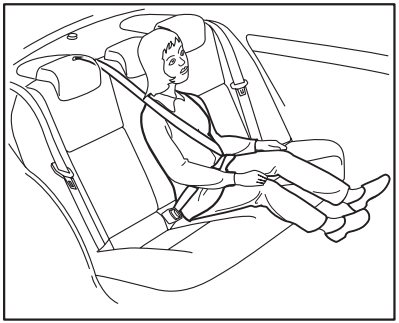

A child should use a normal three point seat belt only when:

- They can sit against the back of the rear seat with knees bent comfortably at the edge of the seat.
- The lap belt rests low and snug across the hips, not across the stomach.
- The sash belt is centred on the shoulder and chest.
- They are able to stay seated like this for the entire trip.

Where to put the restraint

⚠Warning

Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts, harnesses, or for attaching other items or equipment to the vehicle.

Only child restraints that have clips to attach to the vehicle's anchorage fitting (as shown in the following illustrations) are to be used. Earlier types of child restraints may not attach securely to this type of anchor.

Use only Standards Australia and New Zealand approved child restraints and harnesses. Only purchase a child restraint which carries the appropriate Standards Australia sticker of approval.

Where legally allowable, you may install a forward-facing child restraint in the front seat, but always move the passengers seat as far back as it will go. The forward facing child restraint must still be attached to the passenger side child restraint anchorage point, located behind the rear seat.

Remember, it is safest for children to be seated in the rear seat.

Note
If unsure about installing a child restraint anchor fitting, please contact an approved restraint fitting station or a Holden Dealer.

Child restraint installation locations

Sedan anchorage points

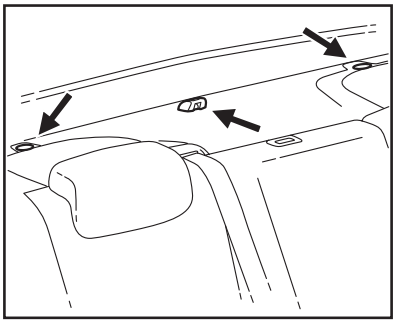

Using sedan outer anchorage points

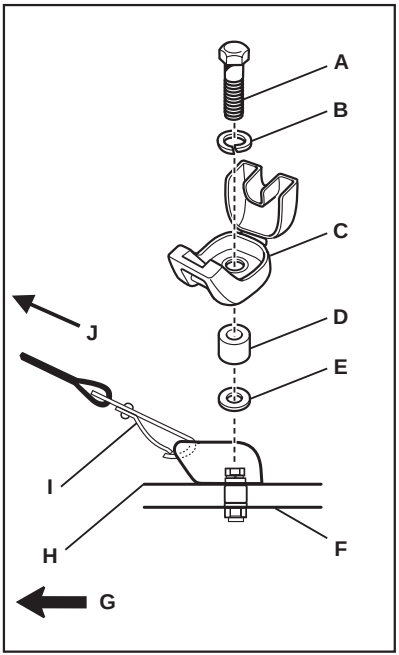

A. 30 mm long bolt

B. Lock washer
C. Anchor fitting
D. 10 mm spacer
E. Paper assembly washer
F. Metal parcel shelf
G. Front of vehicle
H. Parcel shelf trim
I. Attaching clip
J. Direction of child restraint

Holden child restraint fitting

1. Unscrew the cover plug.
2. Install the bolt (A), lock washer (B), anchor fitting (C), spacer (D) and paper washer (E).
3. Tighten the bolt to 20 ± 5 Nm (Newton meters).

Generic child restraint anchor fitting

Unscrew the cover plug.

Some generic fittings come with a selection of spacers.

A 10 mm spacer is required.

Sportwagon anchorage points

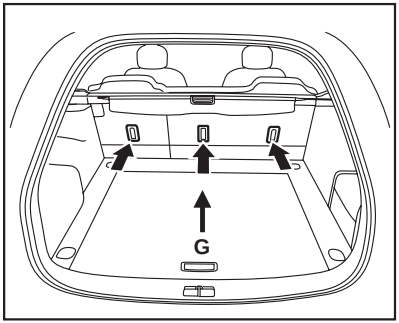

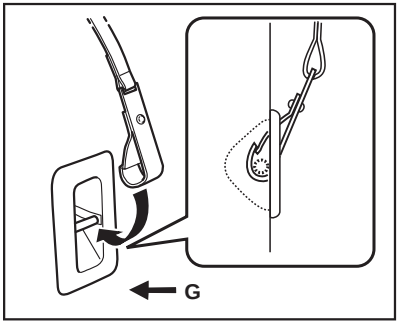

G. Front of vehicle

Storage

Storage compartments 54
Additional storage features 57
Roof rack system 66
Loading information 66

Storage compartments

Glove box

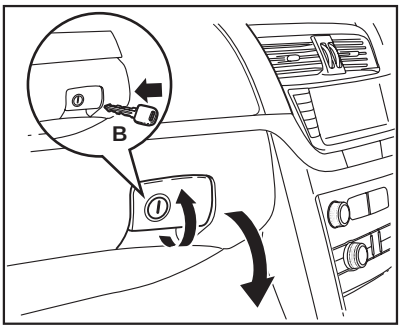

The glove box is located in the dashboard, in front of the passenger's seat.

To open, pull the handle towards you. To close, push the lid firmly back into place.

A glove box key is provided for locking. See Glove box key on page 18.

Cup holders

Cup holders are designed for holding standard size soft drink cans, small size bottles and cups with lids.

⚠Warning

To avoid scalding, never place hot drinks in the cup holders.

Front cup holders

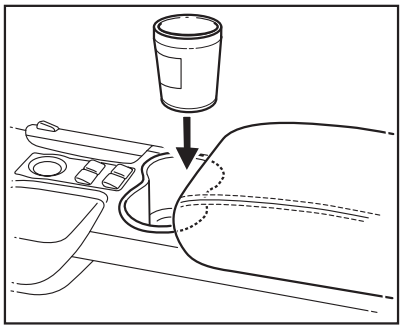

The front cup holders are located forward of the centre console.

The rubber cup holder lining can be removed for cleaning.

Rear cup holders (Sedan)

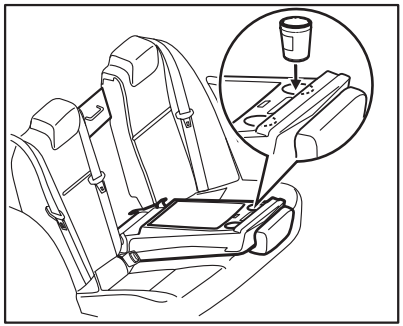

Cup holders are located in the front of the folded down section in the centre of the rear seat.

Rear cup holders (Sportwagon)

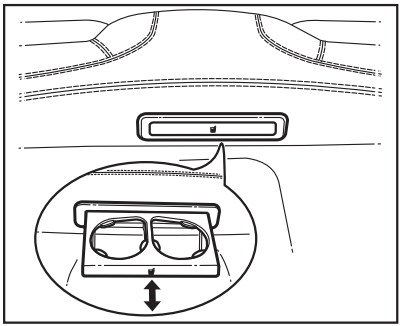

The vehicle may have cup holders located in front of the centre seat.

To open, push in the front of the cover and release it.

To close, slide the cup holder back into the seat until the latch engages.

Front storage

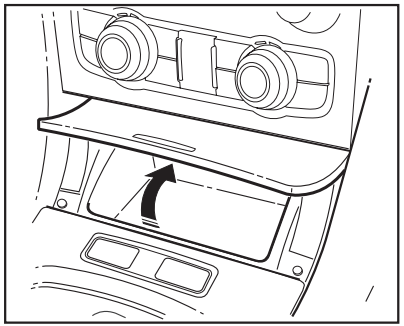

The front storage compartment is located below the heating controls on the dashboard.

If the compartment has a lid, open by pushing in at the base and releasing it.

To close, move the lid back to its original position and press in at the base to engage the latch.

If the compartment has an inner liner, it can be removed for cleaning.

Sunglasses storage

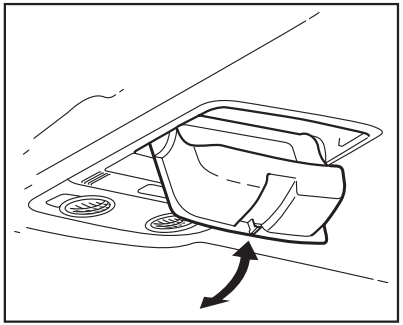

The vehicle may have a sunglasses holder.

It is located in the roof and is designed to accommodate one pair of sunglasses.

To open, push in the rear of the lid and release it.

To close, move the holder back to its original position and press in the rear of the lid to engage the latch.

Centre console

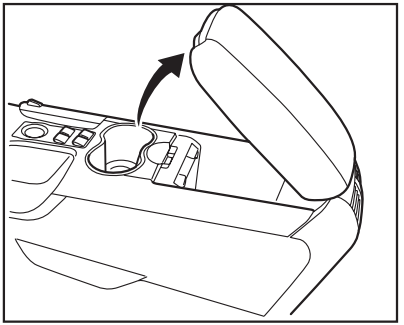

A storage area is located under the front armrest.

To open, lift the latch on the underside of the front lip. Do not force the lid backwards.

There is a coin holder towards the front of the console.

The console provides space to accommodate a standard mobile telephone/charger, which can be plugged into the power socket located inside the console. See Power outlets on page 73.

Rear storage

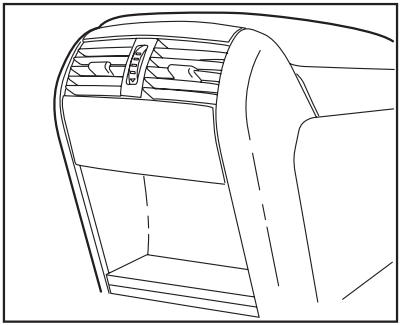

The rear storage compartment is located at the rear of the centre console.

Seatback pockets

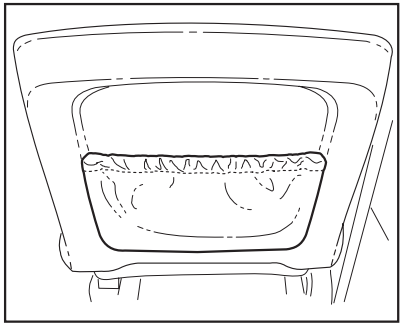

The storage pockets are on the rear of the front seats.

Cargo area (Sportwagon)

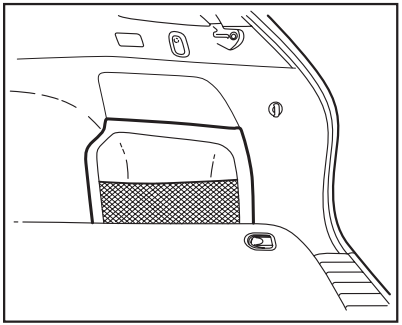

A storage compartment is located on the driver side of the cargo area.

Use for the storage of lightweight items, not exceeding 2 kg in total e.g. street directories, folders, maps.

Do not use to store heavy and/or sharp objects e.g. loose tools.

Additional storage features

Convenience/cargo net

⚠Warning

Avoid eye injury. Do not overstretch. Always keep face and body out of recoil path.

Do not use when there are visible signs of wear or damage.

The maximum load for the convenience net is 15 kg single mass. That is, if an object weighs 15 kg, only one object can be held by the convenience net.

Never use the convenience net when the rear seat is folded down (Sportwagon).

These nets are only intended to keep light objects tidy, not for the anchoring of loads.

Do not use the convenience net external to the vehicle.

Load size should never be higher than the back seats (Sportwagon). The driver's rear vision should never be impaired by the load.

Always make sure the load is secure and will not move during heavy braking or a collision.

Unsecured loads increase the risk of injury during heavy braking, sudden avoidance manoeuvres or a collision.

Make sure the back seat is locked in the upright position whenever carrying heavy loads (Sportwagon). This is a basic requirement for protection against load displacement in the event of sudden braking or a collision. The rear seat in the upright position provides greater protection against load displacement.

Convenience net (Sedan)

Your vehicle may have a convenience net located inside the boot, to secure lightweight items.

Four hooks are located on the vehicle and six loops are located on the convenience net.

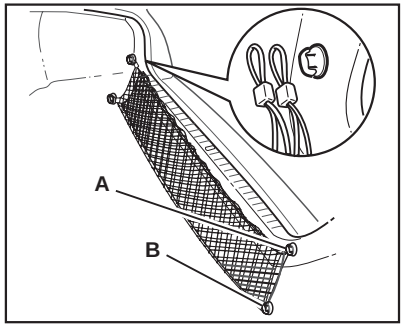

Attach four corner loops (A) to the top two hooks on the vehicle (two loops on one side, two loops on the other) and attach the two centre loops (B) to the bottom hooks on the vehicle.

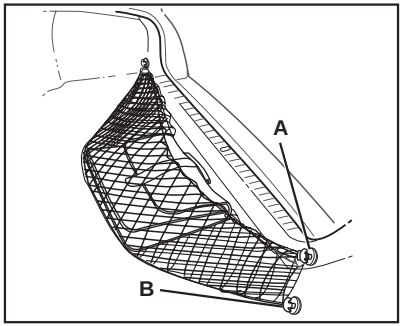

The net can be opened and objects placed inside.

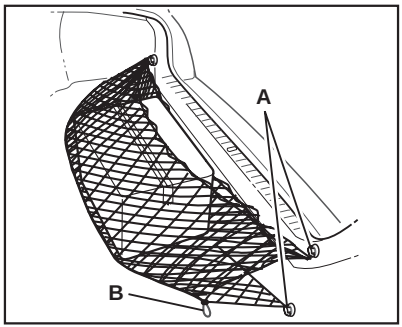

For larger objects place a corner loop (A) on each hook.

Cargo net (Sportwagon)

A cargo net is provided inside the cargo area to secure lightweight items.

Use the four hooks and the anchor point loops to attach the net, at the front, side or rear of the cargo area.

Do not use to hold items against the seat, tailgate or cargo area walls, only inside the net.

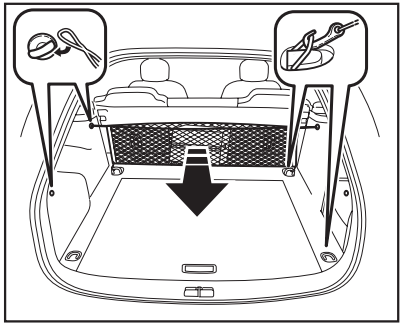

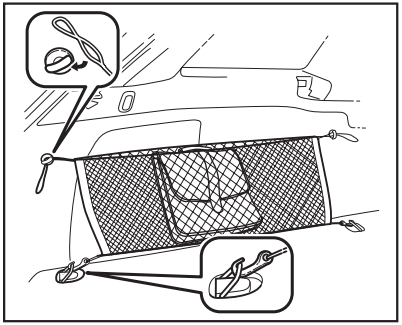

1. Ensure the rear seatbacks are in the upright position.
2. Attach the loops at the top of the net to the net hooks.
3. Attach the plastic hooks at the bottom of the net to the anchor point loops.

Cargo barrier (Sportwagon)

The vehicle may have a cargo barrier.

Carrying heavy loads

Holden recommends fitting a genuine Holden cargo barrier when carrying heavy loads in the vehicle. It is designed to reduce cargo impact to passengers in an accident.

⚠Danger

It is important that the emergency exit hammer is correctly fitted at all times.

There is danger of child entrapment when a cargo barrier is fitted. Heatstroke or death may occur if trapped in the vehicle. The emergency exit hammer is only intended to be used for an emergency exit through the rear window of the vehicle and for no other purpose. Do not leave children unattended in this vehicle.

When possible, place loads directly against the cargo barrier.

Secure the load with a restraint system.

If involved in an accident or accidentally damaged, the cargo barrier should be replaced and the anchorages inspected by an authorised Holden Dealer.

Passengers should not ride in the cargo area.

Take care when placing loads behind the cargo barrier so as to prevent damage to child restraint anchorages and seat belt webbing in an accident.

In an accident, cargo may cause the cargo barrier to deform toward passengers.

The rating label must not be removed from the cargo barrier.

Clean the cargo barrier only with mild soap and water. Do not use solvents or chemicals. Discard the cargo barrier if it becomes rusted. Do not store outside or expose to direct sunlight.

Do not obstruct seat belts or child restraints, or their operation.

Seat, seat belts or child restraint anchorages must not be used to secure the cargo barrier.

Long thin items of cargo should be placed lengthways across the vehicle to minimise the risk of penetration.

Do not attach (drill, rivet, stick and so forth) objects to the front or rear of the cargo barrier.

The maximum load for a genuine Holden cargo barrier is 60 kg single mass. That is, if an object weighs 60 kg, only one object is permitted behind the cargo barrier.

Do not use this cargo barrier in any other vehicle for which it is not designed.

Please refer to the Installation and user instructions, supplied for details regarding the fitment and usage of the cargo barrier.

When high tensile fasteners are used, the cargo barrier must be installed using the size and grade fasteners specified by the cargo barrier manufacturer.

Cargo barrier positions

The barrier can be placed behind the rear seats when they are upright or behind the front seats when the rear seats are folded down.

Behind rear seat position

⚠Warning

It is recommended to correctly anchor the load in the cargo area, even if the cargo barrier is in position.

1. Before placing the cargo barrier into the vehicle, rotate so the four attachment straps point rearward.

2. Ensure the long straps are folded back and tied away securely.
3. If the vehicle has a cargo blind, remove. See Cargo blind (Sportwagon) on page 64.
4. Tilt the top of the cargo barrier backward and lift into place.
5. Place the cargo barrier directly behind the rear seats.

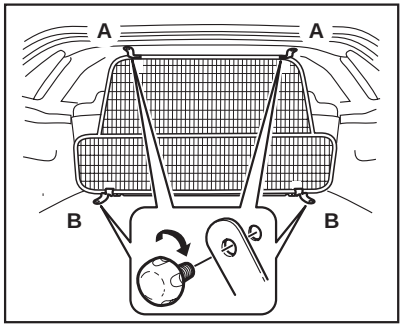

6. Align the top attachment straps with the roof attaching holes (A).

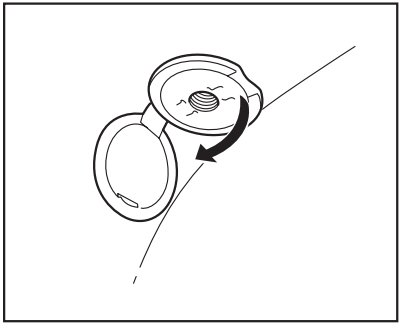

7. Flip open the upper attaching hole covers.
8. Insert the hand operated bolts into the holes (A) and turn clockwise.

   Do not tighten fully until all four bolts are fitted.
9. Align the short bottom straps so the strap holes align with the mounting nuts (B) in the floor.
10. Insert the bolts into the holes (B) and turn clockwise.
11. Firmly tighten all four bolts and check the tension.
12. Refit the cargo blind.

To move or remove the cargo barrier, reverse the above procedure.

Behind front seats position

⚠Warning

It is recommended to correctly anchor the load in the rear cargo area, even if the cargo barrier is in position.

1. Before placing the cargo barrier into the vehicle, rotate so the four attachment straps point rearward.
2. Ensure the short straps are folded back and tied away securely.
3. If the vehicle has a cargo blind, remove. See Cargo blind (Sportwagon) on page 64.
4. Fold the rear seat down. See Rear seats on page 39.
5. Tilt the top of the cargo barrier backward and lift into place.

6. Place the cargo barrier directly behind the front seats.

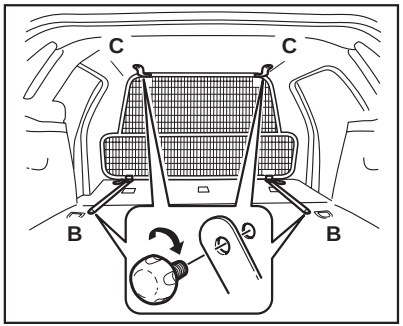

7. Align the top attachment straps with the roof attaching holes (C).

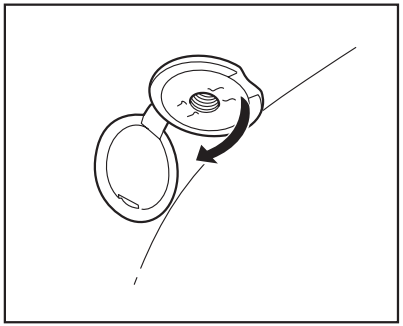

8. Flip open the upper attaching hole covers.
9. Insert the hand operated bolts into the holes (C) and turn clockwise.

   Do not tighten fully until all four bolts are fitted.
10. Slide the plastic sleeves on the long straps outward to release.
11. Pivot the long straps rearward so the strap holes align with the mounting nuts (B) in the floor.
12. Insert the bolts into the holes (B) and turn clockwise.
13. Firmly tighten all four bolts and check the tension.
14. Refit the cargo blind.

To move or remove the cargo barrier, reverse the above procedure.

Emergency exit hammer

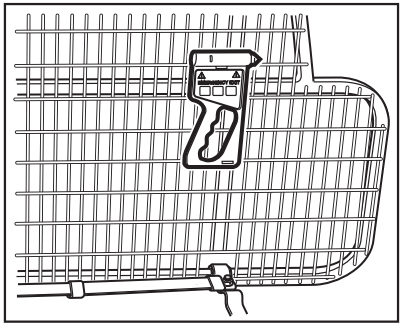

An emergency exit hammer is provided on the cargo barrier for emergency exit from the rear window only.

Install in the location shown at all times.

Load anchors (Sportwagon)

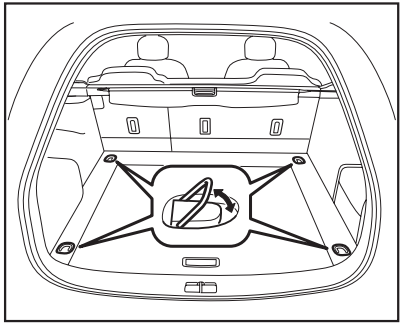

Four fold down load anchors are provided in the cargo area.

Use these to secure heavy items.

To use the anchor points:

1. Fold the metal loops to the vertical position.
2. Place the cargo centrally between the four anchor points.
3. Use only approved tie-down straps to secure cargo.
4. Fold the metal loops down flat when not in use.

⚠Warning

Always make sure the load is secure and will not move during heavy braking or a collision.

Unsecured loads increase the risk of injury during heavy braking, sudden avoidance manoeuvres or a collision.

Use only approved tie-down straps and convenience net to secure your loads. Do not use elasticised straps.

Never attach more than one tie-down strap to any single tie-down anchor.

Protect the tie-down straps from sharp edges of the load. Replace them if they begin to wear.

Make sure the back seat is locked in the upright position whenever carrying heavy loads. This is a basic requirement for protection against load displacement in the event of sudden braking or a collision.

The rear seat in the upright position provides greater protection against load displacement.

The driving characteristics of the vehicle can be affected because the centre of gravity is altered when there is a load in the cargo area. Match your speed and driving style according to how the vehicle is loaded.

Make sure that the rear axle load of the vehicle is not exceeded. See Axle loads on page 325.

The maximum load for the tie-down system is 80 kg single mass when used in conjunction with the Holden approved straps. That is, if an object weighs 80 kg, only one object can be held by the tie-down system.

Do not use when there are visible signs of wear or damage.

Place loads as low down and as far forward in the cargo area as possible. That is, against the back seat or cargo barrier if equipped.

Cargo blind (Sportwagon)

The vehicle may have a cargo blind.

Use the cargo blind to provide protection from the sun and added security for items stored beneath.

⚠Warning

Do not place any items on top of the cargo blind.

Do not allow any items underneath to contact the cargo blind.

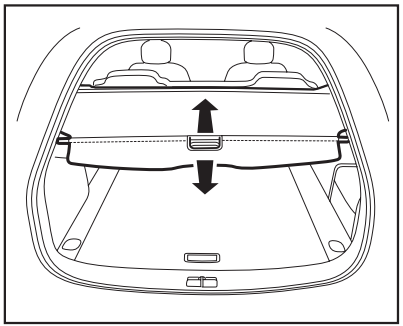

To extend the cargo blind:

1. Use the handle to pull the blind rearward.
2. Engage the blind into the latches on either side.

To retract the blind:

1. Use the handle to pull the blind rearward slightly.
2. Allow the blind to move down out of the latches.
3. Gently roll the blind up while holding the handle.

While the blind is extended, the rear of the blind can be lifted up.

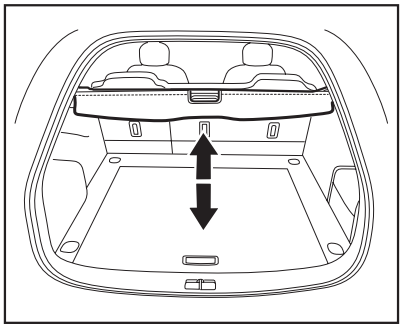

To lift up the rear of the blind:

1. Use the handle to twist the rear of the blind downwards until it disengages from the latches.
2. Release the handle and the blind will automatically lift up.

To pull down the rear of the blind:

1. Use the handle to pull the blind downward into the latch.
2. Ensure the blind engages into the latch by twisting the handle upwards.

To remove the cargo blind:

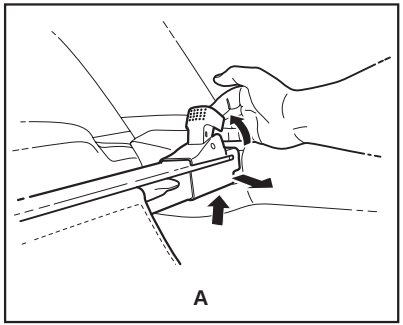

1. On the driver side (A), lift the lock lever upward.
2. While holding the lever up, lift the blind up and out of its recess.

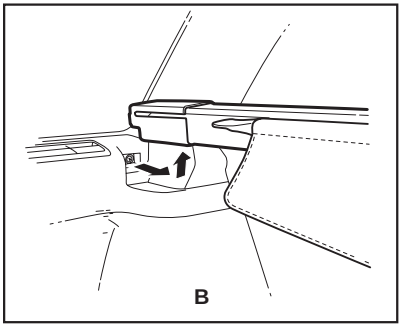

3. On the passenger side (B), move the blind slightly to the driver side and lift upward.
4. Re-fit the blind in the reverse order ensuring the blind locks into place.

Shopping bag hooks (Sportwagon)

Shopping bag hooks are provided on either side of the cargo area.

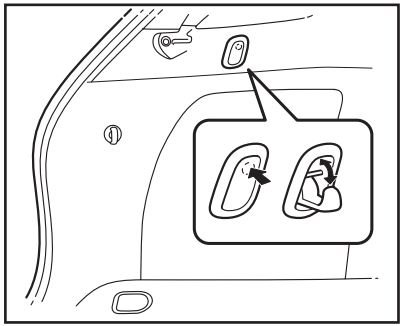

1. To fold the hook out, push in at the top and release it.
2. To fold the hook in, move it back to its original position.
3. Push in at the top until it clicks.

Roof rack system

Roof rack

- Distribute the load evenly and secure tightly with straps.
- When carrying loads on the roof rack, avoid hard braking, abrupt swerving or sharp steering.

  Roof rack loads alter the handling of a vehicle.

⚠Warning

The load, including the weight of the roof rack, must not exceed 75 kg. Distribute the load evenly.

Note
The weight of the roof rack and its load must be included when calculating the total load.

Loading information

Heavy accessories

- Place heavy objects in the boot (Sedan) as far forward as possible.
- Ensure that all cargo is lower than the rear seat backrests (Sportwagon). Place heavier objects at the bottom.

  Movement of heavy objects in the boot/cargo area may change the handling of the vehicle.
- Do not place objects in front of the rear window.
- Do not place objects on the dashboard.
- Do not place objects in the area where the airbags inflate.

Carrying portable gas cylinders in vehicles

⚠Warning

Gas cylinders can leak, creating a risk of fire or explosion. As a precaution, ensure adequate ventilation when carrying gas cylinders. They must be restrained from rolling around, and where possible, placed in the load area of the vehicle. It is recommended that if gas cylinders are frequently transported, that a purpose-built carrying compartment be used. Ensure any transportation of gas cylinders complies with the applicable regulations.

Instruments and controls

Instrument panel overview.....67
Controls.....70
Warning lights, gauges and indicators.....74
Vehicle personalisation.....104

Instrument panel overview

Omega, Berlina, Calais, Calais V-Series

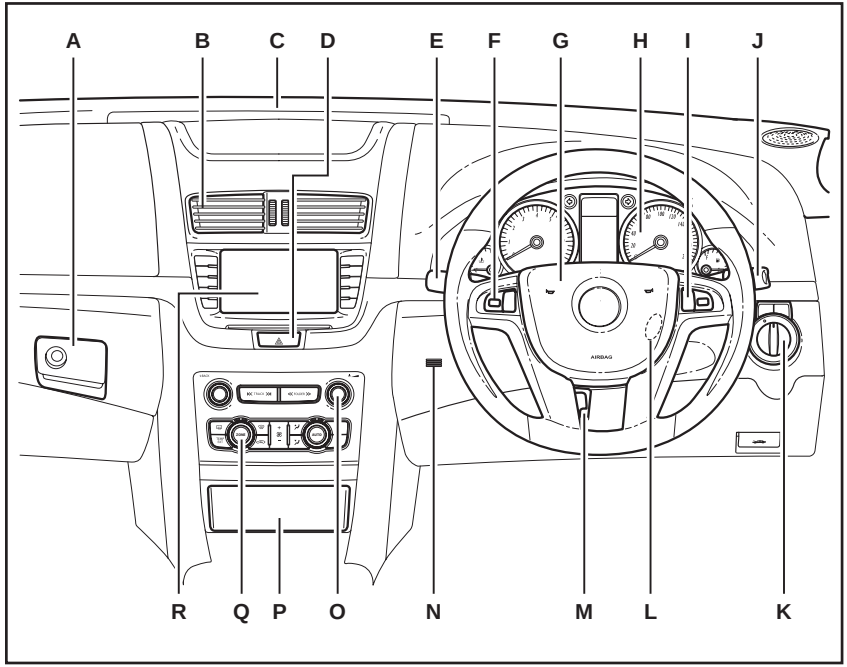

A. Glove box 54
B. Vents 201
C. Sunlight sensor 207
D. Hazard warning flasher 111
E. Lever for wipers/washers 71
F. Steering wheel controls:
Audio button 120
Trip button 92
Enter button 92
G. Horn pad 71
H. Warning lights, gauges and indicators 74
I. Steering wheel controls:
Bluetooth® phone button 120
Navigation button 120
Volume/mute switch 120
J. Lever for:
Turn signals 112
High/low beam 110
Cruise control 227
K. Lamp control (incl. headlamps, park lamps, front fog lamps and dimmer) 109
L. Ignition lock/switch (behind steering wheel) 211
M. Steering wheel adjustment 70
N. In-car temperature sensor 207
O. Infotainment system controls 119
P. Storage compartment 55
Dual fuel (LPG) selector switch 242
Q. Climate control switches 201
R. Infotainment screen 116

Instrument panel overview

SV6, SS, SS V-Series

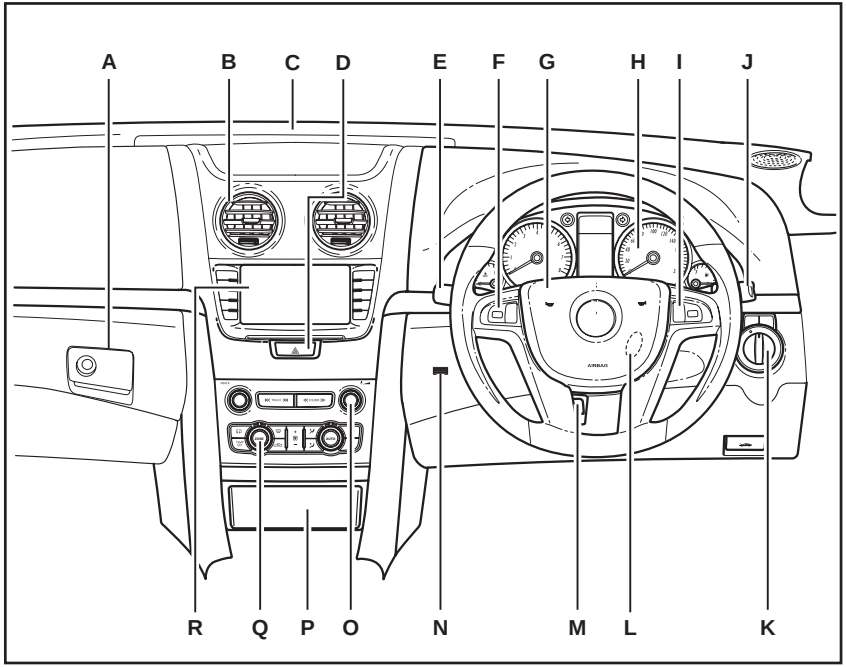

A. Glove box 54
B. Vents 201
C. Sunlight sensor 207
D. Hazard warning flasher 111
E. Lever for wipers/washers 71
F. Steering wheel controls:
Audio button 120
Trip button 92
Enter button 92
G. Horn pad 71
H. Warning lights, gauges and indicators 74
I. Steering wheel controls:
Bluetooth® phone button 120
Navigation button 120
Volume/mute switch 120
J. Lever for:
Turn signals 112
High/low beam 110
Cruise control 227

K. Lamp control (incl. headlamps, park lamps, front fog lamps and dimmer)..... 109
L. Ignition lock/switch (behind steering wheel) 211
M. Steering wheel adjustment 70
N. In-car temperature sensor 207
O. Infotainment System controls 119
P. Storage compartment 55
Q. Climate control switches 201
R. Infotainment screen 119

Controls

Steering wheel adjustment

⚠Warning

Do not attempt to adjust the steering wheel while driving.

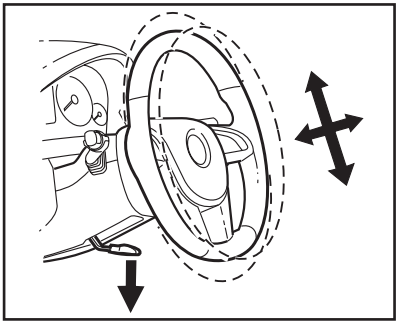

1. To unlock, move the lever down.
2. To adjust, move the steering wheel up, down, closer or away.
3. To lock, move the lever up. Ensure the steering wheel is locked in position before driving.

Steering wheel controls

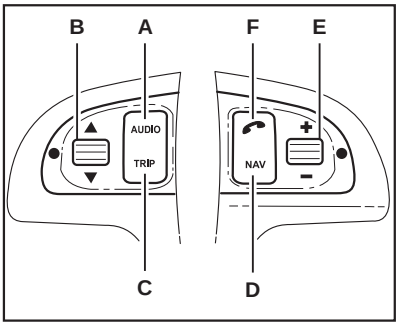

A. Audio button..... 120
B. Enter button and scroll wheel 92
C. Trip button..... 92
D. Navigation button..... 120
E. Volume/mute..... 120
F. Bluetooth® phone 120

Horn

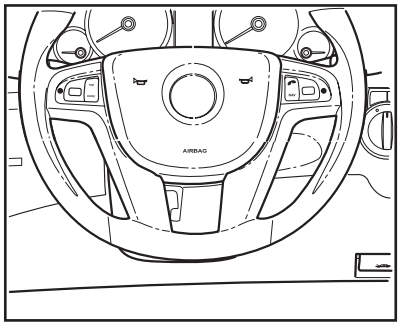

Press on either side.

Windscreen wipers/washers

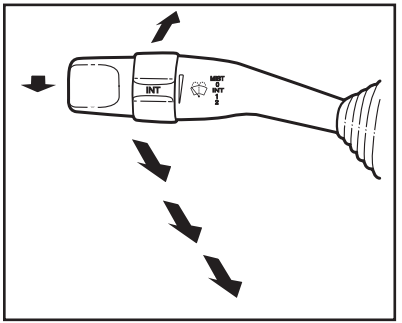

The wipers/washers operate with the ignition in the ON or ACCESSORIES positions.

Caution

Never operate the wipers on dry glass, as this will damage the rubber and scratch the glass.

MIST Wipers cycle while the lever is held up.

0 Off

INT Intermittent wipe

1 Slow

2 Fast

Pull to wash the windscreen. The wipers will also cycle for a short time.

Intermittent wipers

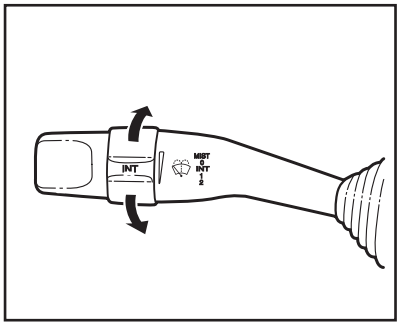

Rotate collar down for more frequent wipes, up for less frequent wipes.

Note
The intermittent wiper frequency is increased as vehicle speed increases.

Auto (rain sensing)

The vehicle may have rain sensing windscreen wipers.

Caution

Switch off the rain sensor by setting the lever to the **0** position before entering a car wash.

Replace the wiper blades as soon as they do not completely remove water from the windscreen. If the blades are not replaced, the wipers may continue to wipe even though most of the screen is dry.

To prevent damage to the wiper blades, make sure that the windscreen is fully defrosted before switching on the rain sensor.

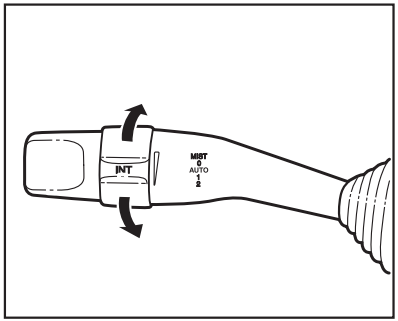

AUTO The wipers cycle when water is detected on the windscreen.

The wiper speed and frequency are adjusted automatically.

To manually adjust the sensitivity of the rain sensing:

- Rotate the collar down for higher sensitivity.
- Rotate the collar up for less sensitivity.

Rear window wipers/ washers (Sportwagon)

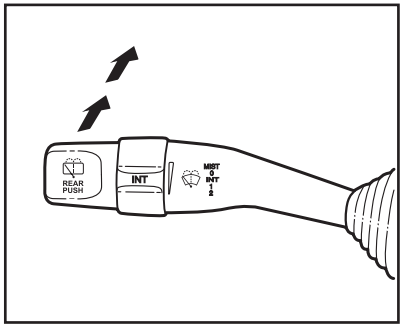

- Push to the first stop for the rear window wiper.
- Push and hold at the second stop to wash the rear window.

  The rear window wiper will cycle for a short time.

Note
The rear window wiper cycles intermittently.

Power outlets

⚠Warning

It is dangerous for the driver of a vehicle to attach or remove accessories from the power socket while driving. It may distract the driver's attention, putting the occupants of the vehicle and other road users at risk.

Note
Any device connected to a power socket must not exceed a current draw of 10 amps.

The power sockets operate with the ignition in the ON or the ACCESSORIES positions.

Console power socket

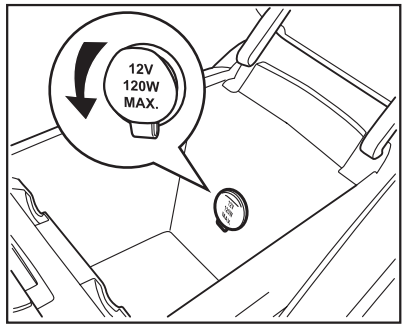

Cargo area power socket (Sportwagon)

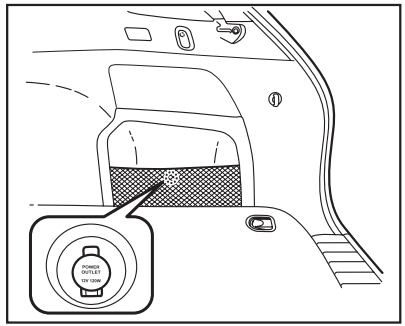

Caution
Do not use the cargo area power socket for a long period with the engine off as the vehicle battery may go flat.

Warning lights, gauges and indicators

Instrument panel

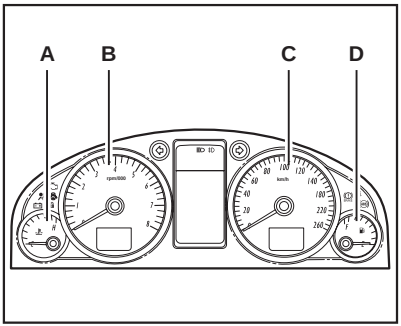

A. Engine coolant temperature gauge

B. Tachometer

C. Speedometer

D. Fuel gauge

Note
Depending on vehicle variant, the instrument panel appearance may differ.

Engine coolant temperature gauge

Engine coolant temperature gauge (A), shows temperature of the engine coolant when the ignition is on (**C** = cold, **H** = hot).

If the needle moves all the way to **H** and remains there for longer than 30 seconds:

- Stop the vehicle as soon as it is safe to do so. See Engine overheating on page 262.

The gauge reading can move towards **H** under the following conditions:

- Stop-start driving
- High speed driving in warm weather
- Hill climbing
- Towing

This is normal.

Tachometer

Tachometer (B), shows engine speed in thousands of revolutions per minute (RPM).

Speedometer

Speedometer (C), shows vehicle speed in kilometres per hour (km/h).

Fuel gauge

Fuel gauge (D), shows the level of fuel in the fuel tank (**E** = empty, **F** = full).

Note

Large additions of fuel will change the gauge reading quickly. Additions less than 15 litres can take up to 10 minutes to register. This prevents false readings due to fuel movement when cornering.

Control indicators

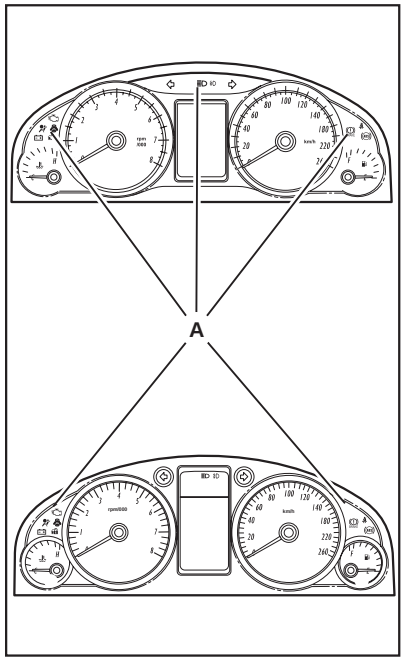

A. Depending on vehicle variant, the location of warning lights and reminders may differ.

The following warning lights and reminders may appear on the instrument panel.

They show as illuminated icons and/or animations.

A chime sounds with most warning lights and reminders.

Note

Press **TRIP** or the ENTER button to clear animations and revert to the original trip computer display.

Seat belt reminder

If the driver's seat belt is not fastened when the ignition is turned to the ON or START positions:

- The warning light illuminates.
- The chime sounds for about 20 seconds.

The vehicle may have a front passenger's seat belt warning light.

If the front passenger's seat belt is not fastened when the ignition is turned to the ON or START positions:

- The warning light illuminates.
- The chime sounds for about 20 seconds.

Fasten driver's seat belt animation

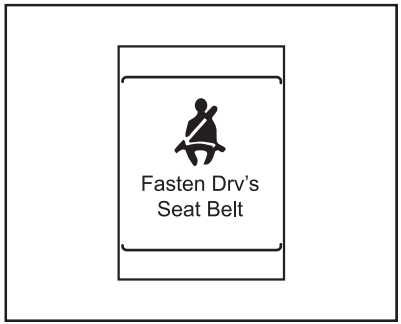

If the driver's seat belt is not fastened and the vehicle speed reaches 25 km/h:

- The warning light flashes.
- The **Fasten Drv's Seat Belt** animation illuminates.
- The chime sounds.

Fasten the driver's seat belt to clear the reminder.

Fasten passenger's seat belt animation

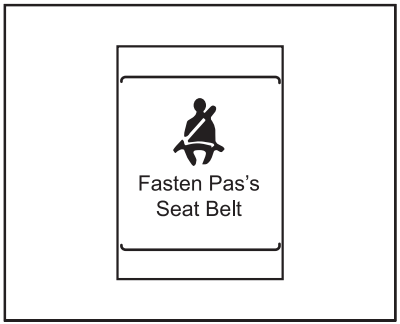

If the front passenger's seat belt is not fastened and the vehicle speed reaches 25 km/h:

- The warning light flashes.
- The **Fasten Pas's Seat Belt** animation illuminates.
- The chime sounds.

Fasten the front passenger's seat belt to clear the reminder.

Fasten seat belts animation

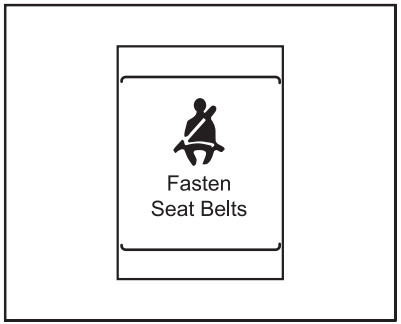

If the driver and front passenger's seat belts are not fastened and the vehicle speed reaches 25 km/h:

- The and warning lights flash.
- The **Fasten Seat Belts** animation illuminates.
- The chime sounds.

Fasten both seat belts to clear the reminders.

Airbag and belt tensioners

The warning light illuminates for a short time when the ignition is turned on to show that the light is working.

Airbag fault animation

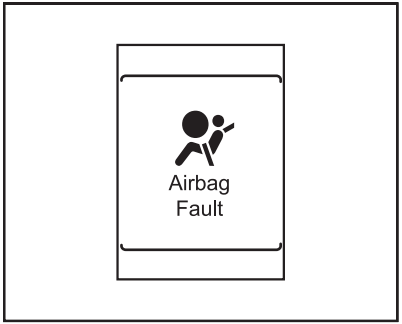

If the warning light and the **Airbag Fault** animation illuminate when driving, there is a problem with the airbag or belt tensioner system:

- Press **TRIP** or the ENTER button to clear the animation.
- The airbag or belt tensioner system may not function correctly in an accident.
- The warning light remains illuminated until the problem is repaired.
- Contact a Holden Dealer immediately.

Note

The warning light and the **Airbag Fault** animation illuminate if the airbag or belt tensioners have been activated.

Charging system

The warning light illuminates for a short time when the ignition is turned on to show that the light is working.

Alternator animation

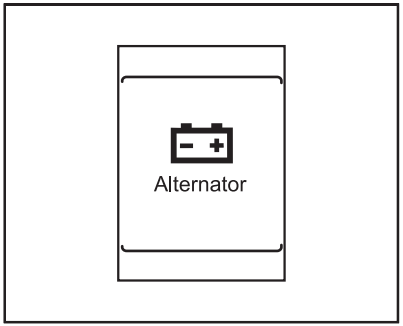

If the warning light and the **Alternator** animation illuminate while the engine is running, there is a problem with the charging system:

- Press **TRIP** or the ENTER button to clear the animation.
- The warning light remains illuminated until the problem is repaired.
- Contact a Holden Dealer.

Malfunction indicator light

The warning light illuminates for a short time when the ignition is turned on to show that the light is working.

Check Engine animation

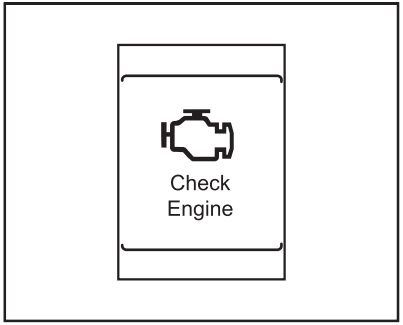

If the warning light and the **Check Engine** animation illuminate when driving, there is a problem with the emission monitoring system:

- Press **TRIP** or the ENTER button to clear the animation.
- The warning light remains illuminated until the problem is repaired.
- Contact a Holden Dealer.

If the warning light flashes and the **Check Engine** animation illuminate when driving:

- Press **TRIP** or the ENTER button to clear the animation.
- The warning light flashes until the problem is repaired.
- Reduce vehicle speed and load.
- Contact a Holden Dealer.

Brake system

The (!) warning light illuminates for a short time when the ignition is turned on to show that the light is working.

Brake animation

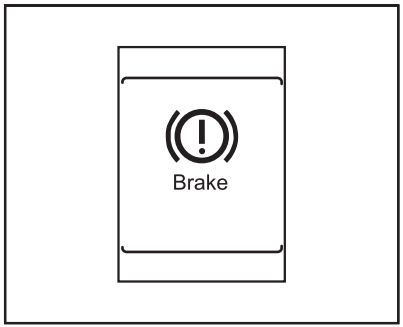

If the (!) warning light and the **Brake** animation do not extinguish or illuminate when driving and the park brake is released, there is a problem with the brakes.

Note

The **Brake** animation also illuminates to show a low fluid level in the brake fluid reservoir.

If the (!) warning light and the **Brake** animation illuminate when driving, there is a problem with the brakes.

- Stop the vehicle as soon as it is safe to do so.
- Press **TRIP** or the ENTER button to clear the animation.
- The (!) warning light remains illuminated until the problem is repaired.
- Check the brake fluid level. See Engine compartment overview on page 254.
- Do not proceed until satisfied that braking is possible or that the cause of the problem has been repaired.
- If necessary contact a Holden Dealer.

Park brake animation

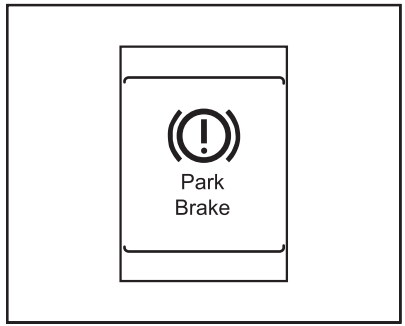

If the (!) warning light and the **Park Brake** animation illuminate and a chime sounds when driving, the park brake is still applied. Release the park brake.

Antilock Brake System (ABS)

The (ABS) warning light illuminates for a short time when the ignition is turned on to show that the light is working.

ABS Fault animation

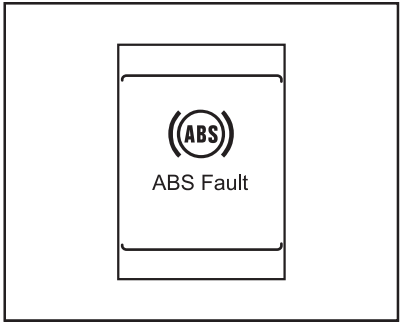

If the (ABS) warning light and the **ABS Fault** animation illuminate, there is a problem with the ABS system.

Note
The vehicle's brake system remains operational but without ABS assistance. See Antilock Brake System (ABS) on page 223.

- Press **TRIP** or the ENTER button to clear the animation.
- The (ABS) warning light remains illuminated until the problem is repaired.
- Contact a Holden Dealer.

High beam

The ≡D indicator light illuminates when headlamp high beam is on.

Fog lamp

The ≠D indicator light illuminates when the fog lamps are on.

Turn signal

Push the lever to signal a turn:

- Push the lever in the same direction the steering wheel is turned.
- A turn signal indicator light ⇦⇨ will flash.
- The turn signal will self cancel from larger turns.

Note
In some turns (such as changing lanes) the steering wheel is not turned far enough to cancel the turn signal. Push it back to its original position.

- Push part way to signal a lane change. The turn signals will flash three times.
- Push the lever in either direction to cancel a lane change signal. See Turn signals on page 112.

Door ajar

The warning light illuminates when any of the doors or the tailgate (Sportwagon) are not completely closed.

Anti-theft alarm system

The indicator light flashes when the security system is activated. See Vehicle security on page 25.

Information displays

Graphic Information Display (GID)

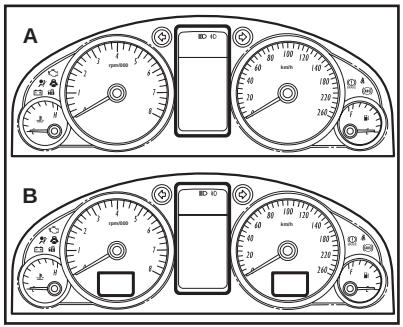

The vehicle may have a Single (A) or a Triple (B) window display.

Displays visual information for:

- Vehicle functions
- Trip computer
- Audio
- Warnings and reminders

Vehicle messages

Battery voltage messages

Battery saver mode on animation

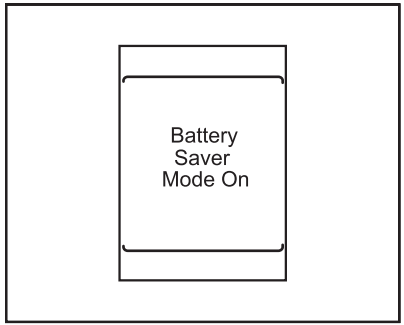

If the **Battery Saver Mode On** animation illuminates, the battery voltage is low.

Cruise control messages

Cruise on animation

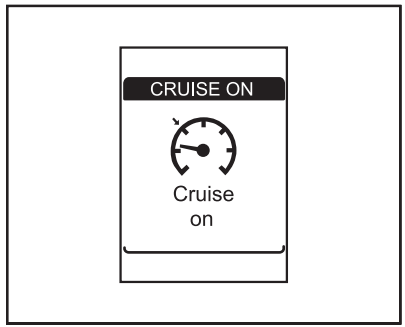

The **Cruise on** animation illuminates when the cruise control is:

- Activated
- Ready for use

See Cruise control on page 227.

Engine cooling system messages

Engine temperature hot animation

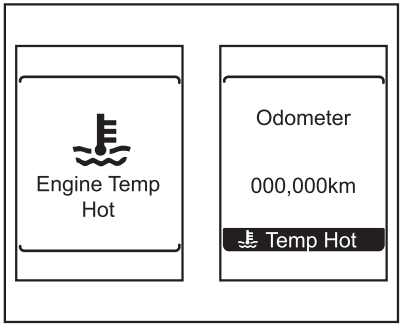

If the **Engine Temp Hot** animation illuminates, the engine coolant is excessively hot:

- Stop the vehicle as soon as it is safe to do so.
- Press **TRIP** or the ENTER button to clear the animation.
- **Temp Hot** remains illuminated until the problem is repaired. See Engine overheating on page 262.

Caution
Engine damage may result if you keep driving.

Engine oil messages

Check oil animation

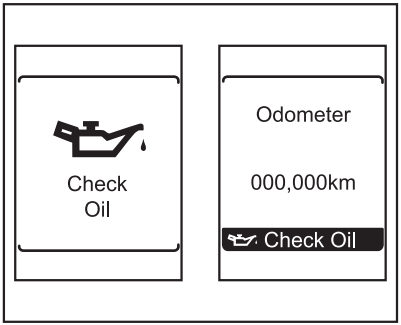

If the **Check Oil** animation illuminates while the engine is running, the engine oil pressure or level is low:

- Stop the vehicle as soon as it is safe to do so.
- Turn the ignition off and remove the key.
- Check the engine oil level. See Engine oil on page 257.
- Press **TRIP** or the ENTER button to clear the animation.
- **Check Oil** remains illuminated until the problem is repaired.
- Contact a Holden Dealer.

Caution
Engine damage may result if you keep driving. Do not run the engine. If the oil level is normal, have the system checked by the nearest Holden Dealer.

Engine oil hot animation

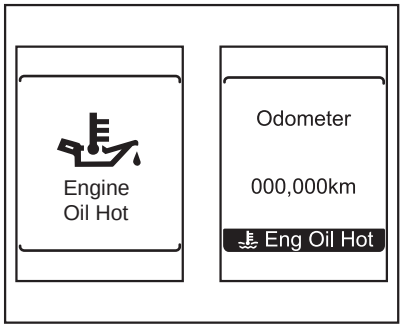

If the **Engine Oil Hot** animation illuminates while the engine is running, the engine oil is excessively hot:

- Reduce engine RPM and vehicle load.
- Press **TRIP** or the ENTER button to clear the animation.

If **Eng Oil Hot** remains illuminated:

- Stop the vehicle as soon as it is safe to do so.
- Allow the engine to cool.
- Press **TRIP** or the ENTER button to clear the animation.

If **Eng Oil Hot** remains illuminated when engine RPM and vehicle load are low:

- Stop the vehicle as soon as it is safe to do so.
- Turn the ignition off and remove the key.
- Contact a Holden Dealer.

Caution

Engine damage may result if you keep driving. Do not run the engine. Continued operation may cause damage to the engine which is not covered under your New Vehicle Warranty.

Engine power messages

Safety mode active and power reduced animations

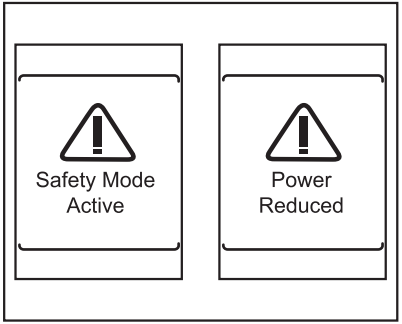

If the **Safety Mode Active** and **Power Reduced** animations illuminate alternately, there is a problem with the engine control:

Note

Although the vehicle may still be drivable, the accelerator input available may be limited, resulting in reduced power. Have the problem repaired by a Holden Dealer as soon as possible.

- Press **TRIP** or the ENTER button to clear the animation.
- ⚠ **Safety** remains illuminated until the problem is repaired.
- Contact a Holden Dealer.

Fuel system messages

Low fuel animation

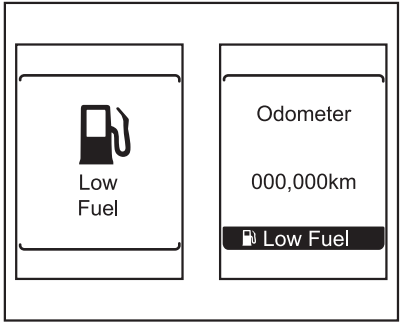

The **Low Fuel** animation illuminates when the fuel level is low:

- Press **TRIP** or the ENTER button to clear the animation.
- **Low Fuel** remains illuminated until the fuel tank is filled above the low fuel level.

Very low fuel animation

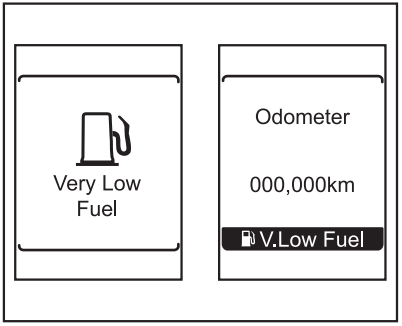

The **Very Low Fuel** animation illuminates when the fuel level is very low:

- Press **TRIP** or the ENTER button to clear the animation.
- **V.Low Fuel** remains illuminated until the fuel tank is filled above the very low fuel level.

Object detection system messages

The vehicle may have Park Assist (PA).

Parking aid assist fault animation

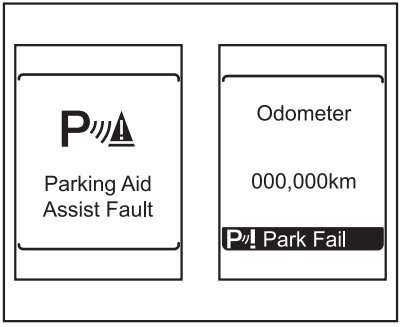

If the **Parking Aid Assist Fault** animation illuminates there is a problem with the PA system:

- Press **TRIP** or the ENTER button to clear the animation.

Note
PA may not work properly. Take special care manoeuvring. See Park Assist (PA) on page 230.

- Check the sensors and clean them as required. See Park Assist (PA) on page 230.
- **P Park Fail** remains illuminated until the problem is repaired.
- Contact a Holden Dealer.

Security

Engine immobilised animation

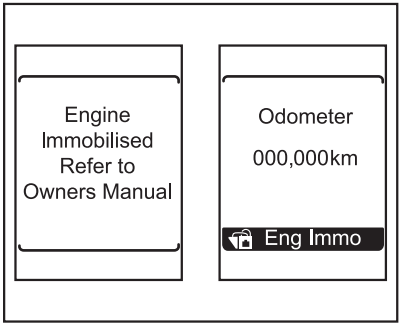

If the **Engine Immobilised Refer to Owners Manual** animation illuminates:

- Press **TRIP** or the ENTER button to clear the animation.
- **Eng Immo** remains illuminated until the problem is repaired.
- Contact a Holden Dealer.

See Vehicle security on page 25.

Anti-theft alarm system animations

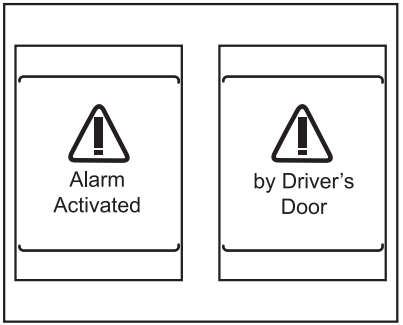

If the **Alarm Activated** animations illuminate the alarm has been triggered:

- The **Alarm Activated** animation and an animation indicating the trigger point illuminate alternately.
- Multiple animations indicate more than one trigger point.
- Press **TRIP** or the ENTER button to clear the animation(s).

See Anti-theft alarm system on page 26.

Service display

Service error animation

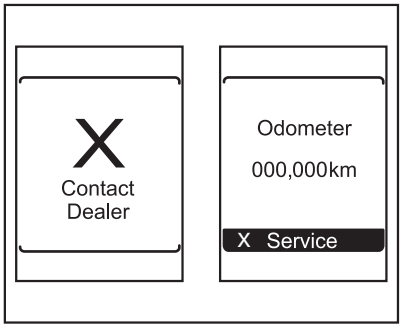

If the **Contact Dealer** animation illuminates there is a problem with the instrument panel:

- Press **TRIP** or the ENTER button to clear the animation.
- **X Service** remains illuminated until the problem is repaired.
- Contact a Holden Dealer as soon as possible.

Service charging system animation

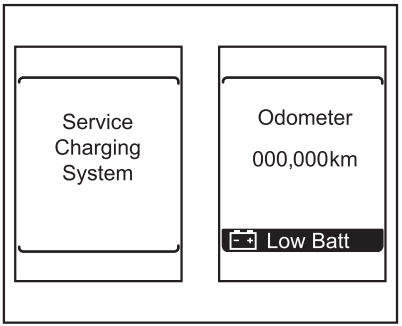

If the **Service Charging System** animation illuminates there is a problem with the Charging system:

- Press **TRIP** or the ENTER button to clear the animation.
- **Low Batt** remains illuminated until the problem is repaired.
- Contact a Holden Dealer as soon as possible.

Replace battery in remote key animation

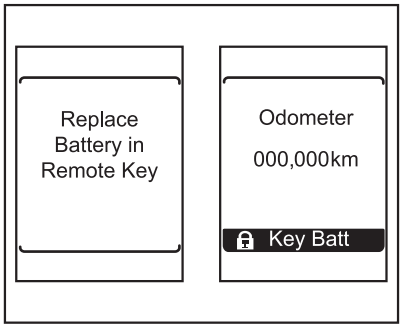

If the **Replace Battery in Remote Key** animation illuminates and a chime sounds the battery in the remote key needs replacing:

- Press **TRIP** or the ENTER button to clear the animation.
- **Key Batt** remains illuminated until the problem is repaired.
- Contact a Holden Dealer as soon as possible.

Service vehicle soon animation

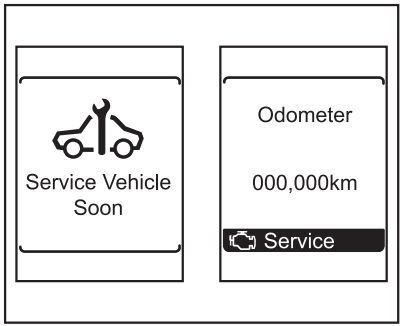

If the **Service Vehicle Soon** animation illuminates there is a problem with one of the vehicle systems:

- Press **TRIP** or the ENTER button to clear the animation.
- **Service** remains illuminated until the problem is repaired.

Caution

Although the vehicle may still be drivable, take the vehicle to a Holden Dealer, as soon as possible. Excess driving may result in vehicle damage.

Service animation

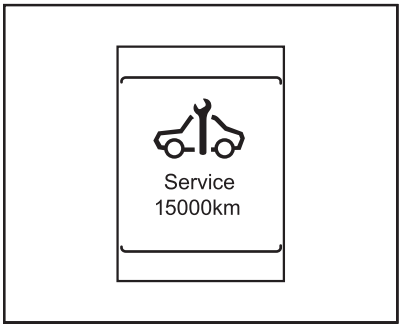

The **Service** animation showing the kilometre reading when the service is due, illuminates 1,000 km before the service becomes due:

- Press **TRIP** or the ENTER button to clear the animation.
- The animation illuminates when the ignition is turned on or off.
- If the service becomes overdue, the animation illuminates and flashes when the ignition is turned on or off.
- The service reminder will be reset when servicing the vehicle.

Caution

The service reminder is distance based. If the vehicle is driven infrequently, special servicing may be required. See the Service/Warranty Booklet supplied with the vehicle.

Starting the vehicle messages

System check animations

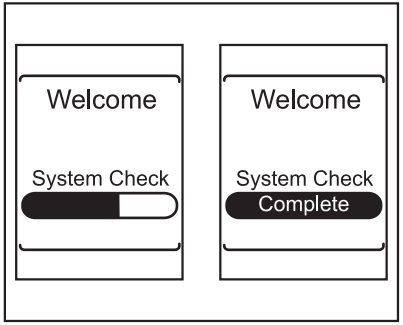

When the ignition is turned on, a system check is performed and the following are displayed:

- The status of the vehicle systems
- Any warnings or service reminders as required
- The trip computer display

Note

Press **TRIP** to clear each warning displayed. If no warning is displayed, pressing **TRIP** during the system check will display the trip computer display.

Transmission messages

The vehicle may have a 4 speed or 6 speed automatic transmission.

Sport shift animations

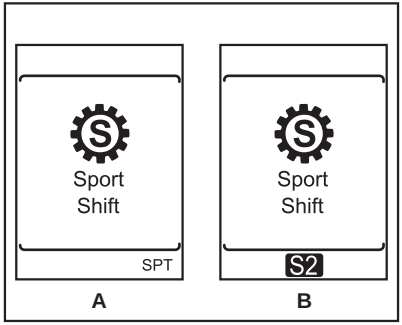

The **Sport Shift** animation illuminates when sport shift mode is selected:

- **Sport Shift** is illuminated for a short time.
- **SPT** is illuminated (4 speed), (A).
- **S** and the current gear **(1, 2, 3, 4, 5 or 6)** are illuminated (6 speed), (B).

See Sport shift mode on pages 216 and 218.

Active select animation (6 speed automatic transmission)

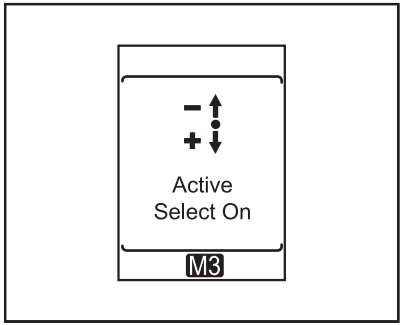

The **Active Select On** animation illuminates for a short time when active select mode is selected.

- **M** and the current gear **(1, 2, 3, 4, 5 or 6)** are illuminated.

See Active Select (A/S) mode on page 220.

Shift denied animation

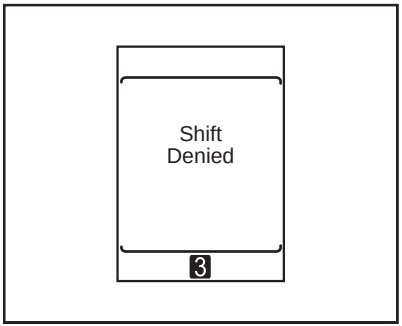

The **Shift Denied** animation illuminates when the transmission has not shifted to the selected gear.

Note
In active select mode the transmission will shift gear only if the engine speed is within a suitable range. See Active Select (A/S) mode on page 220.

Normal shift animations

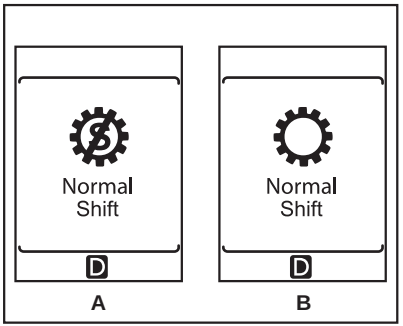

The **Normal Shift** animation illuminates when sport shift mode is inactive:

- **Normal Shift** is illuminated for a short time (4 speed), (A) and (6 speed), (B).
- **D** is illuminated.

See Normal shift mode on page 219.

Vehicle reminder messages

When the ignition is turned off, any current service reminders are displayed, then the odometer appears for about 30 seconds. The odometer is displayed again when the driver's door is opened.

Rest reminder animation

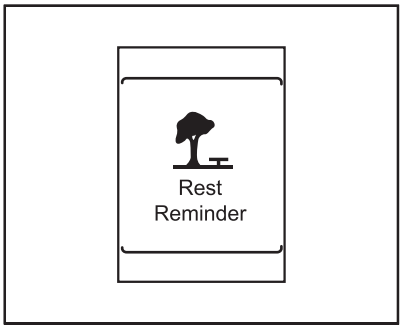

The **Rest Reminder** animation illuminates after 2 hours of continuous driving:

- Driving for too long without a break may be hazardous.
- Consider stopping when safe and taking a rest.
- The reminder timer counts from when the ignition is turned on.
- Alternatively, press **TRIP** or the ENTER button to clear the animation.
- The **Rest Reminder** animation will illuminate again after 20 minutes and the chime will sound.

See Vehicle personalisation on page 104.

Vehicle speed messages

Overspeed animation

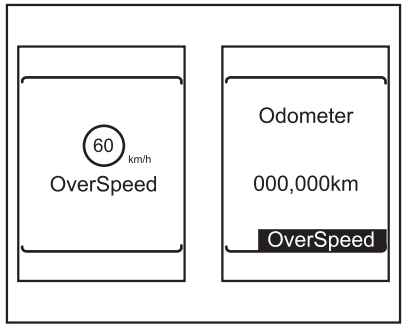

The **OverSpeed** animation illuminates and a chime sounds when the vehicle speed exceeds the a preselected value:

- Reduce speed.
- Alternatively, press **TRIP** or the ENTER button to clear the animation.
- Alternatively, adjust the preselected value, by rotating ▲ or ▼ while the warning is active.

See Overspeed on pages 95 and 103.

Electronic Stability Program (ESP®)

Stability control on animation

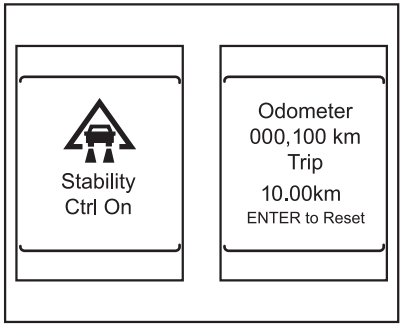

Stability control off animations

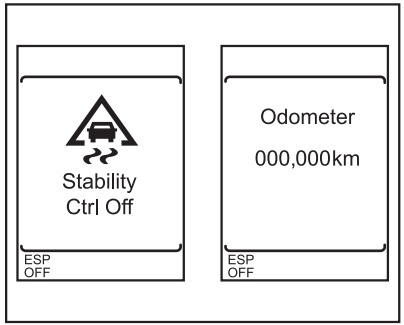

The **Stability Ctrl On** and **Stability Ctrl Off** animations illuminate for a short time when the ESP® is turned on or off by pressing OFF.

When the ESP® is turned off:

- The **Stability Ctrl Fault** animation illuminates for a short time.
- The **Stability Ctrl Off** animation illuminates for a short time.
- Press **TRIP** or the ENTER button to clear the animations.
- **ESP OFF** remains illuminated.

If the **Stability Ctrl Off** animation illuminates and you have not pressed OFF:

- There is a problem with the ESP®.
- ESP® is no longer operating.
- Press **TRIP** or the ENTER button to clear the animation.
- **ESP OFF** remains illuminated until the problem is repaired.
- Contact a Holden Dealer.

See Electronic Stability Program (ESP®) on page 225.

Stability control assistance animation

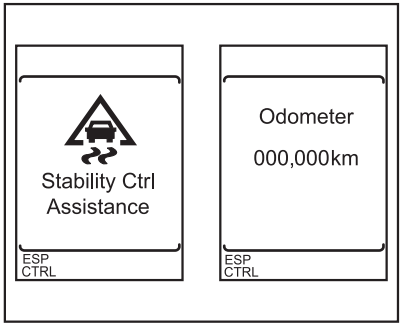

The **Stability Ctrl Assistance** animation illuminates when the ESP® is helping the vehicle with road grip and stability:

- **ESP CTRL** remains illuminated while the ESP® is actively helping the vehicle.

See Electronic Stability Program (ESP®) on page 225.

Stability control fault animation

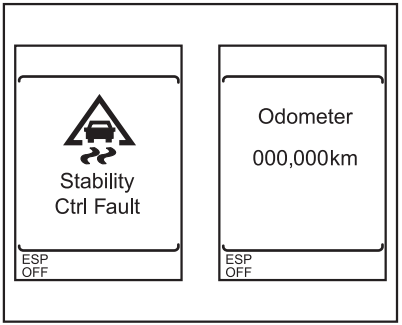

If the **Stability Ctrl Fault** animation illuminates and you have not pressed OFF:

- There is a problem with the ESP®.
- ESP® is no longer operating.
- Press **TRIP** or the ENTER button to clear the animation.
- **ESP OFF** remains illuminated until the problem is repaired.
- Contact a Holden Dealer.

See Electronic Stability Program (ESP®) on page 225.

Trip computer

Controls

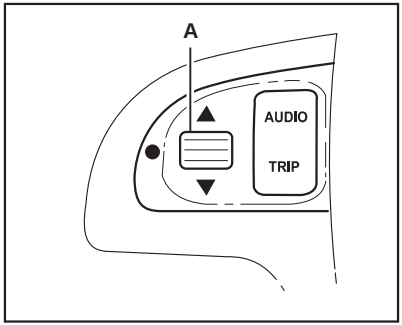

1. Press **TRIP** to navigate between displays.
2. Scroll ▲ and ▼ using the ENTER button (A) to change the highlighted value/setting.
3. Push on the scroll wheel (A) to make a selection.

Note

- Values are highlighted for a short period. Press **TRIP** to re-highlight a value.
- If the wrong buttons are accidentally pressed, causing the display to show anything other than normal, turn the ignition off then on again (only when the vehicle is stationary).
- The display settings are remembered when the ignition is turned off and recalled next time the ignition is turned on.

The vehicle may have personal identity keys.

The display settings are remembered for each key and recalled next time the ignition is turned on with that key. See Personal identity keys on page 18.

Displays

The vehicle may have a Single-window or Triple-window display.

Single-window display

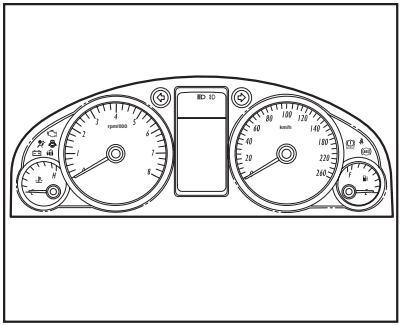

Odometer/trip

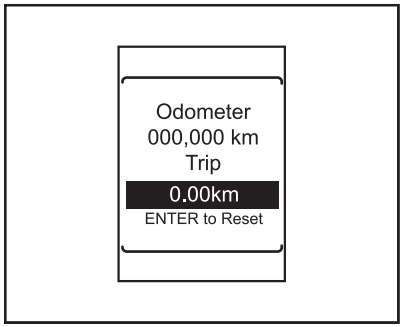

Displays total vehicle kilometres.

Reset tripmeter:

- Press the ENTER button for 3 seconds to reset.
- Press the ENTER button briefly to reset trip, average speed and average fuel values.

Distance/time to go

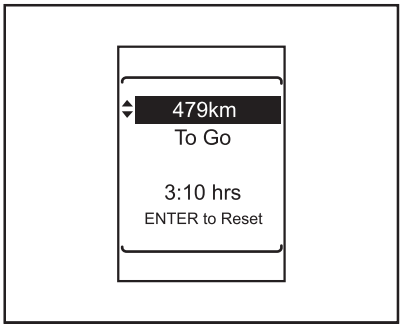

Displays distance and time to arrival:

- Rotate ▲ or ▼ to enter estimated trip distance.
- The default value is 500 km. This default can be adjusted.
- Can be enabled or disabled. See Vehicle personalisation on page 104.

Range (excluding LPG)

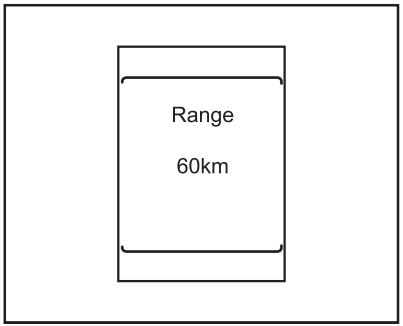

Displays estimate of how far the vehicle will go on the current amount of fuel, based on the fuel usage over approximately the previous quarter of the tank.

Note
The range is an estimate only and may vary based on driving style and variation in the fuel gauge reading.

Instantaneous fuel

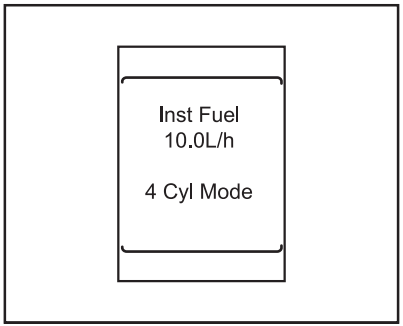

The vehicle may have an instantaneous fuel display.

Displays instantaneous fuel consumption:

- Litres per 100 km is displayed when vehicle speed is above 10 km/h.
- Litres per hour is displayed when vehicle speed is below 10 km/h.

The vehicle may have Active Fuel Management (AFM):

- Displays the number of currently active cylinders.

- The AFM display may be enabled or disabled. See Vehicle personalisation on page 104.

Average speed/average fuel (excluding LPG)

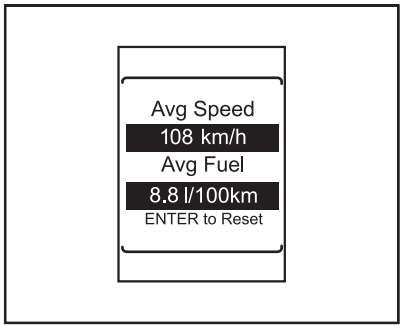

Displays average speed and fuel consumption:

- It is calculated from the last time the trip computer was reset.
- Press the ENTER button for 3 seconds to reset.
- Press the ENTER button briefly to reset trip, average speed and average fuel values.

Overspeed

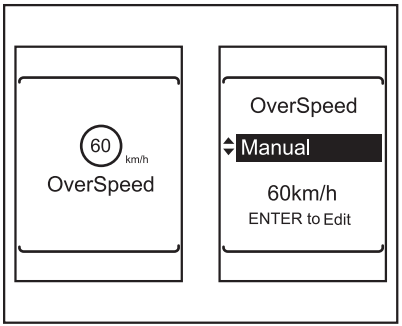

OverSpeed illuminates and a chime sounds when vehicle speed equals or exceeds a preselected value.

The **OverSpeed** display is shown for 10 seconds to allow the preselected value to be adjusted.

Set the overspeed mode:

1. Press **TRIP** to navigate to the **OverSpeed** display.
2. Rotate ▲ or ▼ to select the required mode:
   - **Off**
   - **Manual** (accepts values higher than 20 km/h in 5 km/h steps)
   - **Preset 1** (60 km/h)
   - **Preset 2** (80 km/h)
   - **Preset 3** (100 km/h)
   - **Preset 4** (110 km/h)
3. Press the ENTER button to set the overspeed mode.

Manual

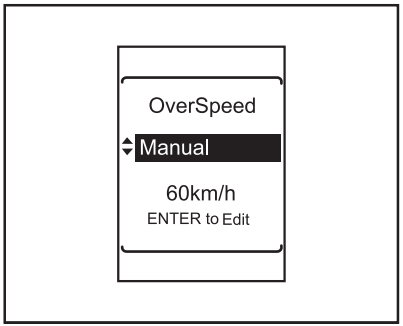

Setting the manual preselected value:

1. Rotate ▲ or ▼ to select manual mode.
2. Press the ENTER button.
3. Rotate ▲ or ▼ to set the required value.

   Alternatively, press the ENTER button for 3 seconds to set the value to the nearest 5 km/h step above the current setting.

Preset (1 to 4)

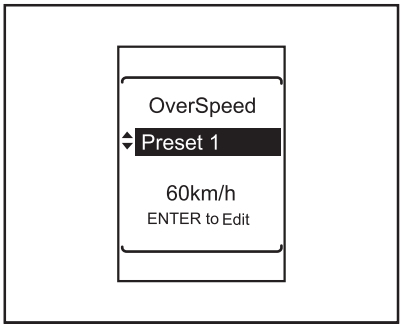

Using the preset values:

1. Rotate ▲ or ▼ to select the required **Preset** (1 to 4) mode.
2. Press the ENTER button.
3. Rotate ▲ or ▼ to set the required value. The value adjusts in 1 km/h steps.
4. Press the ENTER button to confirm the setting.

Note
The presets are arranged in ascending order based on the km/h value set.

Underspeed

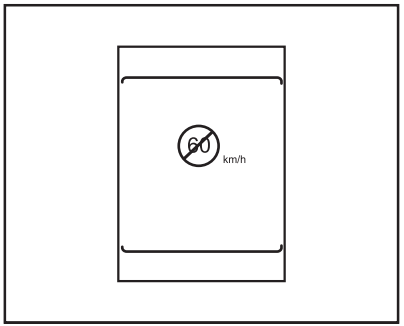

The underspeed animation and a chime sounds when the vehicles speed drops below the set value.

Can be enabled or disabled. See Vehicle personalisation on page 104.

Digital speedometer

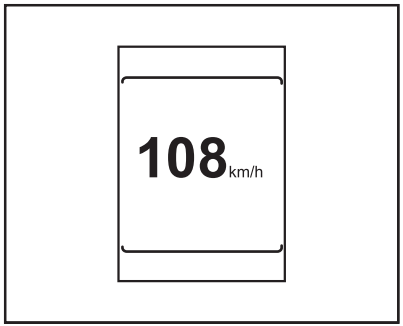

The vehicle speed can be displayed numerically.

The digital speedometer can be enabled or disabled. See Vehicle personalisation page on 104.

Triple-window display

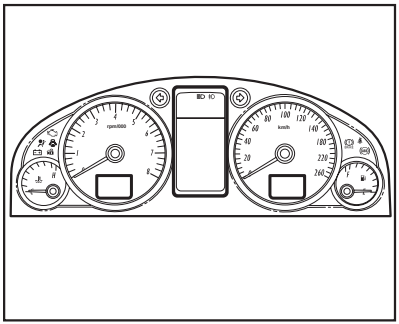

The vehicle may have a Triple-window display.

Average speed

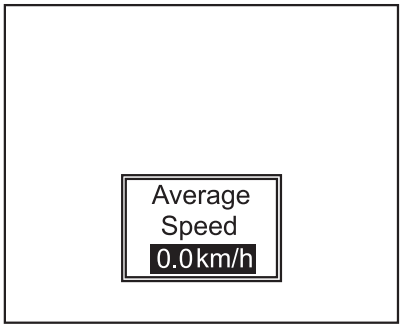

Displays average speed:

- It is calculated from last time trip computer was reset.
- Press **TRIP** to navigate to the displays, then press the ENTER button briefly to reset the **Trip Distance, Average Speed** and **Avg Fuel** values.
- Press the ENTER button for 3 seconds to reset the **Trip Distance** only.

Odometer

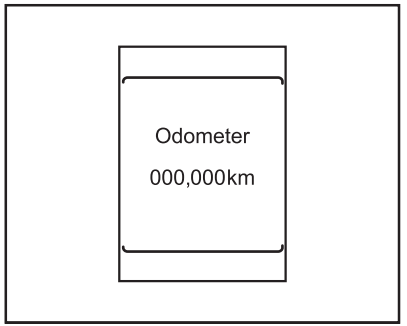

Displays total vehicle kilometres.

Average fuel (excluding LPG)

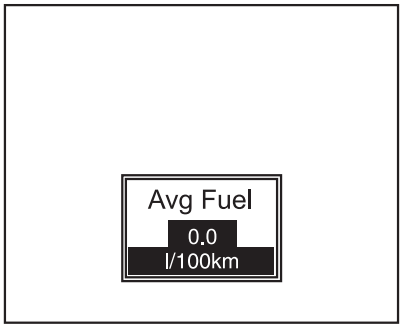

Displays average fuel consumption.

Trip time

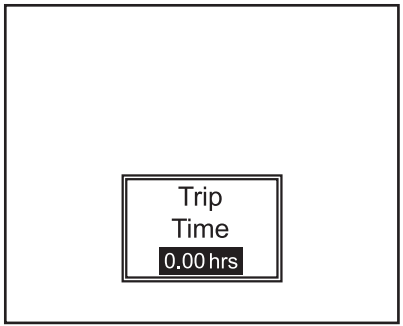

Displays the time from the last time the trip computer was reset:

- Press **TRIP** to navigate to the displays.
- Press the ENTER button to reset.
- Not displayed when **Trip computer A&B** is selected. See Vehicle personalisation on page 104.

Trip distance

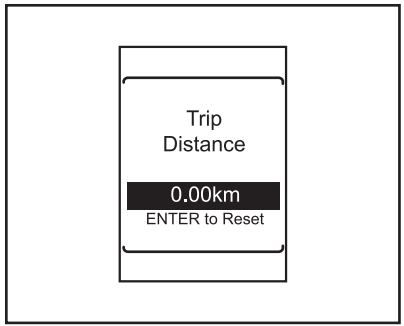

Displays the distance from the last time the trip computer was reset.

Fuel used (excluding LPG)

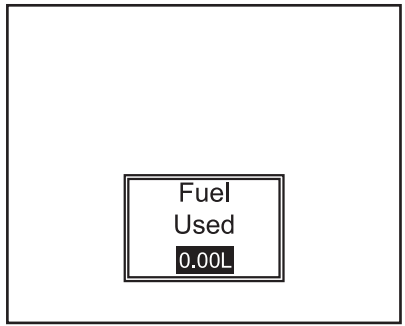

Displays fuel used from the last time the trip computer was reset.

Trip computer A&B (excluding LPG)

Trip time A

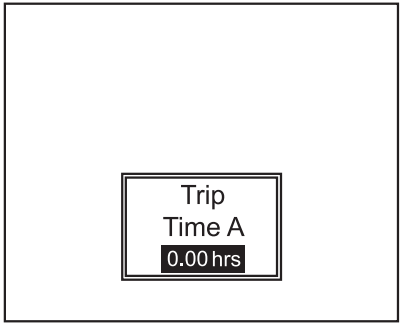

Trip computer A&B is selected from the Vehicle personalisation menu. See Vehicle personalisation on page 104.

Trip distance A

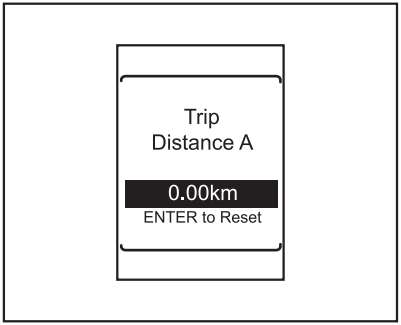

Two sets of trip time/distance and fuel used, can be calculated at the same time.

- Press **TRIP** to swap the display between Trip computer A and Trip computer B.

Fuel used A

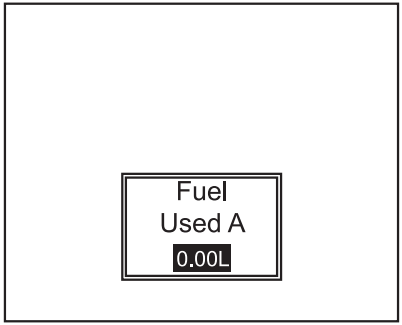

- Average speed and average fuel displays are calculated based on Trip computer A.

Trip time B

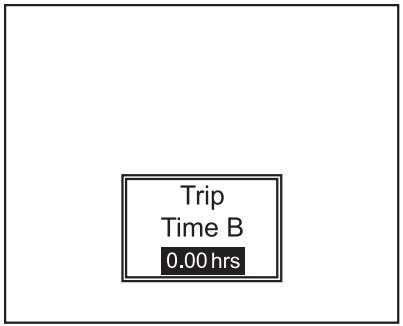

Displays the time from the last time that the trip computer was reset:

- Press **TRIP** to navigate to the displays.
- Press the ENTER button to reset.

Trip distance B

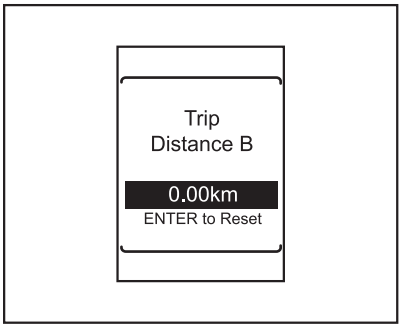

Displays the distance from the last time that the trip computer was reset.

Fuel used B

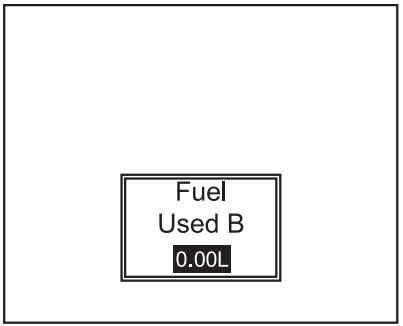

Displays fuel used from the last time that the trip computer was reset.

Time to arrival

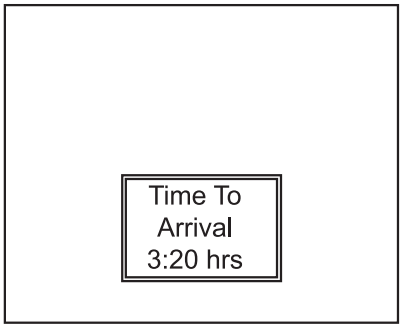

Displays time to arrival:

- Not displayed when **Trip computer A&B** is selected. See Vehicle personalisation on page 104.

Distance to arrival

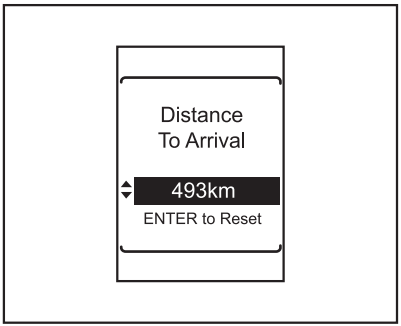

Displays distance to arrival:

- Rotate ▲ or ▼ to enter estimated trip distance.
- The default value is 500 km. This default can be adjusted.
- Press the ENTER button then rotate ▲ or ▼ to readjust the value while **Distance To Arrival** is displayed.
- Not displayed when **Trip computer A&B** is selected. See Vehicle personalisation on page 104.

Fuel remaining (excluding LPG)

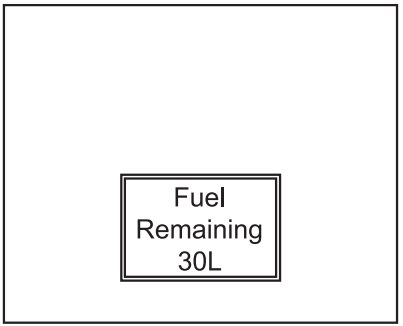

Displays fuel remaining to the nearest five litres.

Displays **LOW** when the **Low Fuel** warning illuminates.

Instantaneous fuel (excluding LPG)

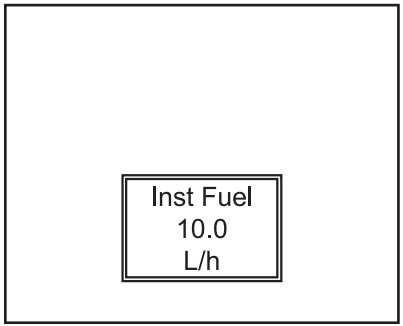

Displays instantaneous fuel consumption:

- Litres per 100 km is displayed when vehicle speed is above 10 km/h.
- Litres per hour is displayed when vehicle speed is below 10 km/h.

Overspeed

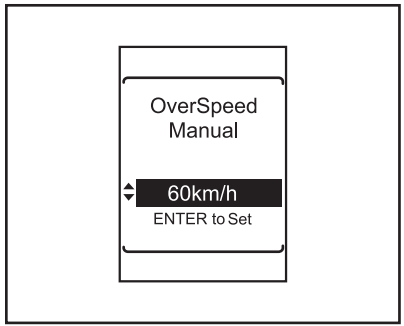

OverSpeed illuminates and a chime sounds when vehicle speed equals or exceeds a preselected value.

The **OverSpeed** display is shown for 10 seconds to allow the preselected value to be adjusted.

See Overspeed on page 95.

Range (excluding LPG)

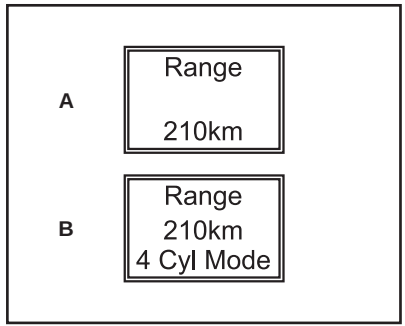

Displays estimate of how far the vehicle will go on the current amount of fuel, based on the fuel usage over approximately the previous quarter of the tank.

Note

The range (A) is an estimate only and may vary based on driving style and variation in the fuel gauge reading.

The vehicle may have Active Fuel Management (AFM) (B):

- Displays the number of currently active cylinders.
- The AFM display may be enabled or disabled. See Vehicle personalisation on page 104.

Underspeed

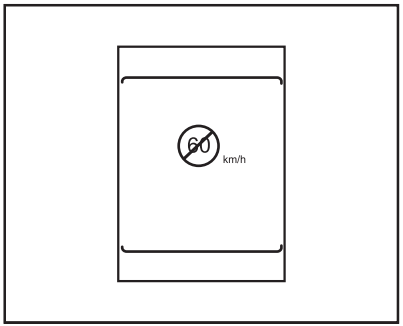

The underspeed animation appears and a chime sound when the vehicle speed drops below the set value. This can be enabled or disabled. See Vehicle personalisation on page 104.

Digital speedometer

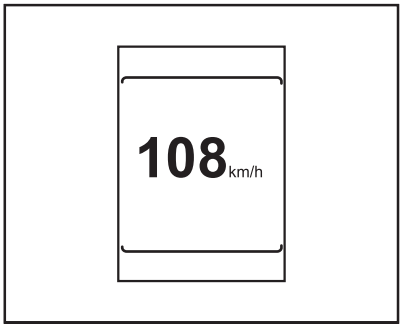

The vehicle speed can also be displayed numerically.

The digital speedometer can be hidden or disabled. See Vehicle personalisation on page 104.

Vehicle personalisation

Customisation options

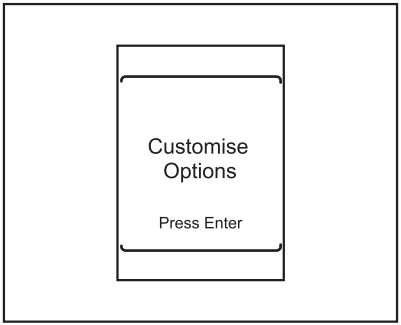

Entering the Customisation menu

1. Press **TRIP** to navigate to the Customisation menu.
2. Press the ENTER button.

Note
The Customisation menu cannot be opened above 10 km/h.
Not Available is displayed.

Navigating the Customisation menus

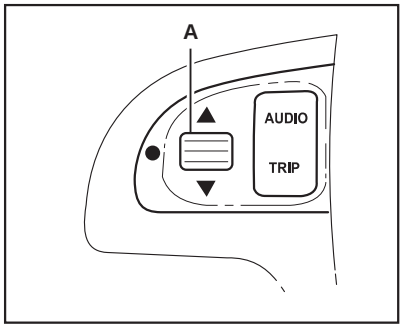

A. ENTER button

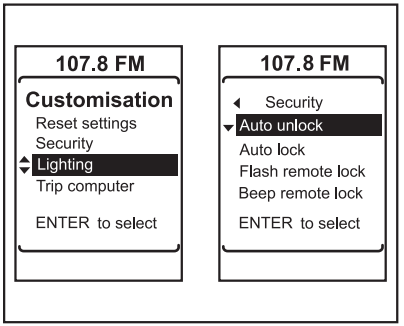

1. Rotate ▲ or ▼ to scroll through and highlight the menu items.
2. Press the ENTER button to make a selection.
3. Scroll to ◄ and press the ENTER button to go up/back a menu level.

Help screens

A help screen will display a few seconds after each menu item is selected.

Exiting the Customisation menu

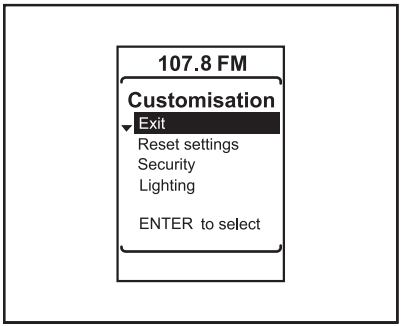

To exit from the Customisation menu:

1. Navigate to **Exit** and press the ENTER button.
2. Press **TRIP** and revert to the trip computer display.
3. Drive the vehicle at more than 10 km/h.
4. Turn the ignition off (only if stationary.)

Resetting the settings

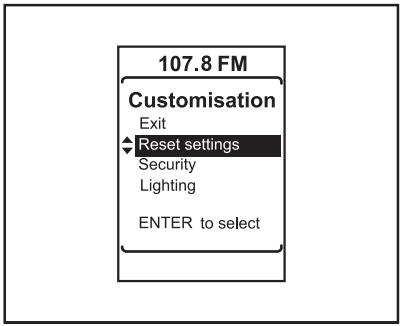

To reset all settings to the default:

1. Navigate to **Reset settings**.
2. Press the ENTER button.
3. Rotate ▲ or ▼ to highlight **Yes** or **No**.
4. Press the ENTER button to confirm the reset.

Security

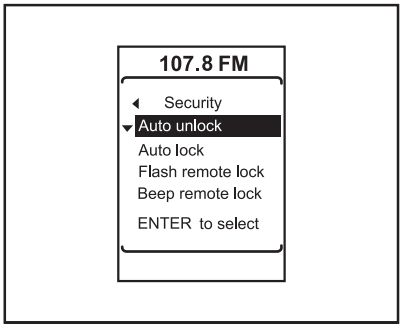

See Vehicle security on page 25.

Auto unlock Automatic door unlocking options:

- **Off** Auto unlock is switched off.
- **Driver door key out** The driver's door unlocks when the ignition key is removed.
- **Driver door in park** (vehicles with automatic transmission) The driver's door unlocks when **P** (park) is selected.
- **All doors at key out** All doors unlock when the ignition key is removed.
- **All doors in park** (vehicles with automatic transmission) All doors unlock when **P** (park) is selected.

Auto lock Automatic door locking options:

- **Off** Auto lock is switched off.
- **At vehicle speed** The doors will lock when the vehicle speed is at or above 13 km/h.
- **Out of Park** (vehicles with automatic transmission) All doors will lock when the shift lever is out of **P** (park).

Flash remote lock The turn signal lamps flash when the doors are locked.

Beep remote lock The horn sounds when the doors are locked.

Flash remote unlock The turn signal lamps flash when the doors are unlocked.

Two stage unlock Only the driver's door unlocks when is pressed. Press again to unlock all passenger doors and tailgate (Sportwagon models).

Lighting

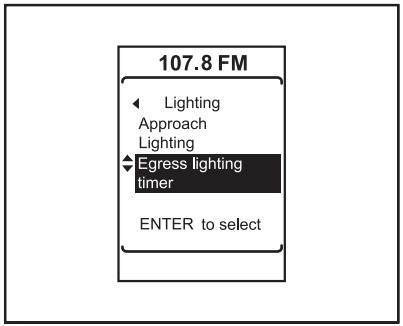

See Lighting on page 109.

- **Approach lighting** The exterior lamps illuminate when the doors are unlocked.
- **Egress lighting** The exterior lamps illuminate for a selectable time when the doors are locked.

Trip computer

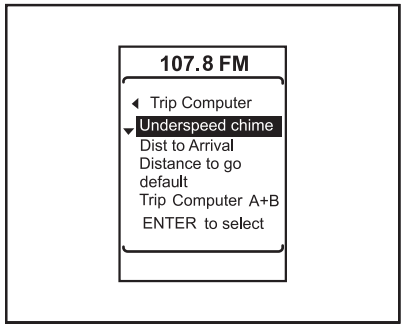

See Trip computer on page 92.

- **Underspeed chime** The underspeed chime will operate.
- **Distance to go** (Single-window display) The distance to go will be displayed.
- **Dist to Arrival** (Triple-window display) The distance to arrival will be displayed.
- **Distance to go default** Adjust the default value. The default setting is 500 km.

Note

Distance to go default is not available if Trip computer A&B function is selected.

- **Trip Computer A+B** (Triple-window display) Selects Trip computer A or A&B.
- **Digital speedometer** The digital speedometer will be displayed.
- **Rest reminder** The rest reminder will operate. See Rest reminder on page 90.

The vehicle may have Active Fuel Management.

- **Cylinder mode** Displays how many cylinders are operating:

  Off Choose if you do not want to display how many cylinders are currently active.

  On Choose if you want to display how many cylinders are currently active.

  Note
  Instantaneous fuel is not available for Single window displays if cylinder mode is deactivated.
- **Night panel** When in night panel mode, enable or disable the tachometer. See Night panel mode on page 113.
- **Sound volume** Sound volume for all chimes can be set to Low, Normal or High.

Park Assist (PA)

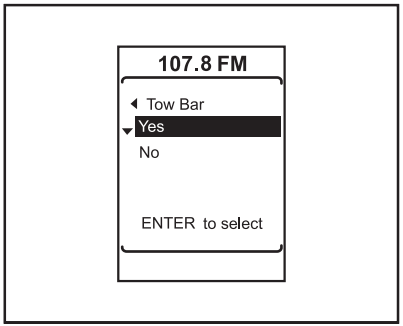

The vehicle may have PA. See Park Assist (PA) on page 230.

Select if a tow bar is fitted to the vehicle.

Lighting

Exterior lighting 109
Interior lighting 112
Lighting features 115

Exterior lighting

Lamp control

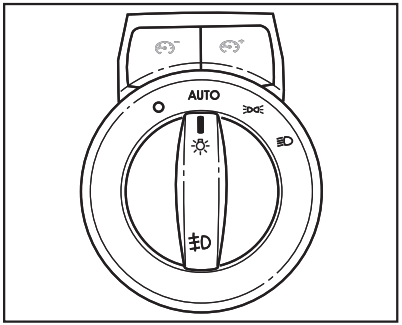

O (Off): Turns the headlamps and park lamps off. The switch returns to **AUTO**.

AUTO (Automatic headlamps): Headlamps and park lamps switch on and off automatically. Select high and low beam using the lever.

Note
Headlamps and park lamps switch on automatically after six wipes, when wipers are operating.

(Park lamps): Turns on the park, tail, rear number plate lamps and instrument panel lighting.

(Headlamps): Turns on the headlamps and all park lamps.

(Fog lamps): The vehicle may have fog lamps.

When the lamp control is set to park lamps or headlamps, pull the switch out to turn the fog lamps on. Push the switch in to turn them off.

The indicator lamp illuminates on the instrument panel, when the fog lamps are on.

Note The fog lamp switch can also be pulled out with the switch in the **AUTO** position.

If left in this position, whenever the park lamps and headlamps turn on automatically, so will the fog lamps.

High/low beam

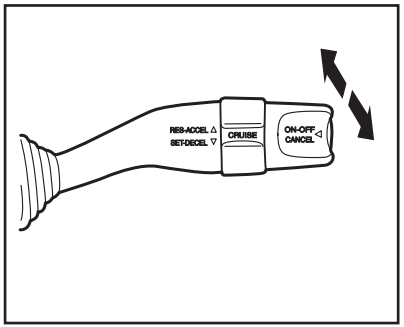

To activate high beam:

- With the headlamps on, push the lever toward the front of vehicle until it clicks, then release.
- The high beam indicator lamp ≡D illuminates on the instrument panel.

To return to low beam:

- Pull the lever toward the rear of the vehicle.

To flash the high beam lamps:

- Pull the lever toward the rear of the vehicle and release.
- The high beam lamps can be flashed even if the headlamps and/or ignition are off.

Automatic headlamps

When the lamp control is in the **AUTO** position, the headlamps and park lamps automatically switch off and on according to the ambient light.

Note

- Keep the sensor clean and do not cover. See Instrument panel overview on page 67.
- The headlamps, park lamps, reverse lamps and puddle lamps are activated by the approach lighting feature. See Approach lighting on page 111.

⚠Warning

The automatic headlamp sensor cannot replace the driver's personal judgement of the prevailing light conditions. For example, the sensor is unable to detect foggy conditions.

In situations such as this, set the lamp switch to ≡D, otherwise your safety and that of other road users could be endangered.

- Do not leave the headlamps or park lamps on when the engine is not running.
- To prevent the battery from becoming flat, the headlamps and park lamps switch off when the ignition is turned to the lock position.

  The lamps stay off until the ignition is turned on or the lamps are switched on using the lamp control.

- To keep the lamps on when leaving the vehicle, turn the ignition key to the lock position, then rotate the lamp control first to **AUTO** then to park lamps or headlamps.

Delayed headlamps (Egress lighting)

To illuminate a path, set a time delay from when the ignition is turned to the lock position to when the lamps automatically switch off. See Vehicle personalisation on page 104.

Hazard warning flasher

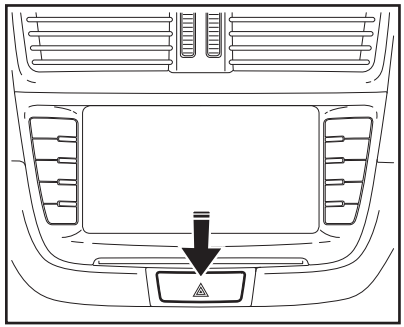

Press ⚠ to turn the hazard warning flasher on or off, when the ignition is in any position.

All turn signals flash continuously.

Use the hazard warning flasher if the vehicle becomes a traffic hazard, day or night.

Note
Using hazard warning flashers while the vehicle is moving, is illegal in some States and Countries.

Personal identity keys

The vehicle may have personal identity keys.

When 🔓 is pressed on the key, the headlamp time delay is set to the last adjustments used for that key. See Personal identity keys on page 18.

Approach lighting

Approach lighting provides additional security when returning to the vehicle at night.

- Press 🔓 on the key.
  The vehicle headlamps, park lamps and reverse lamps will illuminate for 60 seconds. The vehicle may also have puddle lamps which will also illuminate.
- The lamps only turn on if the lamp control is left in the **AUTO** position.
- To enable or disable this function, see Vehicle personalisation on page 104.

Turn signals

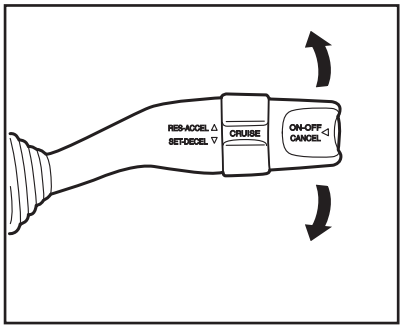

- Push the lever in the direction the steering wheel is turned.
- To signal a lane change, push the lever part way in the direction of the turn.

  The turn signals will flash three times.
- To cancel the lane change function, push the lever in either direction.
- A green arrow on the instrument panel flashes when the lamps are in operation.

Fog lamps

The vehicle may have fog lamps.

- In very heavy fog, vision may be improved by having the park lamps and fog lamps on and turning the headlamps off.
- When the fog lamps are turned on, the fog lamp indicator illuminates on the instrument panel.
- Reduce speed when driving in fog.
- Check State laws regarding use of fog lamps when driving.

Interior lighting

Instrument panel illumination

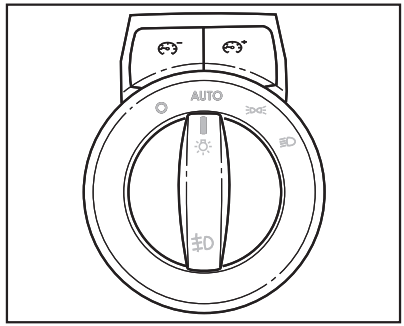

The instruments are automatically illuminated when the park lamps or headlamps are switched on.

To adjust the instrument lighting, hold or until the desired level is reached.

Night panel mode

Press and together to enable night panel mode for country driving.

Press and hold either button again to switch instrument lighting back on.

Note

- When night panel mode is enabled, the speedometer, information displays and warning reminders remain illuminated while all other instrument panel illumination is switched off.
- In night panel mode, only the gauges that are illuminated will be active.

Lamp control

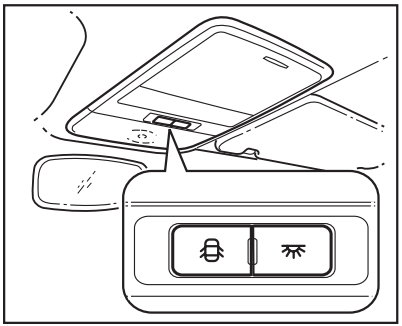

Dome lamps

The two interior lamps are located in the centre-front of the roof and the centre-rear of the roof.

Two settings are available:

- (**On/off)**
- **(Door activated)**: The lamp automatically switches on when a door is opened, the vehicle is unlocked or the key is removed from the ignition.

  The lamp dims to off after all doors are closed.

- Switching the ignition on dims the lamps off immediately (unless a door remains open).
- When the interior lamps are set to door activated they operate automatically only when it is dark.
- The lamps switch off after approximately 10 minutes after the key is turned to the lock position. See Battery saver on page 115.

Front reading lamps

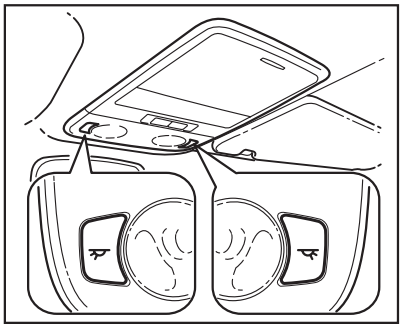

- The vehicle may have front reading lamps.
- Front reading lamps are located in the centre-front roof console.
- Press ⏥ or ⏤ to switch the lamp on or off.

Rear reading lamps

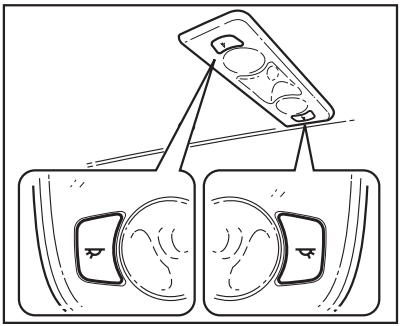

- The vehicle may have rear reading lamps.
- Rear reading lamps are located in the centre-rear roof console.
- Press ⏥ or ⏤ to switch the lamp on or off.

Boot, cargo area and glove box lamps

- The lamp illuminates when the boot (Sedan)/tailgate (Sportwagon) is opened and switches off when closed.
- The glove box lamp illuminates when the glove box is opened and switches off when closed.

Sun visor lamps

The vehicle may have lamps at either side of the mirror.

The lamps turn on and off automatically when the cover is opened and closed.

Lighting features

Battery saver

To prevent the battery from discharging, the lamps for the glove box, boot (Sedan), cargo area (Sportwagon) and reading lamps are switched off automatically approximately 10 minutes after the key is turned to the lock position.

Once the lamps have been deactivated, they are reactivated if either:

- The ignition is switched on
- The vehicle is unlocked
- The boot is opened
- The tailgate is opened
- The glove box is opened
- The reading lamps are switched on

Infotainment system

Introduction 116
Setting the clock 121
Radio 126
Audio players 131
CD player 132
Auxiliary devices 138
USB port 141
Bluetooth® music 144
Rear Seat Infotainment (RSE) 145
Navigation 165
Bluetooth® phone 192
Help system 198

Introduction

General information

Do the following before driving:

- Read the infotainment system section to become familiar with the functions.
- Become familiar with the hard keys on the faceplate and touch-sensitive screen buttons.
  - Press, refers to hardkeys.
  - Touch, refers to screen keys.
- Set up the audio by presetting favourite stations, setting the tone and adjusting the speaker settings.
- Set up the navigation features before driving, such as entering an address or a preset destination or delete information you may have entered using various options.

- The *Bluetooth*® word mark and logo are registered trademarks and are owned by the Bluetooth SIG, Inc.
- iPod® is a registered trademark of Apple Inc.

About the system

- The system includes navigation and audio functions.
- Some features may be disabled while driving. These functions will be greyed-out.
- A greyed-out function indicates it is not available when the vehicle is moving.
- All functions are available when the vehicle is parked.

⚠Danger

Taking your eyes off the road for too long or too often while using the navigation system could cause a crash resulting in injury or death to yourself or others. Focus your attention on driving.

⚠Warning

When driving the vehicle, be sure to keep the volume of the unit set low enough to hear sounds from outside the vehicle (e.g. road and traffic conditions).

Caution

Do not place beverages close to the audio system. The audio system mechanism may be damaged if they spill.

Do not strike or allow anything to impact the audio system as damage to the system mechanisms could occur.

Theft-deterrent feature

The infotainment system includes an electronically coded security system.

This electronically links the infotainment system to the vehicle.

When the electronic link between the vehicle and the infotainment system is interrupted, **Security Lockout Active** will be shown. Contact a Holden Dealer.

Traffic Message Channel (TMC) feature

The following is a brief summary of the terms and conditions (as updated from time to time) that apply to the use of the Traffic Message Channel (TMC).

To view the full terms and conditions relevant to the use of the service, refer to: www.sunatraffic.com.au/termsandconditions/

Appropriate use

The TMC is intended as an aid only, and does not provide comprehensive or accurate information on all occasions.

The TMC service should not be relied upon for journeys that are time critical because, on occasions, you may experience delays even when using the TMC service.

Use of the TMC while driving

You must operate the TMC in accordance with all relevant road rules and laws. In particular you must only operate the TMC when the vehicle is at a complete stop and it is safe to do so.

Service continuity and reception

Reasonable endeavours will be made to provide the TMC, 24 hours a day, 365 days a year. However, the service may occasionally be unavailable for technical reasons or for planned maintenance. The provider of the TMC reserves the right to withdraw the service at any time.

Uninterrupted reception of the TMC cannot be assumed at any particular location.

Limitation of liability

Neither GM Holden nor the provider of the TMC will be liable to you or to any third party for any damages either direct, indirect, incidental, consequential or otherwise arising out of the use of or inability to use the TMC.

No guarantee or any warranties are provided as to the availability, accuracy or completeness of the TMC, and to the extent which it is lawful to do so, any warranties which might otherwise be implied by any State or Federal legislation in relation to the TMC are excluded.

For operation, see Traffic Message Channel (TMC) on page 185.

Overview

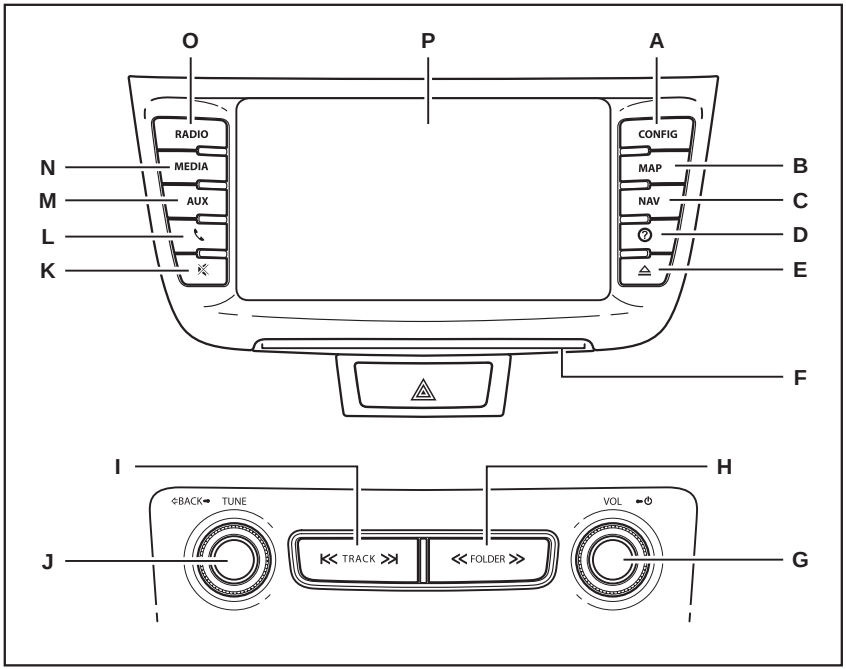

A. Configuration menu button
B. Navigation map view button
C. Navigation menu button
D. Help menu button
E. CD eject button
F. CD slot
G. Power/volume switch
H. Tune up/down (AM, FM)
   Folder up/down button (MP3)
I. Continuous seek up/down button (AM, FM)
   Seek next/previous track button (CD, USB, iPod®, Bluetooth® audio and VCDC)
J. Tune switch (AM, FM)
   Page up/page down (menu control)
   Back (menu control)
K. Mute sound button (AM, FM, CD, USB, iPod®, Bluetooth® audio and VCDC)
L. Phone button (Bluetooth®)

M. Auxiliary selection button (front, rear, DVD)

N. Media selection button (CD, USB, iPod®, Bluetooth® audio and VCDC)

O. Radio source selection button (AM, FM)

P. Touch screen (radio, media, navigation, rear view camera)

Steering wheel remote controls

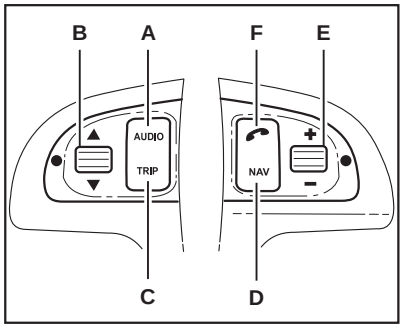

A. Audio source selection button (radio and media)

B. Scroll up/down wheel

Radio
(next/previous favourite preset)

Media
(next/previous track)

C. Trip selection button

D. Navigation button

E. Volume scroll wheel (radio, media, Bluetooth®)

Mute button
(all media except navigation)

F. Bluetooth® phone button

Operation

Switching on/off

- Press ⏻ (G) to turn the audio system on or off.
- Rotate **VOL** (G) to adjust the volume.

Mute

Press (E) on the steering wheel remote controls or press 🔇 (K).

Setting the clock

The time and date as well as the time and date format can be set.

Setting the date/time format

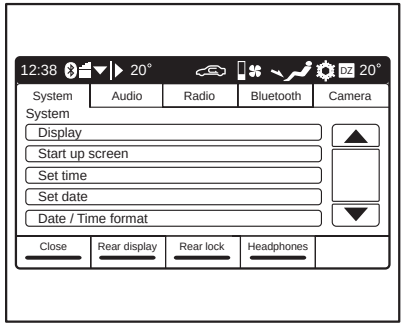

1. Press **CONFIG** (A).
2. Touch **Date/Time format**.
3. Touch **12 hr.** or **24 hr.**

   The option selected is indicated by ⦿.
4. Touch **dd mm yyyy** (03/10/2010) or **dd mmm yyyy** (3rd October 2010).

   The option selected is indicated by ⦿.
5. Touch **Back** to exit.

Setting the time

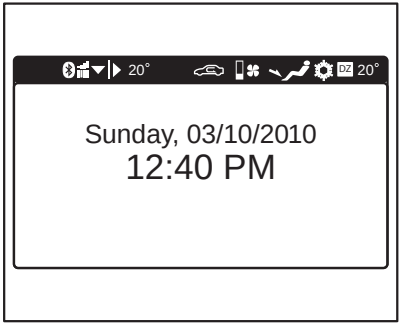

1. Press **CONFIG** (A).
2. Touch **Set time** to access the **Set time** menu.
3. Touch ▼ or ▲ to set the **Hour**, **Minute** and **AM/PM** settings.

   AM/PM are only available in a 12 hour format.

4. Touch **OK** to store the settings.
5. Touch **Back** to exit.

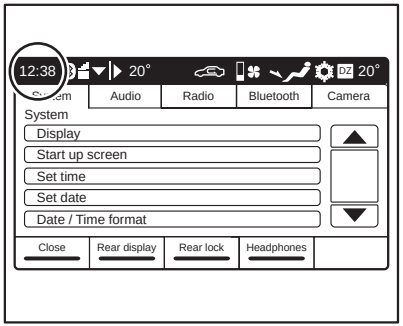

Alternatively, touch and hold the time where shown and repeat Steps 3 to 5.

Setting the date

1. Press **CONFIG** (A).
2. Touch **Set date** to access the **Set date** menu.
3. Touch ▼ or ▲ to set the **Day**, **Month** and **Year** settings.
4. Touch **OK** to store the settings
5. Touch **Back** to exit.

Setting the display brightness

To adjust the display brightness.

1. Press **CONFIG** (A).
2. Touch **Display**.
3. Touch ◄ or ► to adjust the display brightness.
4. Touch **Back** to exit.

Start up screen

Enable or disable the start up screen.

1. Press **CONFIG** (A).
2. Touch **Start up screen**.
3. Select either **Start up screen ON** or **OFF**.

   The option selected is indicated by ⦿.
4. Touch **Back** to exit.

Driving lockouts

In the **Driving lockouts** menu Driving lockouts can be switched on or off.

When selected, the text entry into these features are locked out while the vehicle is moving.

1. Press **CONFIG** (A).
2. Touch ▼ or ▲ and select the second **System** screen.
3. Touch **Driving lockouts**.
4. Touch the **On** or **Off** option for **Phone** and/or **Navigation text entry**.

   The option selected is indicated by ⦿.
5. Touch **Back** to exit.

Restore factory settings

With this option, all radio favourites will be erased and configuration settings reset to factory defaults.

1. Press **CONFIG** (A).
2. Touch ▼ or ▲ and select the second **System** screen.
3. Touch **Restore factory settings**.
4. Touch **OK** if you want to restore the factory settings or touch **Cancel** to exit without resetting the factory settings.

GPS clock synchronisation (with navigation)

Synchronise the clock of the infotainment system via GPS.

When activated the system clock will only be able to adjust in 30 minute increments to account for changes in time zones.

1. Press **CONFIG** (A).
2. Touch ▼ or ▲ and select the second **System** screen.
3. Touch **GPS clock sync**.
4. Touch **On** or **Off**.

   The option selected is indicated by ⦿.
5. Touch **Back** to exit.

Settings

Adjusting the tone (treble, bass, midrange)

The bass, midrange or treble can only be adjusted while the equaliser is set on Custom.

Bass, midrange and treble can be adjusted between −12 through +12.

1. Press **CONFIG** (A).
2. Touch **Audio** tab.
3. Touch **Bass/Treble**.
4. **Treble**: Touch ◄ or ► and increase or decrease the treble.
5. **Midrange**: Touch ◄ or ► and increase or decrease the midrange.
6. **Bass**: Touch ◄ or ► and increase or decrease the bass.
7. Touch **Back** to exit.

Note

The settings will be applied to the currently selected audio source.

Adjusting fader and/or balance

Adjust the sound between the front and rear speakers and the left and right speakers.

1. Press **CONFIG** (A).
2. Touch **Audio** tab.
3. Touch **Fader/Balance**.
4. **Fader**: Touch ◄ or ► to adjust the sound between the front and rear speakers.
5. **Balance**: Touch ◄ or ► to adjust the sound balance between the left and right speakers.
6. Touch **Back** to exit.

Setting the equaliser

The equaliser enables the user to control the sound of the audio system.

With Custom selected you can adjust the bass/midrange/treble tone. See Adjusting the tone on page 123.

1. Press **CONFIG** (A).
2. Touch **Audio** tab.
3. Touch **Equaliser**.
4. Touch the option required.

   The option selected is indicated by ⦿.
5. Touch **Back** to exit.

Setting the Speed Dependent Volume Control (SDVC)

The audio system volume adjusts depending on the vehicle's speed.

As the vehicle's speed increases, the volume of the audio system also increases to compensate for the driving noise.

1. Press **CONFIG** (A).
2. Touch **Audio** tab.
3. Touch **Speed dependent volume control**.
4. Touch the option required.

   1: Small volume increase

   2: Larger volume increase

   The option selected is indicated by ⦿.
5. Touch **Back** to exit.

Setting the Dynamic Distortion Limiter (DDL)

DDL limits the amount of amplifier distortion.

When the limit is reached the volume will not be able to be increased.

1. Press **CONFIG** (A).
2. Touch **Audio** tab.
3. Touch **Dynamic distortion limiter**.
4. Touch the option required.

   OFF: No distortion limiting

   1: Maximum distortion limiting

   2: Minimum distortion limiting

   The option selected is indicated by ⦿.
5. Touch **Back** to exit.

Switching the loudness on/off

This feature automatically boosts the bass and treble response at low volume levels.

1. Press **CONFIG** (A).
2. Touch **Audio** tab.
3. Touch ▲ or ▼ to select the second **Audio** page.
4. Touch **Loudness**.
5. Touch **On** or **Off**.

   The option selected is indicated by ⦿.
6. Touch **Back** to exit.

Voice guidance (with navigation)

The voice guidance volume can be adjusted and turned on or off.

1. Press **CONFIG** (A).
2. Touch **Audio** tab.
3. Touch ▲ or ▼ to select the second **Audio** page.
4. Touch **Voice guidance volume**.
5. **Voice guidance**:

   Touch **On** or **Off**.

   The option selected is indicated by ⦿.
6. **Voice guidance volume**:

   Touch ◄ or ► to adjust the voice guidance volume.
7. Touch **Back** to exit.

Voice guidance volume can be adjusted during announcements:

1. Rotate **VOL** (G).

   Alternatively scroll **+/-** (E) on the steering wheel remote controls.

Selecting the voice guidance output speakers

Select the speakers:

1. Press **CONFIG** (A).
2. Touch **Audio** tab.
3. Touch ▲ or ▼ to select the second **Audio** page.
4. Touch **Voice guidance speaker output**.
5. Touch either **Driver**, **Front** or **All**.

   The option selected is indicated by ⊙.
6. Touch **Back** to exit.

Changing the Traffic Announcement (TA), phone or startup volume

Adjust the volume settings for the TA, phone or infotainment system startup:

1. Press **CONFIG** (A).
2. Touch the **Audio** tab.
3. Touch ▲ or ▼ to select the second **Audio** page.
4. Touch **Volume**.
5. **TA**:

   Touch ◄ or ► to adjust the volume.
6. **Phone**:

   Touch ◄ or ► to adjust the volume.
7. **Startup**:

   Touch ◄ or ► to adjust the volume.
8. Touch **Back** to exit.

Radio

General information

Radio reception

Frequency interference and static can occur during normal radio reception if items such as mobile phone chargers, vehicle convenience accessories and external electronic devices are plugged into the accessory power outlet.

If there is interference or static, unplug the item from the accessory power outlet.

AM-FM radio

AM band

The range for most AM stations is greater than for FM, especially at night.

The longer range can cause station frequencies to interfere with each other.

For better radio reception, most AM radio stations boost the power levels during the day and then reduce these levels at night.

Static can also occur when storms and power lines interfere with radio reception. When this happens, reduce the treble on the radio.

FM stereo band

Although the radio has a built-in electronic circuit that automatically works to reduce interference, some static can occur, especially around tall buildings or hills.

RDS (Radio Data System)

RDS encodes information on the system's FM frequency only.

When tuned to an RDS station, the station name is displayed.

Many radio stations transmit RDS information but not all, so it is possible that this feature does not operate in some regions or on some stations.

FM radio text can be switched on or off. See FM radio text on page 128.

Traffic Announcement (TA)

TA bulletins may be broadcast to assist with route planning and avoidance of traffic. See FM Traffic Announcements (TA) on page 128.

The volume of these bulletins can be adjusted. See Changing the Traffic Announcement (TA), phone or startup volume on page 126.

Radio settings

Autoseek sensitivity

The autoseek sensitivity can be changed.

- When **Local** is selected, the radio will seek strong signal stations.

  Loc is displayed.
- When **Distant** is selected, the radio will seek weak signal stations.

  Dis is displayed.
- When **Auto** is selected the first sweep of the frequency band will search local stations and the second sweep will search distant stations.

1. Press **CONFIG** (A).
2. Touch **RADIO** tab.
3. Touch **Autoseek sensitivity**.
4. Touch either **Local**, **Distance** or **Auto**.

   The option selected is indicated by ⦿.
5. Touch **Back** to exit.

FM radio text

FM radio text can be switched on or off.

If additional Radio Data System (RDS) information is received from the currently tuned radio station it appears on the infotainment screen.

1. Press **CONFIG** (A).
2. Touch **RADIO** tab.
3. Touch **FM**.
4. **Radio text**:

   Touch **On** or **Off**.

   The option selected is indicated by ⦿.
5. Touch **Back** to exit.

FM Alternate Frequency (AF)

When AF is switched on and the current FM station becomes too weak, the radio switches to a stronger RDS capable station with the same program identifier code.

AF can be switched on or off.

1. Press **CONFIG** (A).
2. Touch **RADIO** tab.
3. Touch **FM**.
4. **Alternate frequency**:

   Touch **On** or **Off**.

   AF is displayed when selected.

   The option selected is indicated by ⦿.
5. Touch **Back** to exit.

FM Traffic Announcements (TA)

When TA is switched on and an announcement is transmitted, it will be audible via the radio.

TA can be switched on or off.

1. Press **RADIO** (O).
2. Touch **FM**.
3. Touch **More**.
4. Touch **TA On**.

   TP search pop-up is displayed.

   The radio searches for TP stations.
5. To cancel TA search, touch **Cancel**.

Note

- If no TP station is found, **No TP station** is displayed.
- When seeking a station, only TP stations will be found. See Seek on page 130.
- If listening to another source, the TA will still be audible for the duration of the announcement.

FM Program Type (PTY) Seek

Tune to radio stations by program type.

There are six categories: Pop, Country, Classic, Jazz, Rock and Any.

1. Press **RADIO** (O).
2. Touch **FM**.
3. Touch **More**.
4. Touch **PTY List**.

   The list is displayed.
5. Touch a program type.

   The radio searches for the selected program type stations.

Frequency bar display

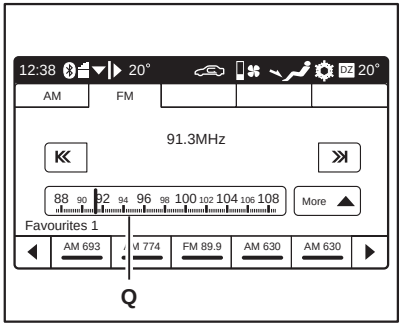

Switch the display of the frequency bar (Q) on or off.

1. Press **CONFIG** (A).
2. Touch **RADIO** tab.
3. Touch **Manual tune**.
4. Touch **On** or **Off**.

   The option selected is indicated by ⦿.
5. Touch **Back** to exit.

Station search

Selecting a band

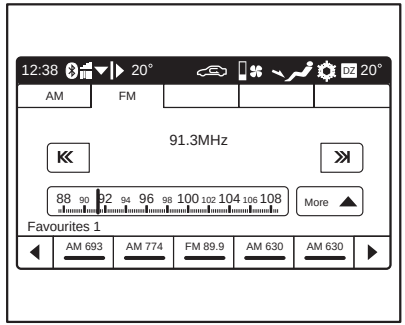

- Press **RADIO** (O) or touch the tab to either select AM or FM.

  The selected band is shown by the tab on the infotainment screen.

Manual tune

Manually tune to a radio station:

1. Press **RADIO** (O) to either select the AM or FM band.
2. Rotate **TUNE** (J).

   Alternatively, press ≪ or ≫ to tune to the next available radio station.

Seek

Automatically seek for the next or previous radio station.

During seek audio is muted.

1. Press **RADIO** (O) to either select the AM or FM band.
2. Press or touch |≪ or ≫|.

   The radio seeks for the previous or next strongest radio station in the selected band.

Note
When TA is switched on, only TA stations will be found. To seek all stations, switch TA off. See FM Traffic Announcements (TA) on page 128.

Frequency scan

The radio will scan through the frequencies, pausing for 10 seconds when a station is found.

1. Press **RADIO** (O) to either select the AM or FM band.
2. Touch **More**.
3. Touch **Frequency scan**.

   To cancel the scan, touch any button.

   Stations may be stored to Presets during the scan. See Storing a radio station in the favourite lists on page 131.

   The scan will need to be restarted after storing a station.

Preset stations

- There are three favourite lists for storing radio stations.
- The favourite lists are stored across AM and FM stations.
- There are two autostore lists, one for AM stations and one for FM stations.
- There are five presets in each list.

Storing radio stations in the autostore list

The radio will scan the entire band, select the stations with the best reception quality and store them in the AM or FM autostore list.

1. Press **RADIO** (O) to either select the AM or FM band.
2. Touch **More**.
3. Touch **Show autostore**.

   AM or FM autostore list will be enabled.
4. Touch **More**.
5. Touch **Autostore search**.

   Autostoring AM/FM stations is displayed.

   Autostore scans the corresponding band and stores the first five strongest stations.

   When Autostore is completed the first stored station is selected.
6. To cancel Autostore, touch **Cancel**.

Storing a radio station in the favourite lists

Store a radio station under any preset:

1. Press **RADIO** (O) to either select the AM or FM band.
2. Seek for a radio station either manually or automatically.

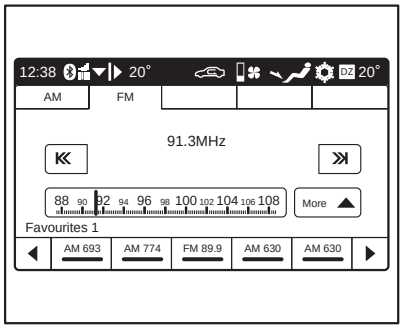

3. Touch and hold the preset station to be stored.

   A beep sounds.
4. The radio station is stored.

Recall a favourite station

Recall a station from the favourite lists.

1. Press **RADIO** (O) to either select the AM or FM band.
2. Touch the preset.

   To select an alternate favourite list, touch ◄ or ►.

Audio players

CD player

The vehicle may have a CD player or a virtual CD changer (VCDC).

Compact disc player (CD player)

A single CD player can play one CD at a time.

Virtual Compact Disc Changer (VCDC player)

A virtual CD player stores CDs in the internal memory of the audio system which can be played.

Caution

If a label is added to a CD, or more than one CD is inserted into the slot at a time or an attempt is made to play scratched or damaged CDs, the CD player could be damaged.

Use only CDs in good condition without any labels, load one CD at a time and keep the CD player and the loading slot free of foreign materials, liquids and debris.

CD player

General information

Caution

Avoid inserting any foreign objects into the slot of the player.

Failure to observe this may cause malfunction due to the precise mechanism of this unit.

Disc formats

The CD player supports the following disc types:

- Copy protected CDs
- CD-Audio (CD-DA)
- CD-R
- CD-RW

The CD player supports the following media types:

- MP3
- WMA

Note

- Only closed session discs can be read. Open session discs will be ignored. The message **Disc Error** will be displayed.
- If a disc has; unreadable formats, unsupported formats or no tracks, then **Disc Error** is displayed for 2 seconds and the disc is ejected.
- Depending on the type of CD-R/CD-RW CDs, some CDs may not operate normally.
- The last played track is held in memory until the CD is removed.

Copy protected audio CDs

Some copy protected CDs may not operate.

Handling CDs

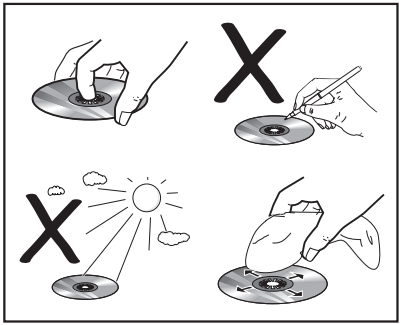

- Avoid leaving fingerprints on the CD when removing it.
- Store any CDs in their protective covers.
- Ensure that CDs are clean and dry before inserting.
- Protect CDs from heat and direct sunlight.

Cleaning the unit

Do not clean using cleaning fluid, alcohol or other solvents. Use only a damp cloth.

Inserting a CD

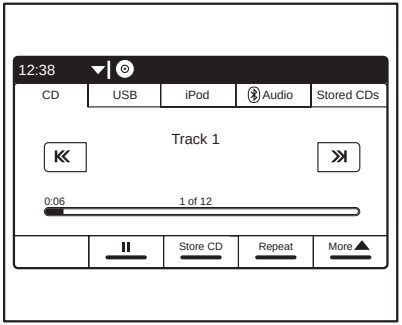

1. Insert an audio CD into the CD slot.

   Loading CD is displayed.

   ⊙: is visible when the climate control display bar is minimised to indicate a CD is loaded.

   The first track of the CD is played automatically.

Ejecting a CD

1. Press △ to eject a CD from the CD slot.

   Ejecting CD is displayed.

Pausing/playing a CD

Touch ⏸ to pause the CD.

Touch ▶ to play the CD.

Go to next track

1. Press or touch ⏭ to go to the next track.

Replay current track

1. Press or touch ⏮ to replay the current track.

Go to previous track

1. Press or touch ⏮ twice within 5 seconds to select and play the previous track.

   Within 5 seconds of the start of a track, pressing or touching ⏮ will select and play the previous track.

Fast forward/backward

Advance the track being played forward and backward.

1. Press/touch and hold either ⏭ or ⏮ to fast forward or fast backward the current track.

Scan track

1. Touch **More** to open the options menu.
2. Touch **Intro scan** to activate the scan track option.

   Scan trk is displayed.

   The next track is selected and played for 10 seconds then the following track is played for 10 seconds until the starting track is reached.
3. To cancel Scan track, touch any button.

Random disc on/off

With random disc on, all tracks on the CD are played in a non-sequential order. No same track is repeated before all the other tracks are played.

1. Touch **CD** tab.
2. Touch **More**.
3. Touch **Random** to switch random play on or off.
4. **Rdm all** is displayed.

MP3

MP3 files are able to be played on the CD player.

The total number of files and folders that can be searched is limited to a pre-defined value.

- The maximum entries per folder is 255 (entries can be folders or files).
- The maximum number of playable files is 999.
- Additional files and folders will be ignored.

Root directory

The root directory is treated as a folder.

All .mp3 files in the root directory are accessed before folders in the root directory.

Empty directory or folder

Empty directories and folders will not show on the display.

The system will ignore them and advance to the next directory or folder that has .mp3 files in it.

No folder

If a CD contains only .mp3 files in the root directory, the next and previous folder functions are not available.

File system and naming

Track names need to be shorter than 39 characters. Names that are longer will be shortened.

The track name will be shown as:

- The song name that is in the ID3 tag.
- The file name without the file extension, if the song name is not in the ID3 tag.

Playing an MP3 CD

Browsing the media list and playing a track

Browse and navigate through the media list, select a track and play it.

1. Insert an MP3 CD into the CD slot.

   Loading CD is displayed.

   The first track of the CD is played automatically, the song title, artist name and album name are shown.
2. Touch **Browse** to open the file list.

   MP3 files and folders are displayed.
3. Touch ▲ or ▼, or rotate **TUNE** (J) to scroll the files and folders.
4. Touch the title, to play the title or touch the folder to open the folder.
5. Touch **Back** to exit.

Repeat current track/folder/off

1. Touch **Repeat** to repeat the current track.
2. Touch **Repeat** twice to repeat the current folder.
3. Touch **Repeat** 3 times to switch off the repeat folder/file function.

Random play

With random on, tracks on the CD are played in a non-sequential order. No same track is repeated before all the other tracks are played.

1. Touch **CD** tab.
2. Touch **More**.
3. Touch **Random** to switch to random mode.

   Rdm fldr or **Rdm all** is displayed.
4. Repeat Steps 2 and 3 to change mode or to turn random play off.

Mass storage media

Virtual CD changer (VCDC)

The vehicle may have a virtual CD changer.

Notes on virtual CD

- The audio system will only store audio CDs to the VCDC.

  MP3 and WMA files on a CD cannot be stored to the VCDC.
- The audio system will stop CD playback while storing the audio CD to the VCDC.
- The audio system will always start playback at the first track after storing the audio CD to the VCDC.

Storing an audio CD

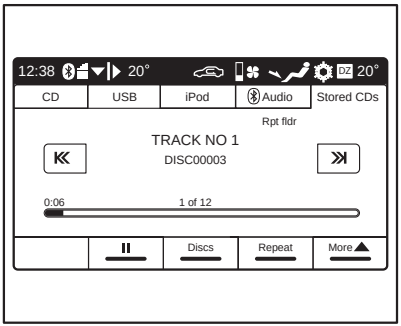

Copy an entire audio CD to the VCDC.

1. Insert an audio CD in the CD slot.

   The first track of the CD is played.
2. Touch **Store CD**.

   The currently playing disc will be stored in a free slot. The storage process is displayed.

   The number of empty slots is also shown.
3. Touch **OK** to continue storing and exit.

Notes on storing CDs

- When pressing the **Stored CD** tab when no discs are stored, **No stored discs** is displayed.
- Playback of the audio CD will not be available while the disc is being stored. Other media sources are available during the storing process.
- While storing CDs, only the previously selected stored CD may be played.

Renaming a disc

1. Touch **Stored CDs** tab.
2. Touch **Discs**.

   The list of CDs is displayed.
3. Touch **Rename**.

   If the disc to be renamed is not shown in the list, touch ▲ or ▼, or rotate **TUNE** (J) to scroll through the stored CDs.
4. Touch the disc to be renamed.

   The keyboard is displayed.
5. Use the keyboard to enter the new name (18 characters maximum).
6. Press **OK** to confirm the changes.

   Disc renamed is displayed.

Deleting a disc

1. Touch **Stored CDs** tab.
2. Touch **Discs**.

   The list of CDs is displayed.

   If the disc to delete is not shown in the list, touch ▲ or ▼, or rotate **TUNE** (J) to scroll through the stored CDs.
3. Touch **Delete**.
4. Touch the disc to be deleted.
5. **Delete ***?** is displayed.
6. Press **OK**.

   After deletion the corresponding slot shows **<No Disc>**.

Deleting all discs

1. Touch **Stored CDs** tab.
2. Touch **Delete**.

   The list of CDs is displayed.
3. Touch **Delete all**.

   Delete all discs? is displayed.
4. Press **OK**.

   After deletion, all slots show **<No Disc>**.

Playing a track from a stored disc

1. Touch **Stored CDs** tab.
2. Touch **Discs**.

   The list of CDs is displayed.

   If the disc to be played is not shown in the list, touch ▲ or ▼, or rotate **TUNE** (J) to scroll through the stored CDs.
3. Touch the disc to be played.
4. Touch the track to be played.

   Playback of the disc will start from the chosen track.

Auxiliary devices

General information

- Devices able to be connected to the infotainment system are; iPod® devices, USB sticks, MP3 players and Bluetooth® (BT) streaming devices.

  For Rear Seat Entertainment (RSE) auxiliary devices, see RSE auxiliary devices on page 163.
- Connect using either the USB port, the 3.5 mm socket or Bluetooth®.

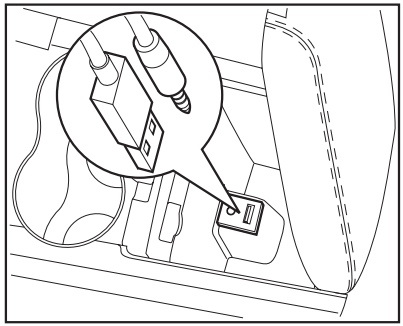

The 3.5 mm (front AUX) socket is located under the lid of the centre console, next to the USB port.

Note
The socket has a lift up cover.

iPod®

All audio media types that are supported by the iPod® can be played.

Connecting an iPod®

1. Connect the iPod® using the USB cable supplied with the iPod®, to the USB port.

   The iPod® is automatically detected by the system.
2. **iPod connected...** is displayed.
3. The iPod® menu is displayed.

   The iPod® becomes the current source.
4. The audio system plays the track last played on the iPod®.

   If there are no playable tracks on the iPod®, **No songs in iPod** is displayed and the previously used source will be selected.

   If the connected iPod® is not working or the system is not able to detect the iPod®, **iPod ERROR** is displayed and the previously used source will be selected.

source

iPod®

ed... is

ed source will

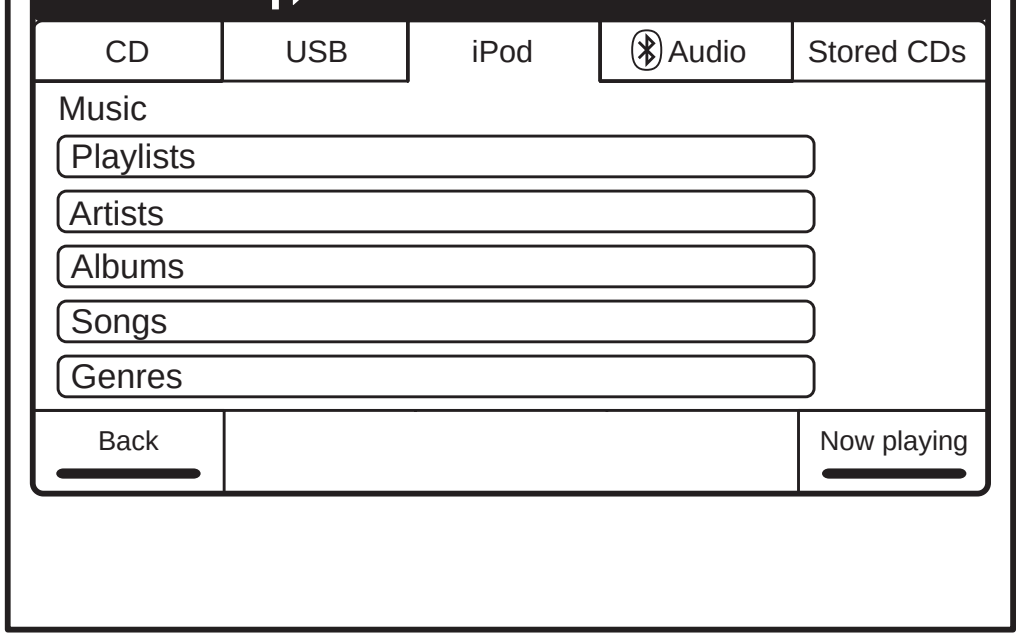

1. Touch **Browse**.

   The iPod® music menu is displayed, showing:

   - Playlists
   - Artists
   - Albums
   - Songs

Searching
artists list

1. Touch **B**
2. Touch **A**

   The list
3. Touch ▲
   (J) to sc

   To move
   artists lis

   1. Touc

      A ke

   2. Touc

played.

via the

displayed.

ate **TUNE**

albums.

oint in the

played.

B, **C** etc.

played.

Touch the song to be played.

Searching for a song via the songs list

1. Touch **Browse**.
2. Touch **Songs**.

   The list of songs is displayed.
3. Touch ▲ or ▼, or rotate **TUNE** (J) to scroll the songs list.

   To move to another point in the songs list:

   1. Touch **ABC**.

      A keyboard is displayed.
   2. Touch a letter, **A**, **B**, **C** etc.

The list of g

3. Touch ▲ or
   genres list.

   To move to
   genres list:

   1. Touch **A**

      A keybo
   2. Touch a

      Searchi

      The ge
      that poi
4. Touch the g
5. Touch the a
   played.
6. Touch the a
   played.

Playing songs in random order

Songs on the iPod® are played in random order.

To switch random play on or off:

1. Touch **Random** on the iPod tab.

   Random is displayed.

Playing a song in repeat mode

To switch between repeat all tracks and repeat current track:

1. Touch **Repeat** on the iPod tab.

   Rpt is displayed. All tracks are repeated.

   Rpt trk is displayed. The current track is repeated.

Pausing/playing the iPod®

1. Touch **II** to pause the iPod®.
2. Touch ▶ to play the iPod®.

USB port

General information

A USB stick can be connected to the USB port.

The USB port is located under the lid of the centre console.

⚠Warning

Do not connect USB devices such as; hard discs, multi plug USB hubs or other digital equipment to the USB port.

Connecting other devices can cause malfunction or destroy the audio equipment.

Do not use any equipment that prevents safe driving.

Caution

In rare cases, a USB stick (thumb drive) may not be recognised by the system or may cause a malfunction.

To ensure compatibility with the infotainment system the file system for USB sticks should be FAT32.

The following file formats are supported:

- MP3 (MPEG 1 layer 3)
- WMA (Windows Media Audio)

The total number of files and folders that can be searched is limited to a pre-defined value.

The MP3 player is able to read and play a maximum of:

- 255 entries per folder (entries can be folder or file)
- 999 playable files

Additional files and folders will be ignored.

- The last played track is held in memory until the USB stick is removed.

Selecting the USB as source

1. Connect the USB stick to the port.

   The USB device is automatically detected by the system.
2. **Reading media...** is displayed.

   If there are no playable tracks on the USB, **USB device empty** is displayed.

   The previously used source will be selected.
3. The USB menu is displayed and USB will be the current source.
4. The audio system plays the first track in the root directory.

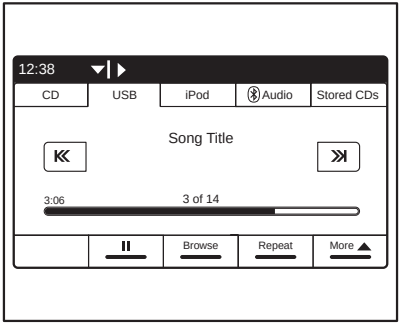

Pausing/playing a song

1. Touch ⏸ to pause a song.
2. Touch ▶ to continue playing a song.

Go to next track

1. Touch or press ⏭.

Replay the current track

1. Touch or press ⏮.

Go to the previous track

1. Touch ⏮ twice within 5 seconds to select and play the previous track.

   Within 5 seconds of the start of a track, pressing or touching ⏮ will select and play the previous track.

Fast forward/backward

Advance the track being played forward and backward.

1. Touch or press and hold either ⏭ or ⏮ to fast forward or fast backward the current track.

Repeat current track/folder/off

1. Touch **Repeat** to repeat the current track.

   Rpt trk is displayed.

2. Touch **Repeat** again to repeat the current folder.

   Rpt fldr is displayed.

3. Touch **Repeat** again to switch off.

Random folder/random all/ random off

1. Touch **More**.
2. Touch **Random** to play the tracks in the current folder at random.
3. Touch **More**.
4. Touch **Random** to play all the tracks at random.
5. Touch **More**.
6. Touch **Random** to switch off the random function.

Go to next/previous folder

1. Press either ≫ or ≪ to select the next or previous folder.

   The first track in the folder will be played.

Browsing the media list and playing a track

1. Touch **Browse** in the USB tab.

   The folders and tracks available on the USB will be displayed.

2. Touch ▲ or ▼, or rotate **TUNE** (J) to scroll through the tracks and folders.
3. Touch the track to be played or touch the folder to be opened.

Disconnecting the USB

1. Remove the USB from the port.
2. **Media disconnected** is displayed.

   The previously used source will be selected.

Bluetooth® music

General information

Music may be played from the Bluetooth® (BT) device.

Before uploading music, the Bluetooth® device must be paired with the infotainment system. See Bluetooth® phone on page 192.

Note

- Bluetooth® streaming is not available when an iPod® is connected to the USB port.
- Bluetooth® streaming may need to be reselected as the current source when starting the vehicle.

Operation

Playing/pausing a song

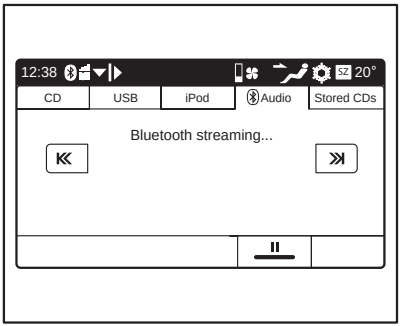

1. Press **Media** (N) or **Audio** on the steering wheel remote controls to select BT audio.

   The **Audio** tab is displayed, showing that **Bluetooth streaming...** has started.

   Note
   Pressing **Audio** on the steering wheel remote controls scrolls through the media sources.

2. When complete the first track will play automatically.
3. Touch ⏸ to pause the song.
4. Touch ▶ to continue playing the song.

Go to the next track

1. Press or touch ⏭ to go to the next track.

Replay the current track

1. Press or touch ⏮ to replay the current track.

Go to the previous track

1. Press or touch ⏮ twice within 5 seconds to select and play the previous track.

   Within 5 seconds of the start of a track, pressing or touching ⏮ will select and play the previous track.

Note
Not all devices will support the track selection controls ⏮ and ⏭.

Rear Seat Entertainment (RSE)

The vehicle may have RSE.

CD/DVD player

Important information

- Do not apply any form of cleaning solution to the CD/DVD player display, as this may void the warranty.
- Do not insert CDs or DVDs that have labels attached.
- Do not insert any objects other than CDs or DVDs into the CD/DVD player, as this may void the warranty.

Maintenance

- Wipe the CD/DVD unit with a clean, dry cloth.
- Do not used alcohol, thinner, benzene or any cleaning fluid on the unit.
- Excessively scratched or dirty/ dusty DVDs or CDs may not play correctly.

Steering wheel remote controls (all units)

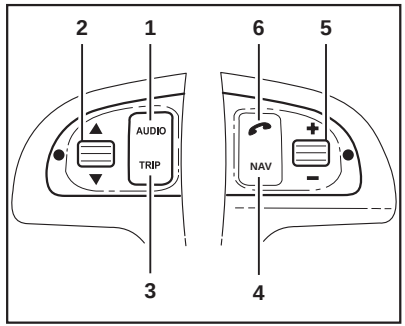

Infrared headphones

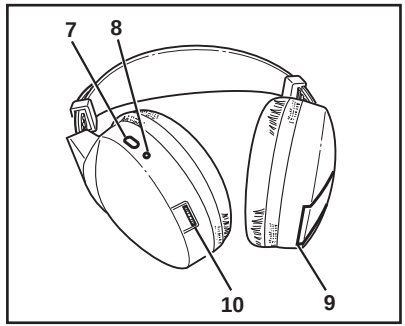

DVD player controls

The vehicle may have a DVD player and the following controls.

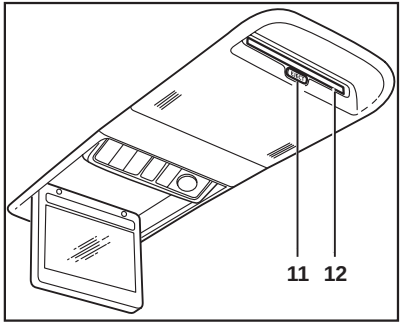

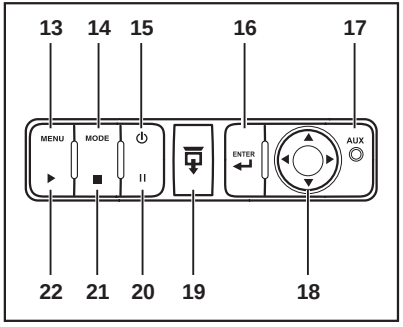

DVD remote controls

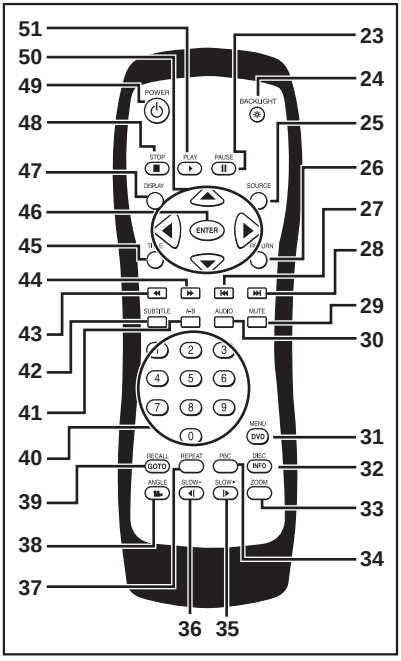

Audio controls

See page 119.

Steering wheel remote controls

1. Audio button
2. Enter button and scroll wheel
3. Trip button
4. Navigation button
5. Volume/mute
6. Bluetooth® phone

Infrared headphones

7. On/off button
8. Power indicator light
9. Battery cover
10. Volume control dial

DVD player controls

11. Eject button
12. CD slot
13. To enter the DVD menu
14. To select the DVD/AUX source
15. DVD power on/off button
16. Enter button
17. Audio/video input socket
18. DVD multifunction directional control
19. Screen release button
20. DVD pause button
21. DVD stop button
22. DVD play button

DVD remote controls

23. DVD pause button
24. DVD remote control Illumination button
25. DVD/AUX source select button
26. Return menu button
27. Previous track/chapter button
28. Next track/chapter button
29. Audio mute button
30. DVD audio select button
31. DVD main menu button
32. DVD information button
33. DVD zoom select button
34. VCD PBC on/off button
35. Slow forward button
36. Slow reverse button
37. Repeat button
38. DVD angle select button
39. GOTO button
40. Numeric keypad
41. A-B repeat select button
42. DVD subtitle select button
43. Fast reverse button
44. Fast forward button
45. DVD title menu button
46. Menu enter/select button
47. Display menu button
48. DVD stop button
49. DVD power on/off button
50. Menu navigation buttons
51. DVD play button

Infrared headphones

1. Turn on using the on/off button (7) on the ear speaker.

   The red power indicator (8) illuminates.
2. Place the headphones on your head with the red power indicator facing to the rear.
3. Adjust the volume using the volume control (10) on the ear speaker.

Performance may be affected by:

- Direct sunlight.
- Very bright light.
- Objects blocking the line of sight between the screen and the headphones.
- Low battery.

If the indicator does not turn on or poor sound quality is experienced, the batteries may need replacing. See Battery replacement on page 269.

If the headphones do not receive a signal for about 20 seconds, they will turn off automatically.

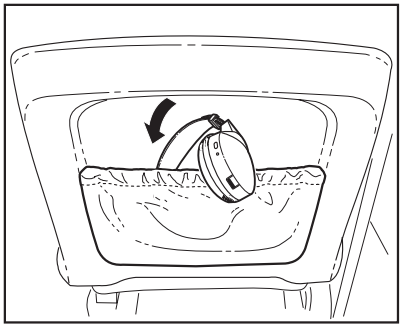

To protect the headphones, store in the front seatback pockets.

DVD player

The Digital Versatile Disc (DVD) player is located in the roof pod.

The DVD player can be controlled by the buttons on the DVD player, by the buttons on the DVD remote control or by the touch screen.

The DVD control panel contains the socket for the 3.5 mm type AV aux-in plug.

⚠Warning

The DVD player is for passengers only. The driver cannot safely view the video screen while driving and should not try to do so.

Caution

Prolonged use of the DVD system while the engine is not running can drain the vehicle battery and may prevent the engine from starting.

Rear video screen

The video screen is located on the DVD player in the roof pod.

The video screen contains the infrared receiver for the DVD remote control and the infrared transmitter for the wireless headphones.

1. To lower the video screen, press ⏏ (19) to release, then pull down.
2. To replace, push up until it locks into place.

Maintenance

Avoid touching the rear video screen, as damage may occur.

To clean the rear video screen, wipe with a soft cloth that is damp with water.

Front infotainment screen

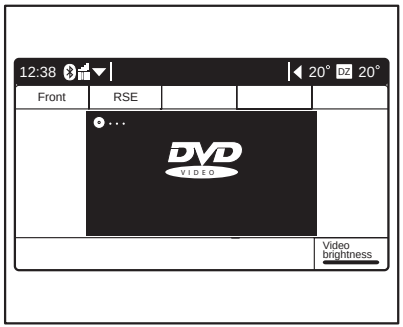

The screen will only display the selected DVD when the vehicle speed is below 3 km/h.

Touch the screen to minimise or maximise the DVD screen.

DVD remote control

Aim the DVD remote control at the video screen while pressing the required button.

Performance may be affected by:

- Direct sunlight.
- Very bright light.
- Objects blocking the line of sight.
- Low battery.

To light up all buttons on the DVD remote control, press ☼ (24).

The light turns off after a short period of time.

Battery replacement

To change the batteries in the DVD remote control or the headphones:

1. Remove the battery door located on the back of the DVD remote control or the speaker of the headphones.
2. Replace the two AAA batteries.
3. Close the battery door securely.

Do not store the DVD remote control or the headphones in heat or direct sunlight. If damage occurs, it may void the warranty.

If the DVD remote control or the headphones are to be stored for a long period of time, remove the batteries and keep them in a cool, dry place.

Playable disc types

Types of discs that can be played:

- DVD video, DVD-R/RW
- Video CD (VCD)
- SVCD

- CD-DA, CD-R, CD-RW

  Playback cannot be guaranteed because of the disc characteristics or recording condition.
- MP3
- JPEG

Note

- The maximum number of files (MP3 and JPEG or a mix of both) per disc is 1,000.
- The maximum number of folders per disc is 99.
- The maximum number of sub folders is 10.

  If these are exceeded, the MP3 or JPEG, may not play.

The DVD player will only play DVDs of the appropriate DVD zone/region code for the country that the vehicle was sold in.

The DVD zone/region code is printed on the jacket of most DVDs.

Code	Zone/region
1	United States, Canada
2	Japan, Europe, South Africa and Middle East (including Egypt)
3	South East Asia and East Asia (including Hong Kong)
4	Australia, New Zealand, Pacific Islands, Central America, Mexico, South America and the Caribbean
5	Eastern Europe (Former Soviet Union), Indian subcontinent, Africa, North Korea and Mongolia
6	China

Playing a video DVD

Loading a DVD

Load the DVD into the DVD load/remove slot (12), with the label facing upward, until the mechanism pulls it inside.

While the disc is loading, a disc-rotating animation will appear in the top left corner of the video screen.

Ejecting a DVD

To remove, press **EJECT** (11).

Note

If a disc is ejected from the player, but is not removed, the DVD player will reload the disc within 10 to 15 seconds.

The disc will then be stored in the DVD player.

The DVD player will not resume play of this disc automatically if it is in auxiliary mode.

Turning the rear screen on

Press ⏻ (15) on the DVD player controls or ⏻ (49) on the DVD remote control.

The screen always returns to off after the ignition is turned off and the audio system shuts down.

The screen needs to be turned on again to resume operation.

Listening through speakers

1. Turn the audio system on by pressing ⏻ (G) on the audio system.
2. Select the DVD mode by pressing **AUX** (M) and touching **RSE** or by pressing **AUDIO** (1) on the steering wheel remote controls until the DVD mode is selected.

Listening through headphones

When the screen is on, the infrared headphone signal is transmitted. See Infrared headphones on page 147.

Playing a DVD

Press ► (22) on the DVD player controls or ► (51) on the DVD remote control.

Some DVDs will not allow you to fast forward or skip the copyright or previews.

Some DVDs will begin playing after the previews have finished. If the DVD does not begin to play the main title, refer to the on-screen instructions, as the DVD may be displaying its main title menu.

Stopping DVD playback

Press ■ (21) on the DVD player controls or press and release ■ (48) on the DVD remote control.

Resume playback

Press ► (22) on the DVD player controls or ► (51) on the DVD remote control.

As long as the DVD disc has not been ejected and ■ (48) on the DVD remote control has not been pressed twice, the movie will resume play from where it was last stopped.

If the disc has been ejected, or if ■ (48) has been pressed twice, the disc will resume play at the beginning.

Pausing a DVD

Press **II** (20) on the DVD player controls or **II** (23) on the DVD remote control.

To continue playing, press **II** (20) again or ► (51) on the DVD remote control.

Chapter/track/time selection

While an audio CD is comprised of tracks and a VCD disc is comprised of chapters, a DVD is comprised of titles.

Each title may be sub-divided into chapters.

Select a desired chapter or time on a DVD by:

1. Pressing **GOTO** (39) on the DVD remote control, once for chapter/track selection.
2. Pressing **GOTO** (39) again for time selection.

   The video screen will show the selection mode accordingly.
3. During chapter/track selection, use the numeric keypad (40) on the DVD remote control to enter the desired chapter/track number.
4. Confirm by pressing **ENTER** (46) on the DVD remote control.
5. During time selection, use the numeric keypad (40) on the DVD remote control to enter the desired time.
6. Confirm by pressing **ENTER** (46) on the DVD remote control.

Note

- To reset the number, press **GOTO** (39) on the DVD remote control once again.
- If the chapter/track number or the time keyed in exceeds the disc's limit, an invalid symbol will appear on the video screen.

  The selection will not be executed.
- For CD/VCDs, there are only time selection functions when **GOTO** (39) is pressed, on the DVD remote control.

  Press the numeric keypad (40) on the DVD remote control to go to the desired chapter/track selection.

Previous/next

To skip to the previous or the next chapter/track:

1. Press I◀◀ (27) or ▶▶I (28) on the DVD remote control.
2. Press ▼ or ▲ (18) on the DVD player controls.

Note
Pressing ▲ (18) at the last track/chapter of the disc will stop the DVD playback and return to the DVD menu.

Fast forward/fast backward

To rapidly move backwards or forwards within the current chapter:

1. Press ◀◀ (43) or ▶▶ (44) on the DVD remote control or press ◀ or ▶ (18) on the DVD player controls.

   Pressing the same buttons again will increase the speed in the order of 2x → 4x → 8x → 16x → back to normal speed.

2. To resume playback at normal speed, press the same button repeatedly until playback speed returns to normal, or press ► (22) on the DVD player controls or ► (51) on the DVD remote control.

Note
When fast forwarding to the end of the current chapter, the next chapter will playback at the normal speed.

When fast reversing to the beginning of the current chapter, the current chapter will playback at the normal speed.

Slow forward/slow backward

To slowly move backwards or forwards within the current chapter:

1. Press ◄I (36) or I► (35) on the DVD remote control.

   Pressing the same button again will reduce the speed in the order of 1/8x → 1/4x → 1/2x → back to normal speed.

2. To resume playback at normal speed, press ◄I (36) or I► (35) repeatedly until playback speed returns to normal, or press ► (22) on the DVD player controls or ► (51) on the DVD remote control.

Note
The slow backward function is available in DVD mode only, whereas slow forward is for both DVD and VCD modes.

Zoom the VCD/DVD playback picture

This function is only available in DVD and VCD playback modes.

To select different zoom ratios, press **ZOOM** (33) on the DVD remote control once or several times.

Zoom ratios will change in the order of 1.5x → 2x → 3x → back to normal.

A-B playback

To set two points of a track/chapter for repeating playback:

1. Pressing **A-B** (41) on the DVD remote control for the first time will set the first point.
2. Pressing **A-B** (41) again will set the second point of the movie.
3. After setting points A and B, the movie will play repeatedly between points A and B.
4. To cancel this function and return the movie to normal operation, press **A-B** (41) again.
5. Press **RETURN** (26) on the DVD remote control to cancel the first point if it was wrongly set.

   However, pressing **RETURN** (26) while A-B mode is running will not cancel the function.

Repeat

To repeat CD/VCD/DVD/MP3 playback, press **REPEAT** (37) on the DVD remote control once or as many times as required to activate repeat mode.

• If the disc media is VCD (and PBC is off) or audio CD, the function will execute as follows:

Press REPEAT	Mode/display	Description
For the 1st time	REPEAT ONE	Repeat the current chapter
For the 2nd time	REPEAT ALL	Repeat this disc
For the 3rd time	REPEAT OFF	To turn off this function

• If the disc media is a DVD, the function will execute as follows:

Press REPEAT	Mode/display	Description
For the 1st time	CHAPTER REPEAT ON	Repeat the current chapter
For the 2nd time	TITLE REPEAT ON	Repeat the current title
For the 3rd time	REPEAT OFF	To turn off this function

• If the disc media is MP3, the function will execute as follows:

Press REPEAT	Mode/display	Description
For the 1st time	REPEAT ONE	Repeat the current track/files
For the 2nd time	FOLDER REPEAT	Repeat all tracks/files of the current folder
For the 3rd time	DISC	To play all tracks/files in this disc once then stop
For the 4th time	DISC REPEAT	Repeat all track/files in this disc
For the 5th time	DISC SCAN	To play the first 10 seconds of all tracks/files in the disc
For the 6th time	SINGLE	To play the current track/file once then stop
For the 7th time	REPEAT OFF	To turn off repeat function

Playback Control (PBC) on/off in VCD playback

This function is only available during playback of a VCD 2.0 formatted disc.

1. To turn PBC on or off, press **PBC** (34) on the DVD remote control.

   When PBC is on, the VCD will not execute play mode immediately.
2. Press ► (22) on the DVD player controls or ► (51) on the DVD remote control, or **ENTER** (46) on the DVD remote control to play the DVD disc.
3. Alternately, press the numeric buttons (40) on the DVD remote control followed by **ENTER** (46) on the DVD remote control to play the desired chapter.
4. When PBC is on and the disc is playing, press **DVD** (31) on the DVD remote control to go to the catalogue list menu.
5. When PBC is off, you can immediately execute play mode but it will play one chapter after another in the ascending order.

   No chapter selection is allowed.

Note
This function is VCD dependent.

MP3 menu in MP3 playback

This MP3 menu is only available while playing an MP3 disc.

The MP3 menu shows the folders list on the left side and the files and/or folders list on the right side.

To select a folder or a file:

1. Use the menu navigation buttons (50) on the DVD remote control to highlight the desired folder or files in the smart menu.

   The menu can also be navigated using the menu navigation buttons (18) on the DVD player controls.
2. Confirm the selection by pressing **ENTER** (46) on the DVD remote control.
3. You may select a folder or a file directly by pressing the numeric button (40) on the DVD remote control corresponding to the number displayed beside the folder or the file.
4. During MP3 stop mode, press I◄◄ (27) or ►►I (28) on the DVD remote control to view the previous or the next 8 items.
5. During MP3 playback, press I◄◄ (27) or ►►I (28) on the DVD remote control to play the previous or the next MP3 file.

Error messages from the DVD player

In some cases, the DVD player may have trouble playing, loading or ejecting DVDs.

If this happens, one of the following error messages may be displayed on the video screen:

- **Disc Error**: A disc is inserted upside down, the disc is not able to be read, the disc format is not compatible with the DVD player, the DVD player cannot play the disc or the disc is severely damaged.
- **Load/Eject Error**: The disc is not properly loaded or ejected.
- **Region Code Error**: The region code of the DVD is not compatible with the DVD player.
- **No Disc**: ► is pressed and no disc is in the player.
- **SECURITY ERROR**: Displays if the user tries to turn on the security locked DVD player. Contact a Holden Dealer.
- **DTS NOT SUPPORT**: Displays if the DTS audio mode is selected.

  Select another audio mode.

On-screen menus

The system provides several on-screen menus, which may be used to select preferences or make adjustments.

The on-screen display will automatically time out after a few seconds.

Navigation and adjustment of preferences in these menus can be done by:

- Using the navigation buttons (50) and **ENTER** (46) on the DVD remote control.
- Using the navigation buttons (18) and **ENTER** (16) on the DVD player controls.

Display menu

The display menu can be used to modify various video screen display characteristics such as brightness, tint, colour and contrast.

To access the display menu:

1. Press **DISPLAY** (47) on the DVD remote control or press **MENU** (13) on the DVD player controls.

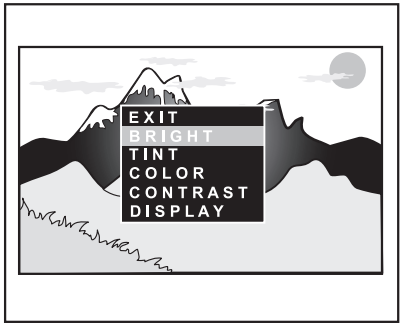

2. Press **ENTER** (16) on the DVD player controls to select display settings.

   The display will appear on the video screen once the display settings is selected.

To adjust brightness

To adjust the brightness of the rear screen:

1. Use the menu navigation buttons (50) on the DVD remote control to highlight **BRIGHT** in the display menu.

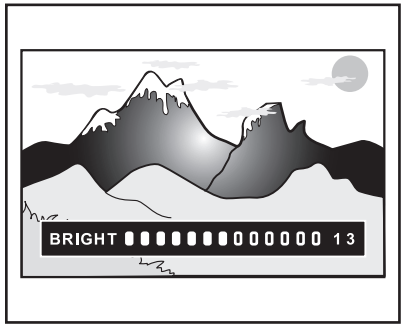

2. Press **ENTER** (46) on the DVD remote control.
   The display will appear on the video screen.
3. Press the left or right direction buttons (50) on the DVD remote control to adjust the brightness of the video screen.

   Pressing the right button increases the brightness. Pressing the left button decreases the brightness.

   The video screen brightness will adjust as the buttons are pressed.
4. When the desired brightness is achieved, press **ENTER** (46) on the DVD remote control or allow the on-screen display to time out.

To adjust the brightness of the front infotainment screen:

1. Touch the **RSE** tab.
2. Touch **Video brightness**.
3. Touch **–** or **+** to adjust.

To adjust tint

To adjust the tint (red or green bias) of the screen:

1. Use the menu navigation buttons (50) on the DVD remote control to highlight **TINT** in the display menu.

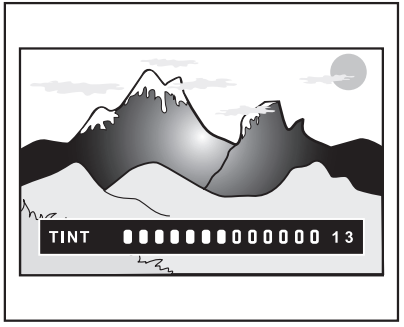

2. Press **ENTER** (46) on the DVD remote control.

   The display will appear on the video screen.

3. Press the left or right direction buttons (50) on the DVD remote control to adjust the tint of the video screen.

   Pressing the right button increases the tint (decreases the green bias). Pressing the left button decreases the tint (increases the green bias).

   The video screen tint will adjust as the buttons are pressed.

4. When the desired tint is achieved, press **ENTER** (46) on the DVD remote control, or allow the on-screen display to time out.

To adjust colour

To adjust the colour of the screen:

1. Use the menu navigation buttons (50) on the DVD remote control to highlight **COLOR** in the display menu.

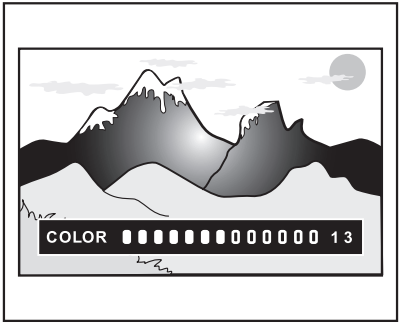

2. Press **ENTER** (46) on the DVD remote control.

   The display will appear on the video screen.

3. Press the left or right direction buttons (50) on the DVD remote control to adjust the colour of the video screen.

Pressing the right button increases the colour (red). Pressing the left button decreases the colour.

The video screen colour will adjust as the buttons are pressed.

4. When the desired colour is achieved, press **ENTER** (46) on the DVD remote control or allow the on-screen display to time out.

To adjust contrast

To adjust the contrast of the screen:

1. Use the menu navigation buttons (50) on the DVD remote control to highlight **CONT** in the display menu.

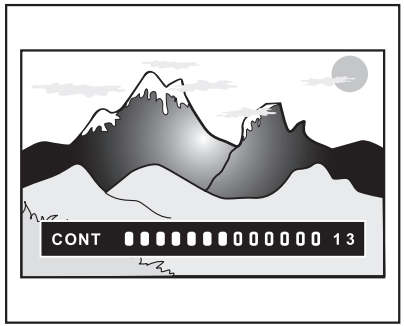

2. Press **ENTER** (46) on the DVD remote control.

   The display will appear on the video screen.

3. Press the left or right direction buttons (50) on the DVD remote control to adjust the contrast of the video screen.

   Pressing the right button increases the contrast. Pressing the left button decreases the contrast.

   The video screen contrast will adjust as the buttons are pressed.

4. When the desired contrast is achieved, press **ENTER** (46) on the DVD remote control or allow the on-screen display to time out.

To adjust display mode

DVD movies may be recorded in various formats (e.g. 16:9, 4:3 L/B, 4:3 P/S).

The video display may be adjusted to achieve the preferred appearance.

To adjust the display mode of the screen:

1. Use the menu navigation buttons (50) on the DVD remote control to highlight **DISPLAY** in the display menu.

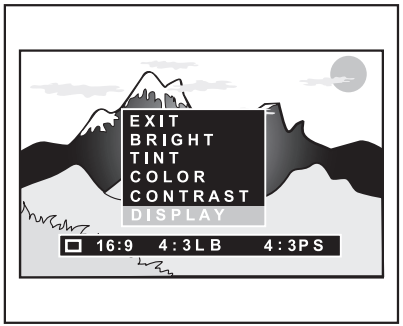

2. Press **ENTER** (46) on the DVD remote control.

   The display will appear on the video screen.
3. Press the left or right direction buttons (50) on the DVD remote control to adjust the display mode of the video screen.
4. Scroll through the three available display mode options of 16:9, 4:3 L/B or 4:3 P/S.

   The video screen display mode will adjust as the buttons are pressed.
5. When the desired display mode is achieved, press **ENTER** (46) on the DVD remote control or allow the on-screen display to time out.

DVD information

Information on the playing disc (DVD, CD, MP3 or VCD) may be viewed on the video screen by pressing **INFO** (32) on the DVD remote control.

To clear the track/chapter information from the video screen, press **INFO** (32) on the DVD remote control repeatedly until the information disappears from video screen.

Advanced DVD video features

Invalid operation icon

Some functions will not be available with some DVDs or at certain times during playback.

If a button is pressed for a function that is not supported by the DVD, the invalid symbol will be displayed on the video screen.

DVD title menu

Some DVDs may contain more than one title and may have a title menu that lists all of the titles on the disc.

In this case, the title menu may be viewed on the video screen by pressing **TITLE** (45) on the DVD remote control.

If the symbol appears on the video screen after pressing the TITLE button, the disc does not have a title menu.

DVD menu

DVDs generally have their own menus which show the disc contents, language and subtitle options, artist information and additional features.

To access the DVD menu:

1. Press **DVD** (31) on the DVD remote control.

   The DVD menu will appear on the video screen.
2. Use the menu navigation buttons (50) on the DVD remote control to highlight a desired item.
3. Press **ENTER** (46) on the DVD remote control to select the item.
4. To exit the current menu and return to the previous screen, press **RETURN** (26) on the DVD remote control again.
5. Alternatively, to access the DVD menu using the DVD player controls, press **MENU** (13) and press ▼ (18) to highlight the disc menu.
6. Press **ENTER** (16) on the DVD player controls.
7. Use the navigation buttons (18) on the DVD player controls to highlight a desired item.
8. Press **ENTER** (16) to select the item.

If the symbol appears on the video screen after pressing the DVD **MENU** button, the disc does not have a DVD menu.

Selecting a scene angle from the DVD video

A variety of scene angles may be selected if the DVD contains multi-angle scenes, where multiple cameras were used to shoot the same scene from different angles.

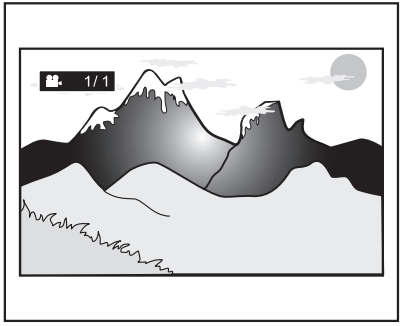

To select a scene angle:

1. Press (38) on the DVD remote control.

   The display will appear on the video screen.

2. Press (38) on the DVD remote control repeatedly until the desired angle is selected.

   Each press of (38) will advance the angle number.

   The on-screen display will automatically time out after a few seconds.

Subtitles selection

DVDs can contain subtitle options. The subtitles may be turned on or off, and viewed in various languages.

To change the subtitle language while a DVD is playing:

1. Press **SUBTITLE** (42) on the DVD remote control.
2. Press **SUBTITLE** (42) repeatedly until the desired subtitle language is selected.

   Each press of the **SUBTITLE** (42) button will advance the subtitle number.

   The on-screen display will automatically time out after a few seconds.
3. Subtitles may be turned off by pressing **SUBTITLE** (42) repeatedly until **SUBTITLE OFF** appears on the video screen.

Audio language selection

DVDs may contain the audio in various languages.

To change the audio language while a DVD is playing:

1. Press **AUDIO** (30) on the DVD remote control.

   DTS audio mode is not supported in this DVD player. You will not hear any audio when DTS audio mode is selected.

2. Press **AUDIO** (30) repeatedly until the desired audio language is selected.

   Each press of **AUDIO** (30) will advance the audio language number.

   The on-screen display will automatically time out after a few seconds.

RSE auxiliary devices

General information

The 3.5 mm AUX Audio/Video (AV) input socket (17) is located in the DVD player controls.

It allows you to connect audio and video from an auxiliary device such as a camcorder or a video game unit to the DVD player, just as you would to a standard television.

3.5 mm type AV cables are needed to connect the auxiliary device to the auxiliary input socket.

Refer to the manufacturer's instructions for proper connection of your auxiliary device.

Connecting auxiliary devices

To use the AUX AV input socket on the DVD player:

1. Connect an external auxiliary device to the 3.5 mm AUX AV input socket (17) and turn both the auxiliary device and the DVD player power on.

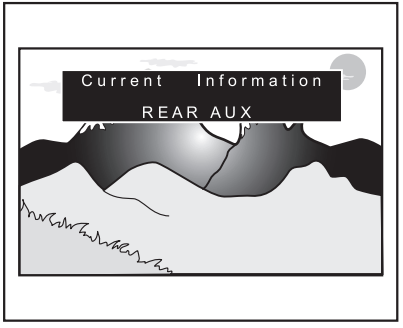

2. If the DVD player was previously in the DVD player mode, press **MODE** (14) on the DVD player controls or **SOURCE** (25) on the DVD remote control.

   The display will appear on the video screen.

3. Pressing **MODE** (14) on the DVD player controls will toggle between the auxiliary device and the DVD player.

Video format in the auxiliary mode

The auxiliary input video format is preset to NTSC.

In some cases, the video format may be in PAL system.

The DVD player will detect the video format and set the video screen automatically.

Note

- Several different types of auxiliary plugs exist on external devices.
- If you have problems with connecting audio and displaying video, the plug on the external source may be incompatible with the vehicle's AUX input socket.

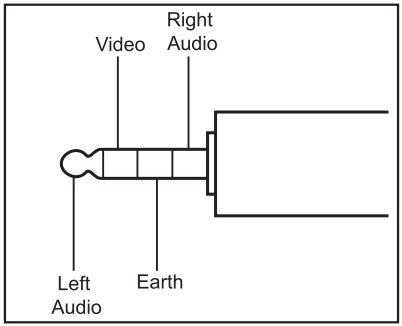

- Use a plug of the type shown.

Navigation

The navigation system:

- Allows a route to be planned
- Provides map guidance
- Provides voice prompts during driving

⚠Warning

Information in the system may not always be up-to-date.

Road conditions, such as detours and road construction works, change frequently.

Traffic regulations have priority over any instructions from the navigation system. Always follow the posted traffic signs, speed limits and road restrictions.

General information

Before using the navigation system, read this section thoroughly.

- Become familiar with the system controls and operation.
- Follow the warnings and cautions to prevent the risk of injury to yourself and others and avoid damage to property.
- If an inoperable function is selected, a message may be displayed indicating that the function is not available.
- Navigation guidance is displayed on the infotainment screen and may also be displayed on the instrument panel. See Display navigation on page 182.
- The navigation maps are stored on an SD-card within the navigation system.

  To check for updated map availability, contact a Holden Dealer.
- To scroll the map view, touch a position on the map to centre the view.
- Pressing NAV on the steering wheel controls will display:

  The navigation page when not in guidance mode.

  The map when in guidance mode.
- Additional route information may be transmitted by voice guidance.

⚠Danger

Giving extended attention to navigation tasks while driving will greatly increase the risk of a collision that may cause personal injury or death.

Road safety has absolute priority!

Only operate this system if the road and traffic conditions allow you to do so.

The driver's full attention is always required while driving.

Use voice guidance directions whenever possible.

Overview

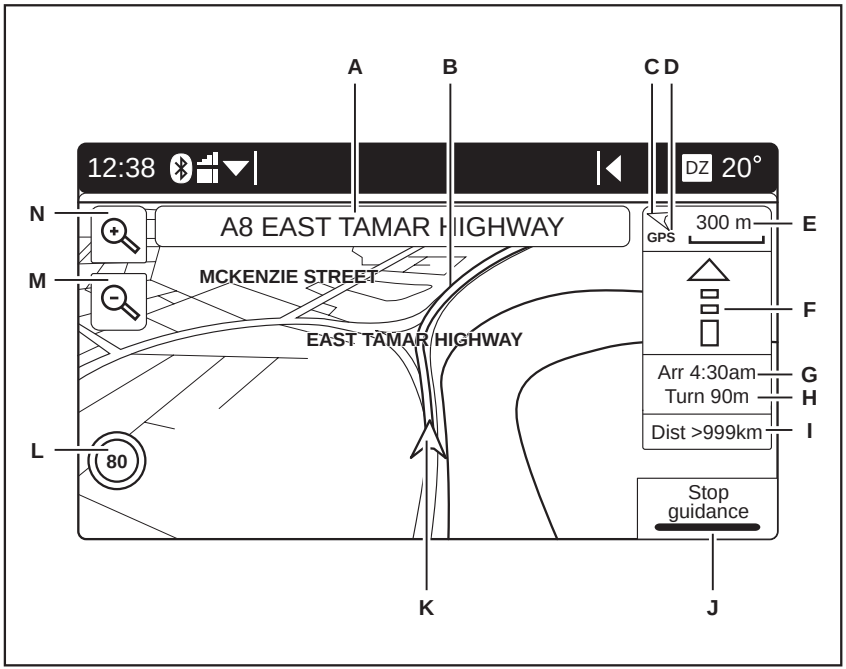

A. Current road
B. Planned route
C. Compass
D. GPS reception
E. Selected map scale
F. Navigation prompt
G. Estimated arrival time
H. Distance to turn/instruction
I. Distance to destination
J. Stop guidance
K. Current vehicle position and direction
L. Road speed limit
M. Zoom out
N. Zoom in

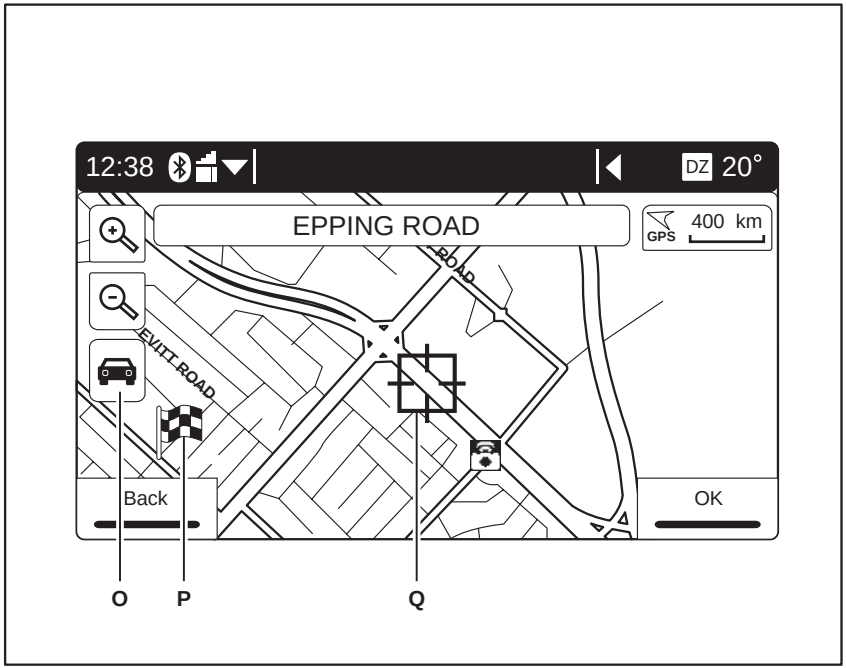

O. Show current location
P. Destination flag
Q. Destination on the map

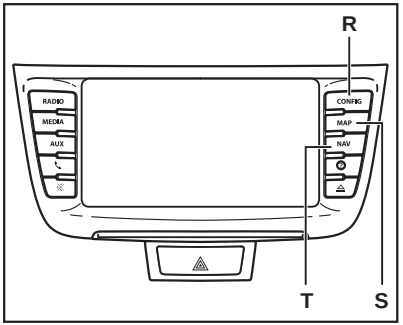

R. Configuration menu button
S. Display map view
T. Navigation settings

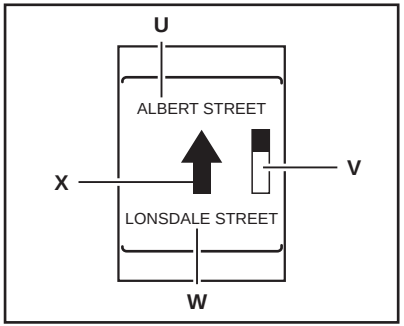

U. Next street name or distance counter

V. Distance indicator bar

W. Current street name

X. Direction symbol

Getting started

Information may be entered into the navigation system using the on screen keyboard or by selecting a point on a map.

Destination address

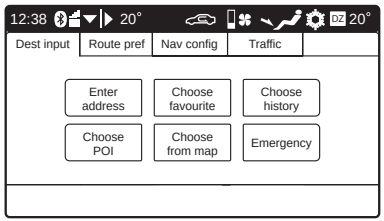

To enter a destination address:

1. Press **NAV**.
2. Touch **Dest input** tab.

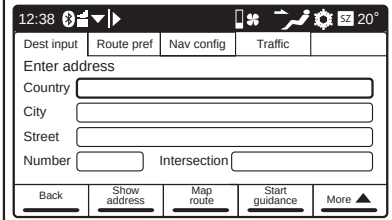

3. Touch **Enter address**.
4. Touch **Country** input box.

   Enter the country's name or enter the first letter(s) .

   Touch **List** to select the country from the list.

   Touch **OK** to enter.
5. Touch **City** input box.

   Enter the name of the city or enter the first letter(s).

   Touch **List** to select the city from the list.

   Touch **OK** to enter.

Note
Enter a suburb name or a city name to cover a larger search area.

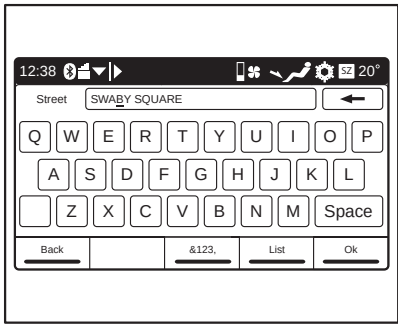

6. Touch **Street** input box.

   Enter the name of the street or enter the first letter(s).

   Touch **List** to select the street from the list.

   Touch **OK** to enter.
7. Touch **Number** input box.

   Enter the street number if required.

   Touch **OK** to enter.
8. Touch **Intersection** input box.

   Enter the name of the street or enter the first letter(s) .

   Touch **List** to select the street from the list.

   Touch **OK** to enter.
9. Touch **Start guidance** to calculate and return to the map screen. The system is ready for departure.

   Alternatively, touch **Map route** to show route on the map screen, without guidance.

Simulating a trip

Simulate a trip from the current position to the final destination, along an entered route.

The calculated route is highlighted on the map.

Note
This function is only available when the vehicle is stationary.

1. Enter the destination by following Steps 1 to 8 on page 168.
2. Touch **More**.
3. Touch **Simulate trip**.
4. Touch **Current position**. Simulation begins.

   Alternatively, touch **Choose address**.

   Enter the start address.

   Alternatively, touch **Cancel** to close the pop-up.
5. Touch **OK**.

   A pop-up is displayed.

   Simulation begins.
6. Touch **Stop guidance** to cancel simulation.

Plan route

Setting route options

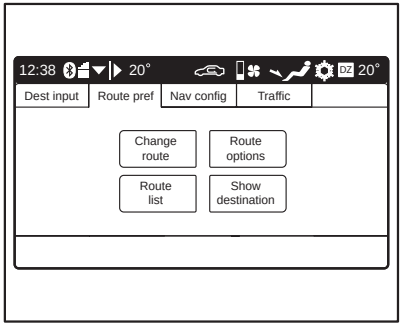

1. Press **NAV**.
2. Touch **Route pref** tab.

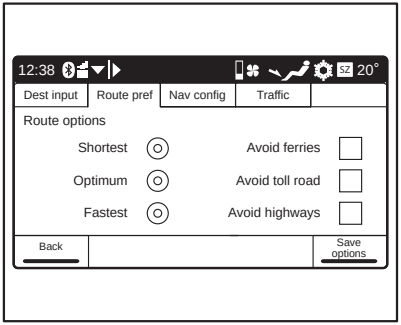

3. Touch **Route options**.

   Select from:

   - **Shortest**: (the route is calculated based on the shortest distance).
   - **Optimum**: (the route is calculated based on estimated travel distance and estimated travel time with a balance of 50% driving distance and 50% driving time).
   - **Fastest**: (the route is calculated based on the fastest route in time).

   The option selected is indicated by ⦿.
4. Select what to avoid:
   - **Avoid ferries**
   - **Avoid toll road**
   - **Avoid highways**

   The option selected is indicated by ✓.
5. Touch **Save options**.

   The route will be recalculated and the map screen displayed.

   Alternatively, touch **Back** to return to the previous screen.

Viewing the route list

View details of the current journey plan in a list view.

This includes the address of the starting point, final destination and all the streets/roads along the way.

If stages are added, they are also included in the list view.

When navigation is active and any of the streets have been passed, they will be removed from the list.

Note
This option is only available when a Destination is selected.

1. Press **NAV**.
2. Touch **Route pref** tab.
3. Touch **Route list**.
4. Touch the route option to be viewed in detail:
   - Distance to this point
   - Length
   - City

   Touch ▼ or ▲ to select next or previous page if available.
5. Touch **Back** to return to the previous screen.

Viewing destination

View the destination selected, on the map.

Note
This option is only available in Guidance mode and with the route already calculated.

1. Press **NAV**.
2. Touch **Route pref** tab.
3. Touch **Show destination**.

   The map with the destination is shown.

Changing selected route

Insert a stage into an existing route or a journey plan.

- Add up to three stages.
- During active guidance every stage entered will be treated as a new address before the final destination.
- With a journey plan, a stage is integrated into the route and indicated as an intermediate stage.
- is displayed on the map.

Adding/editing/rearranging stages

Add to a journey, edit an existing stage or re-order entered stages.

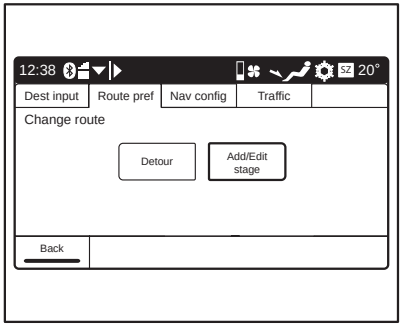

1. Press **NAV**.
2. Touch **Route pref** tab.
3. Touch **Change route**.
4. Touch **Add/Edit stage**.
5. Touch **Add**.

   Dest input tab is displayed.
6. Touch the option you would like to select as the stage.

   Touch **OK** to enter.
7. To change the order of the entered stages, touch **Reorder Stage**.
8. To relocate added stages, touch the stage to be moved.
9. Touch either **Move up** or **Move down** (depending on the stages location).
10. Touch **Back**.
11. Touch **Save route**.

    The selected route is recalculated.

    Guidance is started and the navigation screen with the calculated route is shown.
12. To cancel guidance touch **Stop guidance**.

Deleting a stage

Delete a stage from an existing route or journey plan.

1. Press **NAV**.
2. Touch **Route pref** tab.
3. Touch **Change route**.
4. Touch **Add/Edit stage**.
5. Touch **Delete stage**.

   Touch the stage to be deleted from the list.
6. Confirm the selection.

   Touch **OK** to delete the selected address or touch **Cancel**.
7. Touch **Back** to return to the previous screen.
8. Touch **Save route** to continue guidance.

Detour

Set a distance to detour from the current route.

The system automatically calculates a new route based on the distance to detour, to avoid the current road for the selected distance.

1. Press **NAV**.
2. Touch **Route pref** tab.
3. Touch **Change route**.
4. Touch **Detour**.
5. Touch the distance (selected distance is marked by *).

   The detour will be calculated.
6. Press **Map** to return to map view and continue guidance.

To clear detours:

1. Press **NAV**.
2. Touch **Route pref** tab.
3. Touch **Change route**.
4. Touch **Detour**.
5. Touch **Clear detours** to clear all settings.
6. Touch **Back** to return to the previous screen.
7. Touch **Map** to return to map view and continue guidance.

Destinations

Entering an address via its geographical co-ordinates

Enter an address using the latitude and longitude.

The geographical coordinates have to be entered in the corresponding fields.

1. Press **NAV**.
2. Touch **Dest input** tab.
3. Touch **Enter address**.
4. Touch **More**.
5. Touch **Input via co-ords**.
6. Enter the geographical coordinates using the on screen keyboard.
7. If required touch **S** (South) to switch to **N** (North) and vice versa. Touch **E** (East) to switch to **W** (West) and vice versa.

8. Touch **Map route** to calculate the route and display on the map.

   Note
   The map zoom function is not available with this feature.

9. Touch **Back** to exit and to return to the previous screen.
10. Touch **Start guidance** to calculate the route and return to the map screen and start guidance.

Entering a destination from map view

1. Press **NAV**.
2. Touch **Dest input** tab.
3. Touch **Choose from map**.

   Position ⌖ to desired destination.

   The destination street or geographical co-ordinates will be displayed after a few seconds.
4. Touch **OK** to select destination.
5. Touch **Start guidance** to calculate the route and return to the map screen and start guidance.

Saving an address as a favourite

Save an entered destination address as a general favourite, home or work address. See Destination address on page 168.

1. Press **NAV**.
2. Touch **Dest input** tab.
3. Touch **Enter address** to enter a new address or select an existing address.
4. Touch **More**.
5. Touch **Save as**.
6. A pop-up is displayed.

   Save the address under Favourites, Home or Work.
7. Touch selection to save the destination or touch **Cancel** to return to the previous screen.

Renaming an address

Rename any destination address in the favourites list, except <Home> and <Work>.

1. Press **NAV**.
2. Touch **Dest input** tab.
3. Touch **Choose favourite**.
4. Touch **Rename**.

   Touch the entry to be renamed.
5. Enter the new name using the on screen keyboard.
6. Touch **OK** to rename.
7. Touch **Back** to return to the previous screen.

   The previous selected entry will be renamed and will appear under its new name in the Favourites List.

Deleting an address

Delete an address from the favourites list.

1. Press **NAV**.
2. Touch **Dest input** tab.
3. Touch **Choose favourite**.
4. Touch **Delete**.
5. Touch the Entry to be deleted from the Favourites list.

   The **Delete favourite** pop-up is displayed.
6. Touch **OK**.

   The selected entry will be deleted from the Favourites list.

Deleting all addresses

Delete all addresses from the favourites list.

1. Press **NAV**.
2. Touch **Dest input** tab.
3. Touch **Choose favourite**.
4. Touch **Delete**.
5. Touch **Delete all**.

   The **Delete all favourites** pop-up is displayed.
6. Touch **OK**.

   All addresses will be deleted from the favourites list.

Viewing a destination address

View a destination address on the map.

1. Press **NAV**.
2. Touch **Dest input** tab.
3. Touch **Choose favourite**, **Choose history** or **Choose POI**.
4. Select the destination address to be viewed on the map.
5. Touch **Show address**.

   The map is displayed.

   The address is indicated by ⊹.
6. Zoom in or out on the address.
7. Touch **Back** to exit and to return to the previous screen.

Selecting an address

Select a destination address from the favourites list.

1. Press **NAV**.
2. Touch **Dest input** tab.
3. Touch **Choose favourite**.
4. Touch the favourite to be selected.

   If the favourite is not shown on the first page, touch ▼ to select the next page.

   The address is displayed in the Enter Address screen.
5. Touch **Back** to return to the previous screen.

Selecting a history address

Select a previously entered destination address from the history list or delete the complete history list.

1. Press **NAV**.
2. Touch **Dest input** tab.
3. Touch **Choose history**.
4. Touch an address to select it.

   Touch ▼ or ▲ to select the next or previous page if available.
5. Touch **Back** to exit and to return to the previous screen.

Deleting history addresses

To delete all history addresses from the list.

1. Press **NAV**.
2. Touch **Dest input** tab.
3. Touch **Choose history**.
4. Touch **Clear all**.
5. The Clear History List? pop-up is displayed.
6. Touch **OK** to confirm.
7. Touch **Back** to exit and return to the previous screen.

Points of interest

Select Points of Interest (POI) either by name or by category near to the current vehicle position, around the destination or near an address.

- **By name**: Enter the name of the POI by the company name.
- **By category**: Browse the POI for restaurants, petrol stations, airport etc.

POI near the current position

1. Press **NAV**.
2. Touch **Dest input** tab.
3. Touch **Choose POI**.
4. Touch **current position**.
5. Select the POI either **By name** or **By category**.

   Alternatively, touch **Cancel** to exit.

If entering by name:

1. Enter the name using the on screen keyboard.
2. Touch **OK**.
3. Touch listed POI to select it.
4. Touch ▼ or ▲ to select the next or previous page if available.
5. Touch **Start guidance** to calculate the route and return to the map screen.

If entering by category:

1. Touch listed category to select.
2. Touch listed POI to select it.
3. Touch ▼ or ▲ to select the next or previous page if available.

   Note
   If there are over 50 results, touch **Next batch** for the next 50 results.
4. Touch **Start guidance** to calculate the route and return to the map screen.
5. Touch **Back** to return to the previous screen.

POI near the destination (available during guidance mode only)

1. Press **NAV**.
2. Touch **Dest input** tab.
3. Touch **Choose POI**.
4. Touch **destination**.
5. Select the POI either **By name** or **By category**.

   Alternatively, touch **Cancel** to exit.
6. Touch **Back** to return to the previous screen.

If entering by name:

1. Enter the name using the on screen keyboard.
2. Touch **OK**.
3. Touch listed POI to select it.
4. Touch ▼ or ▲ to select the next or previous page if available.
5. Touch **Start guidance** to calculate the route and return to the map screen.

If entering by category:

1. Touch listed category to select.
2. Touch listed POI to select it.
3. Touch ▼ or ▲ to select the next or previous page if available.

   Note
   If there are over 50 results, touch **Next batch** for the next 50 results.
4. Touch **Start guidance** to calculate the route and return to the map screen.
5. Touch **Back** to return to the previous screen.

POI near an address (available during non-guidance mode only)

1. Press **NAV**.
2. Touch **Dest input** tab.
3. Touch **Choose POI**.
4. Touch **an address**.
5. Enter an address using the on screen keyboard.
6. Touch **OK**.
7. Select the POI either **By name** or **By category**.

   Alternatively, touch **Cancel** to exit.
8. Touch **Back** to return to the previous screen.

If entering by name:

1. Enter the name using the on screen keyboard.
2. Touch **OK**.
3. Touch listed POI to select it.
4. Touch ▼ or ▲ to select the next or previous page if available.
5. Touch **Start guidance** to calculate the route and return to the map screen.

If entering by category:

1. Touch listed category to select.
2. Touch listed POI to select it.
3. Touch ▼ or ▲ to select the next or previous page if available.

   Note
   If there are over 50 results, touch **Next batch** for the next 50 results.
4. Touch **Start guidance** to calculate the route and return to the map screen.
5. Touch **Back** to return to the previous screen.

Emergency destination

Select an emergency destination.

1. Press **NAV**.
2. Touch **Dest input** tab.
3. Touch **Emergency**.
4. Touch the emergency destination to be selected from the Emergency List.
   - **Police Station**
   - **Hospital**

   If the emergency destination is not displayed, touch ▲ or ▼ to select the previous or next page.
5. Touch listed destination to select.
6. Touch **Start guidance** to calculate the route and return to the map screen.

Configuring the navigation system

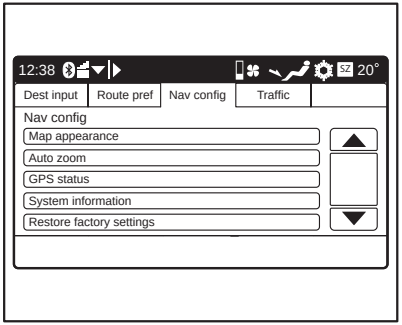

Change the configuration settings or view navigation information using **Nav config**.

Available are:

- Map appearance
- Auto zoom
- GPS status
- System information
- Restore factory settings
- Traffic management settings
- Points of Interest (POI)

- Alert points
- Alert points feedback
- Speed limit warnings

Voice guidance settings may also be changed.

Voice guidance speaker output:

1. Press **CONFIG**.
2. Touch **Audio** tab.
3. Touch **Voice guidance speaker output**.

   Select from: **Driver**, **Front** or **All**.

   The option selected is indicated by ⊙.
4. Touch **Back** to return to the previous screen.

Voice guidance volume:

1. Press **CONFIG**.
2. Touch **Audio** tab.
3. Touch **Voice guidance volume**.

   Select from: **On** or **Off**.

   The option selected is indicated by ⊙.
4. Touch ◄ or ► to adjust the volume.

   During voice guidance, rotate **VOL** to adjust the volume.
5. Touch **Back** to return to the previous screen.

Map appearance

Change the appearance of the map on the screen.

1. Press **NAV**.
2. Touch **Nav config** tab.
3. Touch **Map appearance**
   - **Map facing**: Either **Heading up** or **North up**.
   - **Map view**: Either **2D** or **3D** (not selectable in North Up view).
   - **Brightness mode**: Either **Day**, **Night** or **Auto**.

   The option selected is indicated by ⊙.
4. Touch **Back** to save the settings and to return to the previous screen.

Automatic zoom

Automatically zoom in on the approaching manoeuvre point, to view in detail.

1. Press **NAV**.
2. Touch **Nav config** tab.
3. Touch **Auto zoom**.
4. Touch either **On** or **Off**.

   The option selected is indicated by ⊙.
5. Touch **Back** to save the settings and to return to the previous screen.

Restore factory settings

With this option, all navigation favourites will be erased.

1. Press **NAV**.
2. Touch **Nav config** tab.
3. Touch **Restore factory settings**.
4. Touch **OK** if you want to restore the factory settings or touch **Cancel** to exit without resetting the factory settings.

Viewing GPS status

Look up the status and accuracy of the GPS signal.

1. Fix:
   - Searching: The system is searching for satellites.
   - Tracking: The system finds less than three satellites and starts to evaluate the signal quality of the satellites found.
   - 2D Fix: There are a minimum of three available satellites to calculate the position.
   - 3D Fix: There are at least four available satellites with good signal quality.
2. Current No. of Satellites: Indicates the number of available satellites.
3. HDOP (GPS Accuracy): Indicates the quality of the satellite reception. The lower the number, the better the reception quality is.
4. Latitude/Longitude: Indicates the current position of the vehicle on the globe.

   This information is based on the GPS satellite signals.

   To view this information:

   1. Press **NAV**.
   2. Touch **Nav config** tab.
   3. Touch **GPS status**.

      The GPS status is displayed.
   4. Touch **Back** to exit and to return to the previous screen.

System information

View the system information such as platform, software version and map database.

1. Press **NAV**.
2. Touch **Nav config** tab.
3. Touch **System information**.

   The GPS status is displayed.
4. Touch **Back** to exit and return to the previous screen.

POI settings

Select POI's to display on the map.

1. Press **NAV**.
2. Touch **Nav config** tab.
3. Touch ▼ to select the second **Navigation config** page.
4. Touch **POI selection**.
5. Touch to select the **POI** you want to display.

   The POI selected is indicated with an *.
6. Touch ▼ or ▲ to select the next or previous page.

   To clear all selected POI's touch **Clear all**.
7. Touch **Back** to exit and to return to the previous screen.

Display navigation

To view the navigation display on the instrument panel:

1. Press **TRIP** to navigate to the navigation display or press **NAV** on the steering wheel remote controls.

Note

Pressing **NAV** in guidance mode:

1. The navigation screen is displayed.
2. Repeats the last voice guidance instruction.

Pressing **NAV** in non-guidance mode:

1. The navigation screen is displayed.
2. Displays the current vehicle position.

The display options are changed in the Customisation menu:

1. Press **TRIP** to navigate to the **Customise Options** display.
2. Press the ENTER button.
3. Rotate ▲ or ▼ to select **Navigation**.
4. Press the ENTER button.

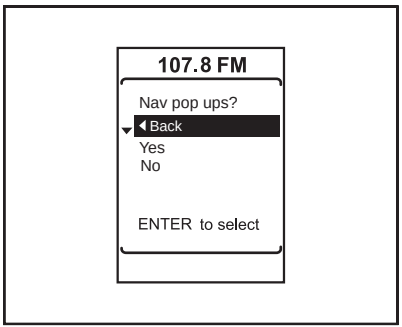

Select from:

1. **Nav pop ups?**
   - **Yes**
   - **No**

   Press the ENTER button.

   Note

   When **No** is selected, the navigation display will only be visible when the navigation display is selected on the instrument panel.
2. **Select Speed Limit Warning?**
   - **Disable**
   - **Enable**

   Press the ENTER button.
3. **Select Speed Limit Flash?**
   - **Disable Flash**
   - **At speed limit**

   Press the ENTER button.

   Note

   Select a speed, over the current limit, for when to flash the speed limit warning.

Alert points and alert feedback

When switched on, a warning of an approaching alert point may be shown on the infotainment screen or heard through the speakers.

- When **All screens** is selected, audio feedback and a message is displayed on the infotainment screen.
- When **Map screens** is selected, audio feedback and a message are displayed in map view only.
- When **Off** is selected, no alert information is given.
- During a phone call only a display will appear on the infotainment screen without any audio feedback.
- Alert information is available on railway crossings, speed and red light cameras (safety cameras) and school zones.

- The warnings may also be displayed on the instrument panel.

  To enable or disable, see Display navigation on page 182.

Configuring alert points

1. Press **NAV**.
2. Touch **Nav config** tab.
3. Touch ▼ to select the second Nav config page.
4. Touch **Alert points**.
5. Select **Alert points** as required.

   The option selected is indicated by ⦿.
6. Touch **Back** to exit and to return to the previous screen.

Configuring alert point feedback (audio chime)

1. Press **NAV**.
2. Touch **Nav config** tab.
3. Touch ▼ to select the second Nav config page.
4. Touch **Alert points feedback**.
5. Touch the corresponding button to switch Alert point feedback on or off.

   The option selected is indicated by ⊙.
6. Touch **Back** to exit and to return to the previous screen.

Configuring speed limit warnings

Where available, the navigation system displays the documented speed limit for the current road.

If the vehicle speed:

- Is less than the navigation system speed limit, the speed symbol will be grey.
- Is greater than the navigation system speed limit, the speed symbol will be coloured red.

  There is no audio alert with this warning.

⚠Warning

Information in the system may not always be up-to-date.

Road conditions, such as detours and road construction works, change frequently.

Traffic regulations have priority over any instructions from the navigation system. Always follow the posted traffic signs, speed limits and road restrictions.

This feature is available in guidance and non-guidance modes.

1. Press **NAV**.
2. Touch **Nav config** tab.
3. Touch ▼ to select the second Nav config page.
4. Touch **Speed limit warnings**.
5. Touch the corresponding button to switch Speed limit warnings on or off.

   The option selected is indicated by ⊙.
6. Touch **Back** to exit and to return to the previous screen.

Traffic Message Channel (TMC)

TMC provides traffic and travel information.

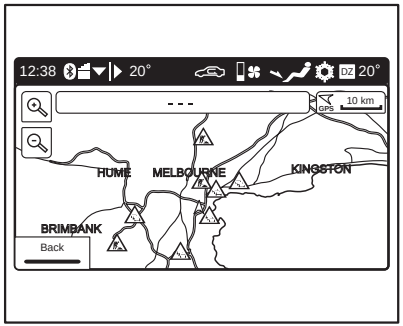

The information is displayed in map view using symbols. See TMC symbols on page 188.

TMC is digitally coded using the FM-RDS system on conventional FM radio broadcasts.

Traffic information is only available in areas where it is specifically provided by local FM radio stations, therefore may not be available in some areas or towns.

TMC may be switched on or off.

Traffic congestion

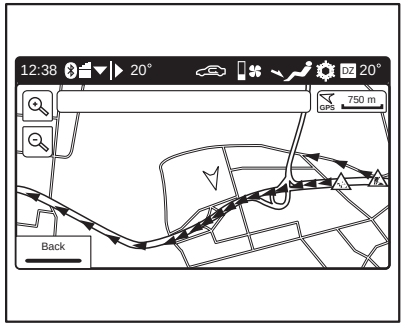

Traffic congestion on roads is indicated by triangles along that section of road.

The number of displayed triangles is dependant on the map scale displayed, not on the severity of congestion.

The triangles point in the direction of traffic congestion.

Traffic avoidance

Automatic (default setting)

The route is continuously calculated. If a better route is available than the current one, the alternative route is activated immediately.

Manual

In manual mode an alternate route is suggested. The option is given to select an alternate route.

Switching traffic avoidance on/off

1. Press **NAV**.
2. Touch the **Nav config** tab.
3. Touch **Traffic management settings**.
4. Touch either **Auto** or **Manual** to switch traffic avoidance on.

   Alternatively, touch **Off** to switch traffic avoidance off.

   The option selected is indicated by ⊙.
5. Touch **Back** to save the settings and return to the previous screen.

Note
When traffic avoidance is off, the RDS-TMC settings are disabled.

Radio Data System - Traffic Message Channel (RDS-TMC)

When traffic avoidance is on, information about traffic on the selected route is displayed.

The RDS-TMC stations provide information relating to:

- Roadworks
- Dangerous vehicles
- Poor visibility etc

Select/deselect the required options via the TMC filter under the tab **Traffic** - **TMC messages**.

RDS-TMC modes

- **Automatic**: The navigation system automatically selects the best TMC station available.
- **Preferred**: Select a preferred TMC station from a list of available TMC stations.

Changing the RDS-TMC settings

1. Press **NAV**.
2. Touch the **Nav config** tab.
3. Touch **Traffic management settings**.
4. Touch either **Automatic** or **Preferred**.

   The option selected is indicated by ⊙.
5. Touch **Back** to save the settings and to return to the previous screen.

Viewing and updating TMC stations

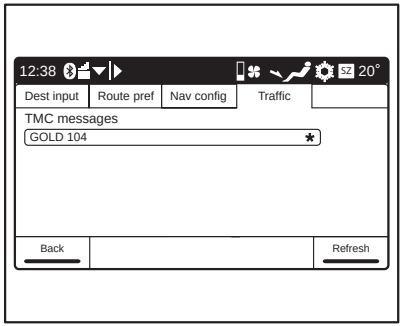

1. Press **NAV**.
2. Touch the **Traffic** tab.
3. Touch **TMC stations**.

   Available TMC stations are displayed.

   The currently selected TMC station is marked with an *.
4. Touch **Refresh** to update the current list.

   Updating TMC stations... will appear on the screen.
5. Touch **Cancel** to cancel the TMC station search.

   Alternatively, touch **Back** to return to the previous screen.

Selecting a TMC station

Select a favourite TMC station.

1. Press **NAV**.
2. Touch the **Traffic** tab.
3. Touch **TMC stations**.

   The screen shows available TMC stations.

   The currently selected TMC station is marked with an *.
4. Touch to select a TMC station.

   The selected TMC station is marked with an *.
5. Touch **Back** to return to the previous screen.

Viewing TMC messages

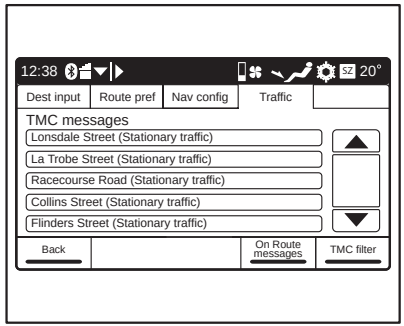

View current TMC messages and update them if required.

1. Press **NAV**.
2. Touch the **Traffic** tab.
3. Touch **TMC messages**.

   Current TMC messages are displayed.

   Touch any TMC message to provide further detail of the TMC event.

On route messages:

Touch **On route messages** when in guidance mode to list all TMC events on the chosen route.

TMC filter:

- Touch **TMC filter** to select acceptable TMC events on any route.
- To personalise TMC events that may be displayed, touch to select or deselect.

  The currently selected TMC events are marked with an *.

4. Touch **Back** to return to the previous screen.

TMC symbols

Accident

Danger

Dangerous vehicle

Delay

Vehicle on wrong carriageway

High winds

No parking

Obstruction

Partly closed road

Poor visibility

Queuing traffic

Road closed

Roadworks

Stationary traffic

Severe weather

Slippery road

Slow traffic

Smog

Faulty traffic signals

Uneven surface

Vehicle breakdown

Warning

Vehicle restrictions:

Restriction

Height

Weight

Hazardous load

Height/hazardous load

Weight/hazardous load

Multiple restrictions

Navigation map symbols

The following symbols may appear on the map screen.

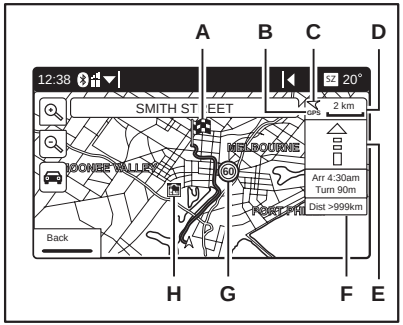

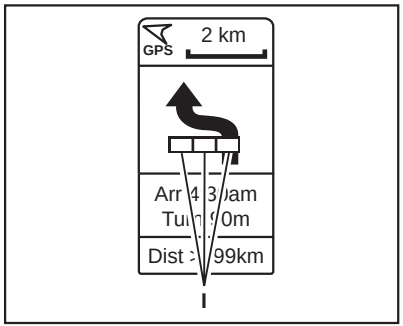

Flag: After a route has been planned a destination flag (A) indicates the stage or final destination.

Satellite signal: The **GPS** indicator (B) provides satellite signal status.

If there are:

- No satellites available, **GPS** will be red.
- Satellites available, **GPS** will be green.

Map scale: (D) displays the current map scale.

Guidance direction: The direction arrow (E) shows the direction or turn to follow.

- Touch the arrow to repeat the last voice guidance or press **NAV** on the steering wheel remote controls.
- The arrow may also indicate lane guidance on multi-lane roads (I).
- The lane to follow will be indicated in green.
- An optional lane will be indicated in orange.
- Lanes to avoid will be indicated in red.

Distance to destination, destination time and distance to next turn/instruction: (F) displays the distance to the final destination, the estimated arrival time and the distance to the next turn/instruction.

Touch above the direction arrow box to view or to hide the information.

Map view: The A (C) indicates north and which map view configuration is selected.

- 2D map (North Up): North will always be at the top of the map screen regardless of which direction the vehicle is travelling.
- 2D map (Travel direction): The map view is in travel direction.
- 3D Map: The map view is from a 3D elevated position, in the travel direction.
- Touch A (C) to switch between the different views.

Speed limit: The navigation system may display a speed limit symbol (G).

It displays the speed limit for the current road.

If the vehicle speed is:

- Less than the displayed speed limit, the speed symbol will be grey.
- Greater than the displayed speed limit, the speed symbol will be coloured red.

⚠Warning

Information in the system may not always be up-to-date.

Road conditions, such as detours and road construction works, change frequently.

Traffic regulations have priority over any instructions from the navigation system. Always follow the posted traffic signs, speed limits and road restrictions.

POI: A symbol (H) indicates a useful location. The symbols will be displayed when the selected mapscale is less than 500 m.

Point of Interest symbols (POI)

Accommodation

Hotel

Automobile

Auto service, auto dealership

Car rental

Holden dealership

Parking

Petrol/gasoline station

Rest area

Entertainment

Bar and pub

Casino

Cinema

Nightclub

Performing arts

Food

- Coffee shop
- Restaurant

Medical services

- Hospital
- Medical service
- Pharmacy

Services

- ATM
- Bank
- Business facility
- Cemetery
- Court house
- Embassy
- Government office
- Higher education facility
- Place of worship
- Police station
- Post office
- Public library
- Public rest room
- School
- Town centre, city centre
- Town hall

Shopping

- Book store
- Clothing store
- Consumer electronic store
- Convenience store
- Department store
- Grocery store
- Home improvement and hardware store
- Office supply and service store
- Shopping
- Speciality store
- Sporting goods store

Sports and recreation

- Amusement park
- Boat marina
- Bowling centre
- Convention centre
- Golf course
- Historical monument
- Ice skating rink
- Museum
- Park and recreation centre
- Sport centre
- Tourist attractions
- Tourist information
- Winery

Transport

Airport

Bus and coach station

Ferry terminal

Railway station

Taxi

Transportation service

Other

Blackspot

Check speed

Country town exit point

Highway exit

Military base

Railway

School zone

Traffic camera

Bluetooth® phone

General information

Bluetooth® allows users with a Bluetooth® enabled mobile phone to make and receive hands-free calls using the vehicle's infotainment system and controls.

The Bluetooth® enabled mobile phone must be paired to the vehicle's infotainment system before it can be used in the vehicle.

Not all phones will support all functions. For more information visit: www.holden.com.au.

The following symbols may be displayed at the top of the infotainment screen:

: Bluetooth® device connected

Blue symbol: Paired

Grey symbol: In discoverable mode, or Pairing In Progress, or Connection In Progress

: Mobile phone signal strength

: Mobile phone battery status

Bluetooth® also allows streaming of music files from a device, if files are available. See Bluetooth® music on page 144.

⚠Warning

Do not use a mobile phone when driving.

Make sure that Bluetooth® is activated before driving. If not stop at a safe place to use a mobile phone.

Pairing

A Bluetooth® enabled mobile phone must be paired to the in-vehicle Bluetooth® system, then connected to the vehicle before it can be used.

See the mobile phone manufacturers user guide for Bluetooth® functions before pairing the mobile phone.

- Up to five mobile phones can be paired to the in-vehicle Bluetooth® system.
- The in-vehicle Bluetooth® system automatically links with the first available paired mobile phone in the order the phone was paired.
- Only one paired mobile phone can be connected to the in-vehicle Bluetooth® system at a time.
- Before pairing a new device, ensure that no devices are currently connected.
- Pairing should only need to be completed once, unless changes to the pairing information have been made or the phone is deleted.

Note
A Bluetooth® device without phone features may also be paired to use BT streaming.

Bluetooth® pairing initiated via the mobile phone

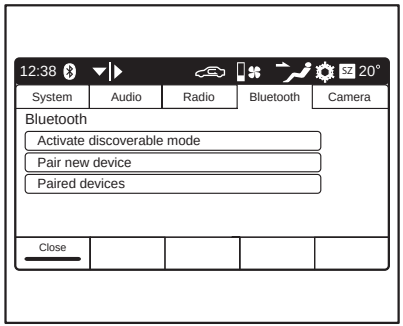

1. Press **CONFIG**.
2. Touch **Bluetooth** tab.
3. Touch **Activate discoverable mode**.
4. **Discoverable for 5 minutes** is displayed.
5. Use your mobile phone to pair it with the infotainment system.
6. Choose a 4 digit code and enter it when **Enter 4 digit code** is displayed.
7. Touch **OK**.
8. Enter the 4 digit code into the mobile phone to pair it.
9. **Pairing completed** will be displayed.

Pairing a Bluetooth® device with the infotainment system

1. Switch the Bluetooth® device on.
2. Press **CONFIG**.
3. Touch **Bluetooth** tab.
4. Touch **Pair new device**.

   Searching for Bluetooth devices is displayed.
5. Touch **Refresh**.
6. The detected Bluetooth® devices are displayed.
7. Touch the Bluetooth® device.

   Pairing device... is displayed.

   Enter code XXXX into device is displayed.

8. Enter the shown code into the mobile phone to start pairing.

   If pairing failed, **Pairing failed** is displayed.

   If pairing was successful, **Pairing completed** is displayed.
9. Pairing is now completed.

   Add up to five devices to the Last paired devices list.

Deleting a Bluetooth® device

1. Press **CONFIG**.
2. Touch **Bluetooth** tab.
3. Touch **Paired devices**.

   A list of paired devices is displayed.
4. Touch **Delete**.
5. Touch the device to be deleted.

   Delete the paired device <*Device Name*> is displayed.
6. Touch **OK**.

   The device will be deleted from the Last paired devices list.

Connecting another Bluetooth® device

Connect an extra Bluetooth® device and disconnect the currently paired device without deleting the device from the Last paired devices list.

1. Switch the extra Bluetooth® device on, to be paired, and prepare it for pairing.
2. Press **CONFIG**.
3. Touch **Bluetooth** tab.
4. Touch **Paired devices**.

   The current connection is marked with an asterisk on the right hand side.
5. Touch the device to be paired on the Last paired devices list.

   The pop-up **Connect** <*Device Name*> **?** is displayed.

   The currently connected device will be disconnected.
6. Touch **OK**.

   Disconnecting device... is displayed.

   You may be asked to enter the code into the mobile phone.
7. **Connecting...** is displayed.
8. Pairing of the new device is now completed.

Auto-connecting a Bluetooth® device

1. Switch the Bluetooth® device on.
2. Switch the infotainment system on.

   Bluetooth® searches for an automatic connection with the device in the Last paired device list.
3. **Device** <*Device Name*> **is connected** is displayed.

ne sounds via

ber or name is
e tab.

on the
note controls to

as well as
number and
nection are

ning call,

on the
note controls to

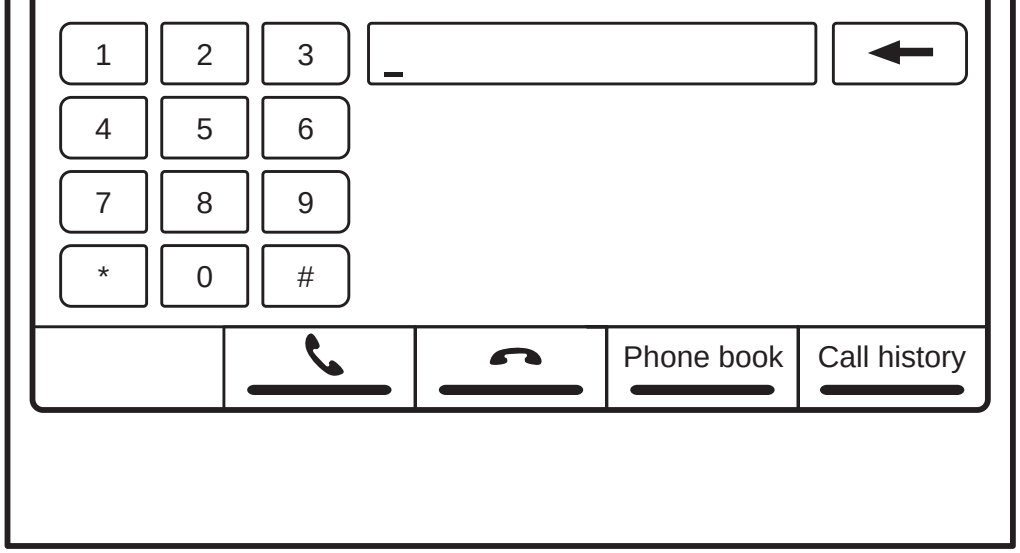

1. Touch or press on the steering wheel remote controls to open the phone screen.
2. Enter the phone number on the key pad.

   To enter **+**, press and hold the **0** button.
3. Touch to dial the entered

For phones
feature, refe

1. Activate
   screen.

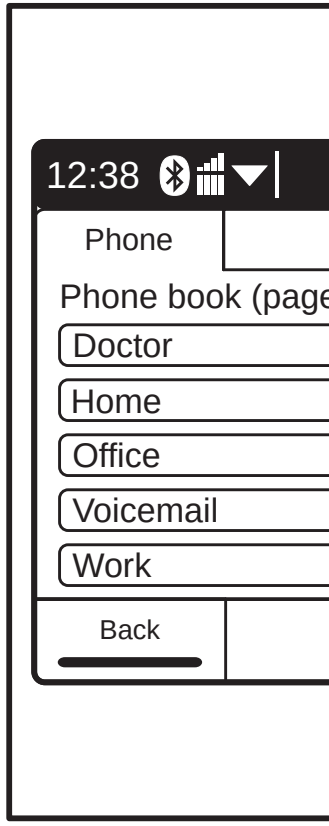

2. Touch **P**

layed.

B, **C** etc.

s displayed
alphabet.

h for the
touching
g **TUNE**.

splayed.

lling.

For phones that support this feature, refer to: www.holden.com.au

1. Activate the **Phone** menu screen.

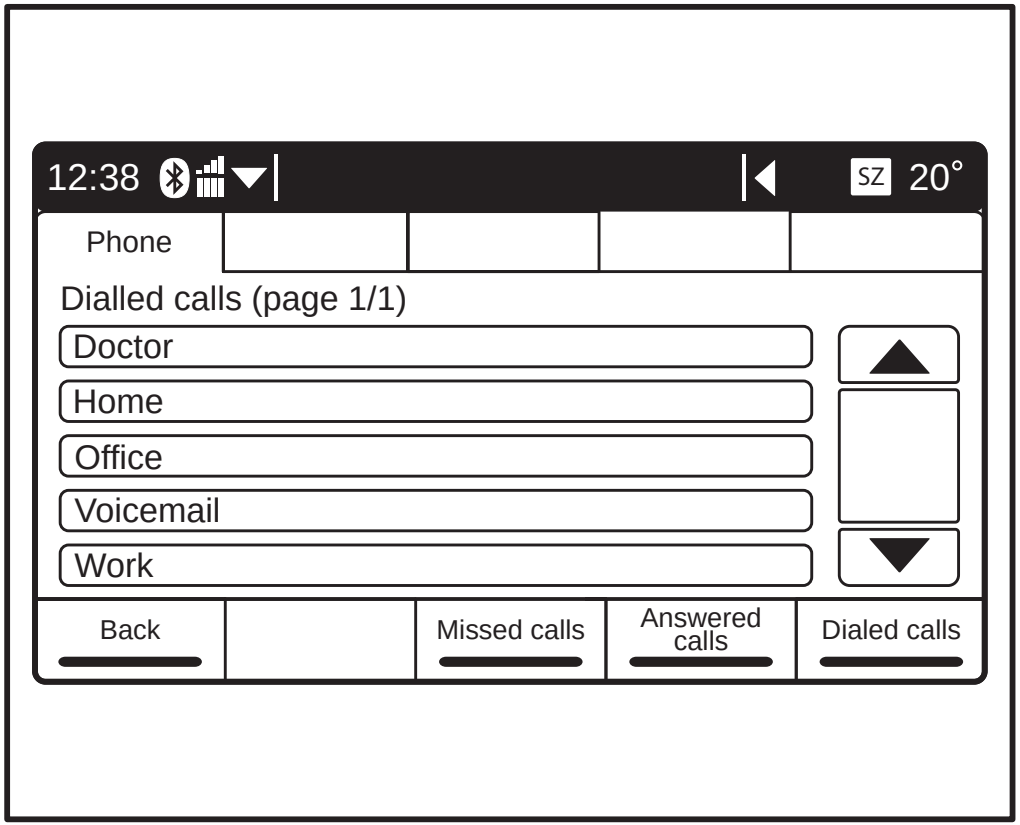

2. Touch **Call history**.

the Dialled

Call <*Name*

4. Touch **OK** t

Updating cont

To update the c
the display:

1. Activate the
screen.
2. Touch **Phon**
3. Touch **Refr**

Updating c

ort this
holden.com.au
e menu

y.
displayed.

nay need to

s...is displayed.
calls.

nay need to

s...is displayed.

the Answered calls list.

Call <*Name*> is displayed.

5. Press **OK** to start dialling.

Making a call from the missed calls list

Access your phone's missed call list through the infotainment system.

For phones that support this feature, refer to: www.holden.com.au

1. Activate the **Phone** menu screen.
2. Touch **Call history**.

   Dialled calls is displayed.

   Note

not visib
rotate **TU**
from the

Call <*Na*

5. Touch **O**

Making a ca

The phone
capability.

1. Press
remote c
the voice

Say nam

2. After the
the conta
3. The voic

topics and information on features, which may assist with operation.

Activating/deactivating the help feature

1. Press ⓘ to open the **Help** tab.
2. To get help on:
   - Features, touch **Feature help**.
   - Operating buttons, touch **Button help**.
3. Touch **Close** to exit.

- Aux
- Bluetooth p
- Bluetooth p
- Configurati
- Media
- Navigation
- Navi config
- Radio
- Radio confi
- Status bar
- Traffic

Selecting help on features

1. Press ⓘ to open the **Help** tab.
2. Touch **Feature Help**.
3. Touch ▲ or ▼, or rotate **TUNE** to browse the main topic list.
4. Touch the main topic for information.
5. Touch ▲ or ▼, or rotate **TUNE** to browse the sub topic list.
6. Touch the sub topic for information.
7. When highlighted, touch ▼ or rotate **TUNE** clockwise to select the second page of the sub topic.
8. Touch **Back** to return to the previous screen.

Help on buttons

Access help topics on the button functions.

The button functions are:

- AUX
- BACK
- CONFIG
- EJECT
- FOLDER NEXT/PREV
- HELP
- LEFT ROTARY
- MAP
- MEDIA
- MUTE
- NAV
- PHONE
- POWER
- RADIO
- RIGHT ROTARY
- TRACK UP/DOWN

Selecting help on buttons

1. Press ⓘ to open the **Help** tab.
2. Touch **Button Help**.
3. Touch ▲ or ▼, or rotate **TUNE** to browse the button function list.
4. Touch the button function for information.
5. Touch **Back** to return to the previous screen.

Climate control

Heating and ventilation system... 200
Air conditioning system 201

Heating and ventilation system

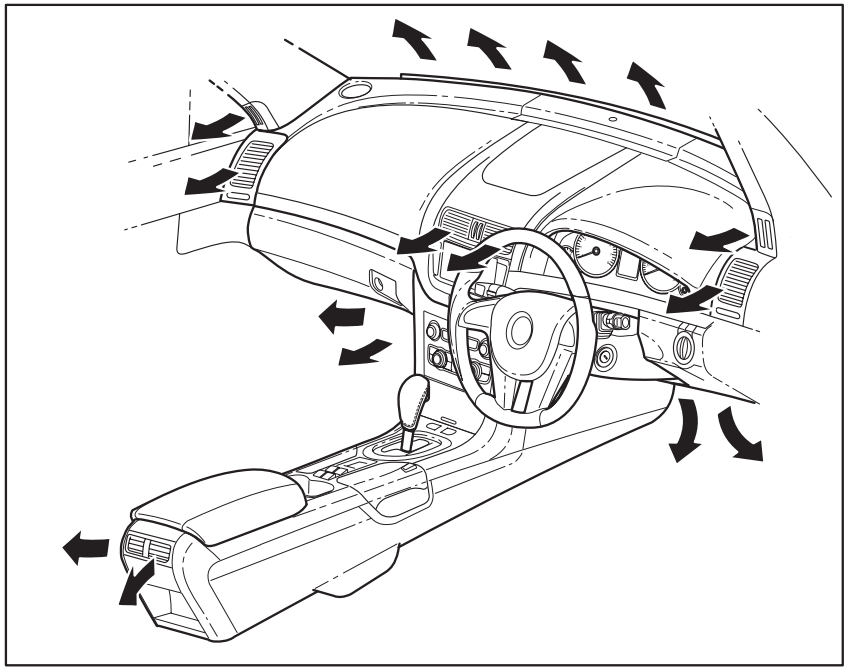

Outside air is drawn into the vehicle through the opening between the bonnet and the windscreen, unless recirculation has been selected.

Keep the area clear of debris.

Vents

The face and rear seat vents can be adjusted up or down and left or right to allow directional air flow.

The vents have shut-off doors to adjust the air volume, e.g. air flow at the centre vents can be reduced to enhance air flow at the rear seat vents.

The demister and floor-level outlets are fixed. They direct air to the windscreen, side windows and feet.

Air conditioning system

The climate control panel is located in the centre of the dashboard.

Settings for the driver and passenger can be adjusted independently.

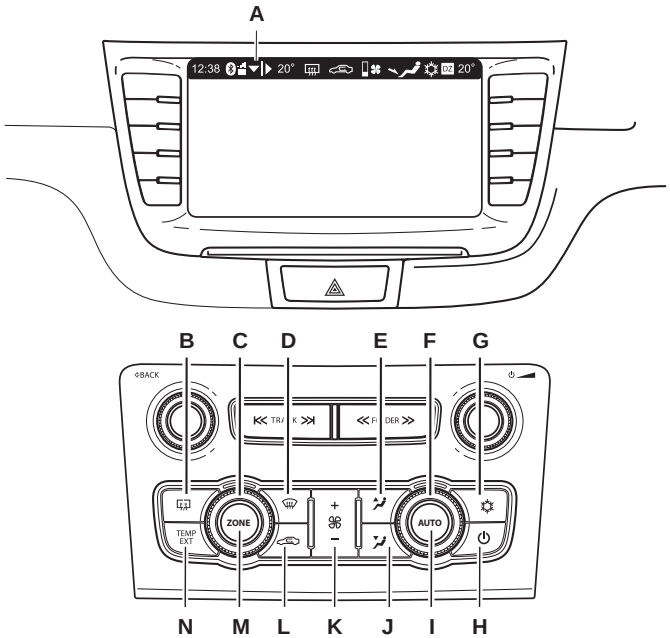

Controls

A. Display bar
B. Rear window demister
C. Temperature control: left side
D. Windscreen demister
E. Mode up
F. Temperature control: right side
G. Air conditioning
H. Off
I. Auto
J. Mode down
K. Fan speed
L. Recirculation
M. Zone
N. Exterior air temperature

Temperature controls

- Rotate controls (C) and (F) clockwise (warmer) or anticlockwise (cooler).
- The settings for each side appear on the display bar (A).
- Turning the control past 30°C, will show **H** (hottest).

  Turning the control past 17°C, will show **C** (coolest).
- Between 22°C and 24°C is recommended.

Single and dual zone

- Press **ZONE** (M) to select Single-Zone (SZ) mode or Dual-Zone (DZ) mode.
- **SZ** or **DZ** appear on the display.

Single-Zone (SZ) mode

All zones are set to the same temperature.

The temperature is shown on the display.

Adjust using the control (F).

Dual-Zone (DZ) mode

Dual-Zone mode allows different temperatures to be set for the left and right sides or to link them.

Adjust the passenger side by rotating control (C).

When linked, the passenger side temperature setting mirrors the driver side temperature setting.

To link, press and hold **AUTO** (I) for at least 3 seconds.

Note
Linking automatically occurs if the passenger and driver sides are set to the same temperature when the ignition is turned on.

Automatic operation

1. Turn the ignition on.
2. Press **AUTO** (I) if the icon is not already displayed.
3. Use the temperature controls (C) and (F) to adjust the temperature.
4. Allow the system to stabilise for a few minutes.
5. Adjust the angle of the air vents.

Note

The setting does not change when the ignition is turned off or on (except if extreme hot or cold is selected).

Fan

- Press **+** or **–** on ⌘ (K) to increase or decrease the fan speed.
- The fan speed appears on the display.

Note

- The climate control sets the fan speed automatically.
- When adjusting the fan speed, the system will revert to semi-automatic operation.

  An animation will appear on the display bar (A).
- When the engine is not running, fan speed is limited to conserve the battery.
- To return to automatic operation, press **AUTO** (I).

Mode

Press the mode buttons (E) and (J) to switch between the following positions:

- Face mode directs air to both dashboard and console vents.
- Bi-level mode directs approximately half the air to both dashboard and console vents and most of the remaining air to the floor vents.

  Cooler air is directed to the upper outlets and warmer air to the floor vents.
- Floor mode directs most of the air to the floor vents, some to the outer dashboard vents, windscreen and side window demist vents.
- Floor and windscreen demist (blend) mode directs air between the windscreen and floor vents, some to the outer dashboard vents and side window demist vents.

The settings appear on the display bar (A).

Note

- Manual selection of any mode will revert the system to semi-automatic operation.
- To return to automatic operation, press **AUTO** (I).

Auto

- Pressing **AUTO** (I) switches the system to automatic.
- **AUTO** appears on the display bar (A).

Note

- Use a minimum of manual adjustment.
- The **AUTO** icon on the display goes out when the system is operating manually.
- Allow the system to stabilise before changing settings.

Air conditioning

- Press ❄ (G) to switch the air conditioning on and off.
- ❄ appears on the display bar (A) when switched on.

  ❄ OFF appears on the display bar (A) when switched off.

Note

- When 🌬 or 🚗 or ⛆ is selected, the air conditioning is automatically switched on.
- To conserve fuel, the air conditioning may be switched off in cold weather.

  Other climate control functions are maintained.
- Air conditioning removes moisture and heat from the air.
- Switch the air conditioning on for at least 5 to 10 minutes once every 2 weeks to lubricate the system, even in winter.
- Air conditioning cannot be turned off in demist mode.
- Air conditioning may switch off during heavy acceleration, towing or when there is abnormal system pressure.

Recirculation

- Press 🚗 (L) to switch the air intake between recirculated air and outside air.
- 🚗 appears on the display.

Note

- Recirculation reuses interior air so is not recommended for long periods of time.

  If left on, fresh air is let into the cabin periodically.
- Do not use recirculation if occupants are smoking.
- Recirculation cannot be activated in demist mode.

Pollution mode

- Pollution mode selects recirculation when the vehicle speed is less than 15 km/h to prevent exhaust fumes entering the interior in heavy, stop/start traffic.
- To switch on or off, press and hold 🚗 for 4 seconds.
- **Pollution Mode ON** or **Pollution Mode OFF** appear on the display.

Windscreen demister

- Press (D) to demist the windscreen and side windows.
- Air conditioning is switched on automatically.

  Air conditioning cannot be switched off and recirculation mode cannot be switched on.
- appears on the display.
- Press (D) again to turn the demister off.

Rear window demister

- Press (B) to turn the rear demister on or off.
- appears on the display.
- The rear demister switches off automatically.

Outside temperature

- Press **TEMP EXT** (N) to display the outside temperature on the display bar (A).

  Pressing **TEMP EXT** does not stop the system operating automatically.
- Press **TEMP EXT** (N) again to return to the normal display.

Off

- Press (H) to switch the system off.
- Press any button to switch it back on.
- When the system is off, the rear window demister can still be switched on.

Adjust display bar size

- To minimise, touch to the right of within the display bar (A).

  Temperature and zone remain.
- To maximise, touch to the right of within the display bar (A).

Regular operation

Automatic

It is not necessary to set a cooler or hotter temperature than required to ensure fast cooling or heating.

Leave the system in automatic operation to:

- Turn the air conditioning on and off.
- Vary the temperature of the air entering the cabin.
- Switch between recirculate or fresh air.
- Vary the fan speed.
- Alter vent selection.

Starting

1. When cold, the system starts in mode with the fan off.
2. Warm air is then directed to the floor outlets.
3. Air is directed through selected vents.
4. Adjust vents manually.

Engine performance/ fuel economy

A small decrease in engine power and a slight increase in fuel consumption will be noticed when the air conditioning is in use.

At high speeds or heavy acceleration, the air conditioning may switch off momentarily.

Adjusting the temperature

When the climate control system has stabilised, adjust settings one degree at a time.

Quick cool down

When entering the vehicle on a hot day, open the windows for a short time to allow the hot air to escape, before operating the air conditioning.

Ignition keys

For vehicles equipped with personal identity keys, pressing sets the climate control to the last adjustments used for that key. See Personal identity keys on page 18.

Automatic transmission

If the vehicle is stopped for a long time in hot weather with the engine running and the air conditioning operating, move the shift lever to **N** or **P**.

Hissing

A slight hissing sound when the air conditioning switches off is normal.

Water

Water condensation can leave traces of clear water on the ground underneath the vehicle.

Unsealed roads (prevention of dust entry)

- When following another vehicle on unsealed roads and the dust is airborne, select recirculation (L).
- If the dust is not airborne select outside air and set the fan to high speed to help prevent dust entry.
- Ensure in both cases that all windows are closed.
- Do not use recirculation for long periods of time.

Sensors

The climate control uses three sensors to maintain temperatures:

- The sunlight sensor is located on top of the dashboard. See Instrument panel overview on pages 67 and 69.

  It monitors solar radiation when operating in AUTO mode, adjusting temperature, fan speed and air delivery.

  Cooler air may be supplied to the side of the vehicle facing the sun.

  Recirculation mode will be activated as necessary.

  Do not cover the sensor.
- The outside temperature sensor is located in front of the radiator and relies on air moving across it.

  It can be affected by radiant heat when the vehicle is stationary.

  To prevent false temperature readings, the displayed temperature will not change until the vehicle speed is above 16 km/h for 5 minutes or vehicle speed is above 40 km/h for 2 and a half minutes.

  If the vehicle has been switched off for less than 3 hours, the temperature at start up will be recalled from previous operation.
- The in-car temperature sensor is located in the dashboard. See Instrument panel overview on pages 67 and 69. It measures the temperature inside the vehicle.

  Do not cover the sensor.

Switching climate control off

If climate control is switched off:

- Background noises may still be heard.
- Recirculation and the rear window demister can still be switched on.

Cigarette smoke

Do not use recirculation if occupants are smoking.

Regular running

Switch air conditioning on for at least 5 to 10 minutes once every 2 weeks to lubricate the system, even in winter.

Pollen/dust filter

A passenger compartment air filter may be fitted to filter contaminants such as pollen and dust from entering the vehicle. This can be fitted by a Holden Dealer.

Driving and operating

Driving information.....208
Starting and operating.....208
Automatic transmission.....213
Manual transmission.....221
Brakes.....223
Ride control systems.....225
Object detection systems.....230
Fuel.....236
Towing.....244
Conversions and add-ons.....249

Driving information

Before entering the vehicle

Check that windows, mirrors and lamps are clean.

Visually check tyre inflation. Check tyre pressures weekly.

Before driving off

1. Close and secure all doors.
2. Position the seat for comfortable driving.
3. Adjust rear view mirrors.
4. Fasten seat belts.
5. Check that warning indicators illuminate when turning the ignition on. See Warning lights, gauges and indicators on page 74.

Starting and operating

New vehicle running-in

Use the following precautions to improve performance:

- Do not make full throttle starts.
- Avoid downshifting to brake or slow the vehicle.
- For the first 1,000 km:

  Do not drive at any one constant speed.

  Use moderate acceleration in lower gears.

  Avoid vehicle speeds above 110 km/h.
- Between the first 1,000 km and 5,000 km, heavy acceleration in lower gears may be used.

  Vehicle speeds above 110 km/h should be limited to five minutes per use.

- Avoid making hard stops for the first 350 km to avoid premature wear and early replacement of brakes.
- It is recommended that the new vehicle be driven for at least 1,500 km before towing. See Running-in when towing on page 248.

Rear axle run-in

If local statutory speed limits and road and traffic conditions permit driving the vehicle at its top speed, follow this additional run-in procedure.

Before driving the vehicle at its top speed for more than approximately five minutes, observe the following:

- During the first 1,000 km, use only moderate acceleration in lower gears and avoid vehicle speeds above 110 km/h.
- Heavy acceleration in lower gears may be used between 1,000 km and 5,000 km.
- Vehicle speeds over 110 km/h should be limited to five minutes per use.

Brakes

Do not let the vehicle run down hills, or coast with the engine off as the power assistance does not operate.

Ensure that nothing is under the brake pedal which could limit their use, such as poorly fitting floor mats.

Continuous or heavy use of brakes will shorten the life of the brake pads.

Power steering

The power steering fitted to the vehicle has been designed to reduce steering effort.

Do not turn and hold the steering wheel in the fully turned position when stationary.

If power steering is not working, due to the engine stalling for example, the vehicle can still be steered. Have the steering repaired as soon as possible by a Holden Dealer.

Mobile phones and CB radios

Use mobile phones and CB equipment that utilise an antenna fitted to the outside of the vehicle whenever possible.

If using mobile phones or CBs with an integrated antenna inside the vehicle, avoid using near the dashboard area, as some functions may be affected.

Loading the vehicle

Loading the vehicle changes handling when driving. See Vehicle weight on page 324.

Loose articles

Do not leave loose articles or luggage in the passenger compartment. Secure in the boot (Sedan)/cargo area (Sportwagon).

⚠Warning

Portable gas cylinders can leak, creating a risk of fire or explosion. As a precaution, ensure adequate ventilation when carrying gas cylinders. They must be restrained from rolling around and where possible, placed in the boot (Sedan) or cargo area (Sportwagon) of the vehicle. It is recommended that if gas cylinders are frequently transported that a purpose-built carrying compartment be used. Ensure any transportation of gas cylinders complies with the applicable regulations.

Tyre grip

Tyre grip decreases when water, snow, ice, gravel or other materials are on the road. Adjust your driving to the road conditions:

- Reduce speeds during wet conditions.
- Replace tyres when tread wear indicators are visible. See Tread depth on page 295.
- Regularly check that tyres are properly inflated. See Wheels and tyres on page 293.

Water crossing

Before crossing water, switch off the air conditioning.

Crossing deep water can damage the engine:

- Avoid crossing water deeper than 175 mm.
- Limit vehicle speed to a walking pace.

To dry out the brakes:

- Ensure there is a clear area ahead.
- Lightly apply the brakes.
- Maintain a slow forward speed until performance returns to normal.

Ignition positions

⚠Warning

Do not turn the engine off while the vehicle is moving as there will not be any power assist for brakes or steering.

Never remove the key while the vehicle is moving, as this will lock the steering.

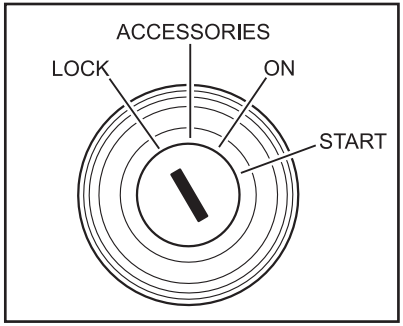

LOCK: When the key is in the LOCK position, some electrical accessories and the engine are off.

The key can only be inserted and removed from the LOCK position.

The engine is automatically disabled shortly after removing the key from the ignition.

The steering wheel is automatically locked when the key is removed.

To release the steering lock, re-insert the key and turn it towards the front of the vehicle. If still locked, turn the steering wheel slightly to the right or left while turning the key towards the front of the vehicle.

ACCESSORIES: When the key is in the ACCESSORIES position, the audio system and wipers operate.

ON: When the key is in the ON position, the engine is ready to start and all electrical systems are active. Warning lamps will illuminate. See Warning lights, gauges and indicators on page 74.

Do not leave the switch in the ON position for a long time, unless the engine is running, otherwise the vehicle's battery will discharge.

START: Turn the key to the START position momentarily and then release.

The engine starts automatically.

The key returns to the ON position when released.

Note

If the vehicle stalls after 5 seconds, return the key to the LOCK position. Slowly rotate the key to the START position. If the security warning lamp flashes, contact a Holden Dealer.

Retained Accessory Power (RAP)

The power windows will operate when the key is in the ON or ACCESSORIES positions.

Once the ignition is turned to the LOCK position, the RAP allows the power windows to continue to operate for up to 10 minutes. If a door is opened during this time, they will be deactivated.

Note

The audio system will be deactivated only if the driver's door is opened.

Starting the engine

1. Apply the park brake firmly. Release it only after starting the engine and you are ready to drive off.
2. Automatic transmission: Move the shift lever to position **P** or **N**. The engine will not start if the shift lever is in any other position.

   Manual transmission: Push the clutch pedal to the floor, move the shift lever to the neutral position then start the engine. Release the clutch pedal slowly.
3. Turn the key to the START position momentarily and release it. The engine starts automatically. The key automatically returns to the ON position.

Notes

- Manual transmission: The clutch must be pushed to the floor while turning the key, or the vehicle cannot be started.
- Do not depress the accelerator pedal while starting the engine.
- Do not subject the engine to full throttle acceleration or high speeds until it has reached normal operating temperature. Premature engine wear or damage may result.

Parking

1. Apply the park brake.
2. Automatic transmission: Select position **P**.

   Manual transmission: If facing uphill or on flat ground, select 1st gear. If facing downhill, select reverse gear.
3. Shut all windows.
4. Turn the ignition off and remove the key.
5. Press the button on the key to lock all doors and to arm the alarm system. See Vehicle security on page 25.

Note
The engine fan may keep going for several minutes after the ignition has been turned off. This is normal.

⚠Warning

Be careful where you park or drive. As with any vehicle, do not park or operate the vehicle in areas where combustible materials such as dry grass or leaves can come in contact with a hot exhaust system.

Exhaust gases are hazardous, especially if they concentrate in closed rooms.

Never leave the engine running in an enclosed space such as a closed garage or underground car park.

Automatic transmission

Shift lever positions

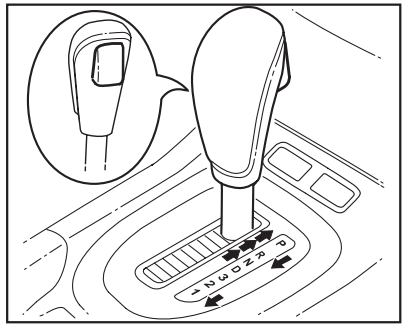

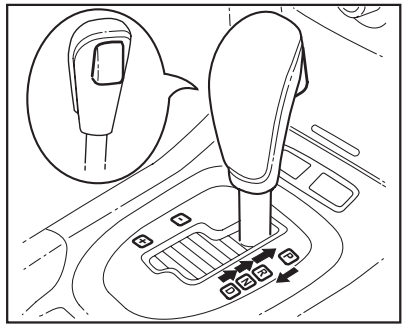

Press the select button on the front of the shift lever to move into any position.

4 speed transmission

Gear display

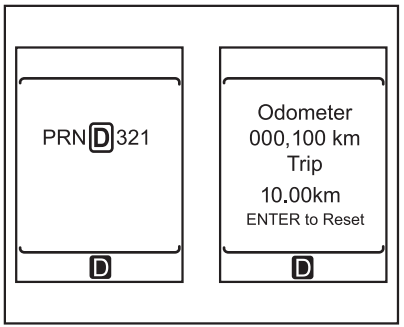

When the shift lever position is changed, an animation appears on the display.

The selected gear is magnified and changes according to the shift lever movement.

The animation appears on the display for 2 seconds after the gear is selected.

The lever position indicated on the bottom of the display remains on, indicating the currently selected gear.

Note

If any warnings are active on the display, the animation will not be shown. Only the indication on the bottom of the display changes when the shift lever is moved.

Shift lever positions

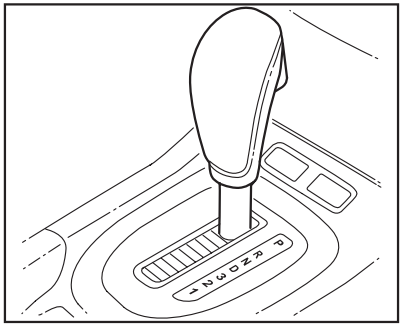

The engine will not start unless the shift lever is in position **P** or **N**.

P: In park position, the wheels are locked. Apply the park brake before leaving the vehicle.

Caution

Selecting position **P** while the vehicle is still moving can cause damage to the transmission.

Do not press the accelerator pedal with the brakes on in any gear except position **P** or **N**. This will overheat the transmission.

R: Place in reverse gear only when the vehicle is stationary. The reverse lamps will illuminate.

N: In neutral the vehicle can be moved without the engine running, e.g. to be towed or pushed.

⚠Warning

To prevent the vehicle from moving when position **N** is selected, always apply the park brake, depress the foot brake or use suitable chocks to block the wheels.

Do not coast the vehicle in position **N** – this decreases your control and ability to accelerate quickly in an emergency.

D: Used for general driving. Use with sport shift mode when towing on the highway at speeds over 80 km/h.

3: Provides engine braking in 3rd gear. The transmission will only shift between 1st, 2nd and 3rd gears. Select with sport shift mode when towing at speeds under 80 km/h.

2: Provides engine braking in 2nd gear. Do not select at more than 120 km/h.

1: Provides engine braking in 1st gear. Use on a steep gradient, when a strong braking effect is needed.

Note

It is recommended that cruise control or sport shift mode be used for towing.

Caution

Do not use the accelerator pedal to hold the vehicle stationary on an uphill slope. Use the brakes.

Warm up mode

At temperatures of approximately 5°C or below, the transmission may shift up later than normal until the engine reaches operating temperature (approximately 5 minutes). This helps the engine to warm up quickly to improve heater performance.

Sport shift mode

Select sport shift mode where maximum engine power and transmission responsiveness is required.

When operated in sport shift mode, the transmission will delay upshifts and allow earlier downshifts.

The button is located in front of the shift lever.

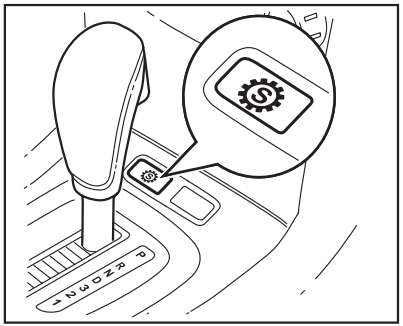

1. To activate sport shift mode, press .
2. To deactivate sport shift mode, press again.

When the ignition is turned off then on again, sport shift mode will be deactivated and normal shift mode will be selected.

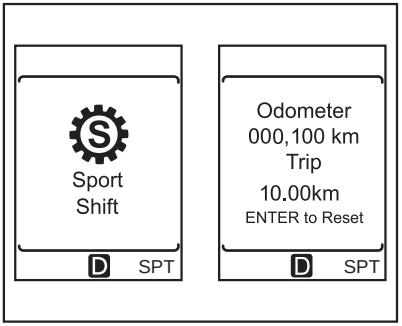

The **Sport Shift** animation appears on the display for 2 seconds.

On the bottom of the display, **SPT** appears as long as sport shift mode is selected.

6 speed transmission

Gear display

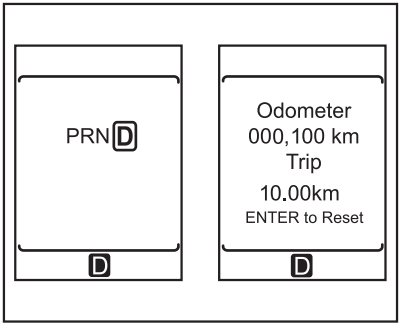

When the shift lever position is changed, an animation appears on the display.

The selected gear is magnified and changes according to the shift lever movement.

The animation appears on the display for 2 seconds after the gear is selected.

The lever position indicated on the bottom of the display remains on, indicating the currently selected gear.

Note
If any warnings are active on the display, the animation will not be shown. Only the indication on the bottom of the display changes when the shift lever is moved. See Active Select (A/S) mode on page 220.

Shift lever positions

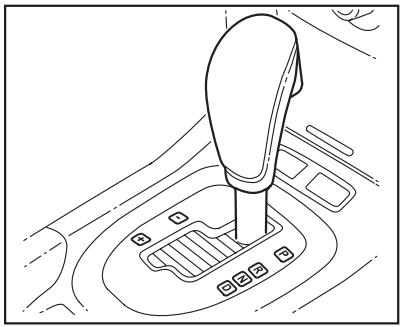

The engine will not start unless the shift lever is in position **P** or **N**.

P: In park position, the wheels are locked. Apply the park brake before leaving the vehicle.

Caution

Selecting position **P** while the vehicle is still moving can cause damage to the transmission.

Do not press the accelerator pedal with the brakes on in any gear except position **P** or **N**. This will overheat the transmission.

R: Place in reverse gear only when the vehicle is stationary. The reverse lamps will illuminate.

N: In neutral the vehicle can be moved without the engine running, e.g. to be towed or pushed.

⚠Warning

To prevent the vehicle from moving when position **N** is selected, always apply the park brake, depress the foot brake or use suitable chocks to block the wheels.

Do not coast the vehicle in position **N** – this decreases your control and ability to accelerate quickly in an emergency.

D: Used for general driving. The transmission automatically selects the appropriate gear according to the current load and driving conditions.

+/–: While in sport shift mode, move the shift lever to the **+** or **–** position to enable A/S mode.

To shift up a gear, briefly pull the lever rearwards (+) and release it. To shift down a gear, briefly push the lever forwards (–) and release it. See Active Select (A/S) mode on page 220.

Note

- It is recommended that cruise control or sport shift mode be used for towing.
- A/S mode may also be used under light load conditions.
- A small increase in engine speed may occur during some downshifts.

Caution
Do not use the accelerator pedal to hold the vehicle stationary on an uphill slope. Use the brakes.

Powertrain braking

When driving on steep descents in sport shift mode, where frequent braking is required, the transmission will downshift a gear to help hold vehicle speed and reduce brake wear.

If the brake is continuously pressed, the transmission will downshift until 3rd gear is reached.

If the brake is released for some time, the transmission will upshift a gear.

If the road levels out and the accelerator pedal is pressed, the transmission will upshift until the appropriate gear is reached.

A/S mode can be switched on to override this feature.

Sport shift mode

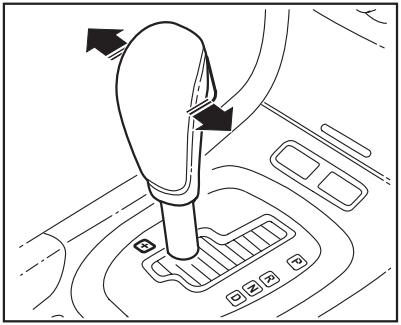

Sport shift mode can be selected where maximum engine power and transmission responsiveness is required.

When operated in sport shift mode, the transmission will delay upshifts and allow earlier downshifts.

To activate sport shift mode:

1. Move the shift lever to position **D**.
2. Push the shift lever to the left.

   Do not move the shift lever to **+** or **–**, otherwise A/S mode will be enabled.
3. To return to normal shift mode, move the shift lever right, to position **D**.

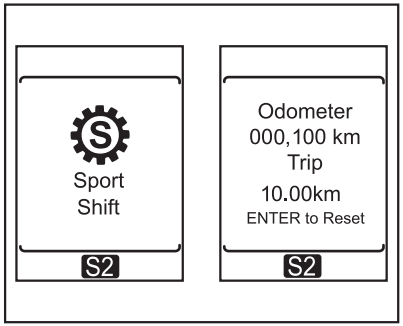

The **Sport Shift** animation appears on the display for 2 seconds.

On the bottom of the display, **S** and the currently selected gear appears as long as sport shift mode is selected.

Performance Mode Lift Foot (PMLF)

PMLF is a performance feature with sport shift mode.

PMLF allows the transmission to hold the current gear instead of upshifting when the throttle is lifted.

It will also enable shifts to a lower gear at higher vehicle speeds and delay upshifts to a higher gear for sportier vehicle performance.

Normal shift mode

Normal shift mode is recommended for normal or freeway driving, as it provides optimum fuel economy.

When the ignition is turned on, normal shift mode is selected.

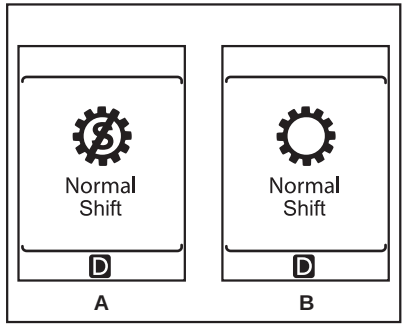

The **Normal Shift** animation appears on the display, 4 speed (A) and 6 speed (B) for 2 seconds.

Active Select (A/S) mode

A/S mode (6 speed only) allows gears to be selected manually, so that the vehicle can be driven in a sport oriented manner.

It can also provide engine-braking by selecting the appropriate lower gear on a steep downhill grade.

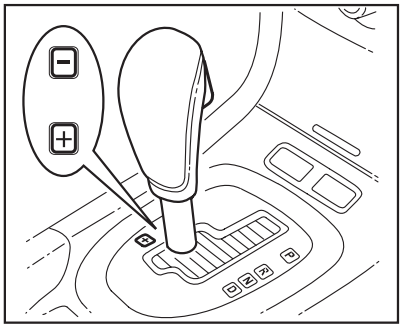

To enable A/S mode, move the shift lever to position **D** then push the lever to the left.

To shift up a gear, briefly pull the lever rearwards (**+**) and release it.

To shift down a gear, briefly push the lever forwards (**–**) and release it.

After changing the gear and releasing the shift lever, it returns to the centre on the left.

Do not hold the shift lever in the + or – position.

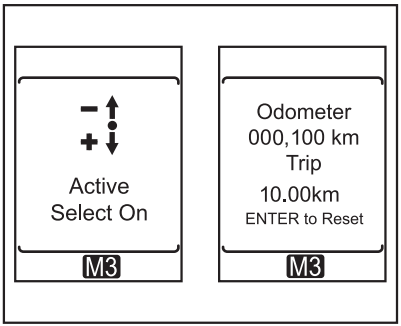

The **Active Select On** animation appears on the display for 2 seconds.

On the bottom of the display, **M** and the currently selected gear appears as long as A/S mode is selected.

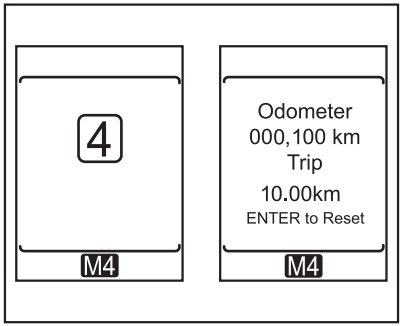

When shifting up or down, the selected gear (**1**, **2**, **3**, **4**, **5**, or **6**) is also animated on the display.

The animation appears on the display for 2 seconds after the gear is selected.

Note

- The transmission will shift to a selected gear only if the engine speed is within a suitable range.

  If not suitable, **Shift Denied** will be displayed and the transmission will not shift gears.
- If the engine speed becomes too low for the currently selected gear, the transmission will automatically shift down, even though A/S mode is still selected.
- While in A/S mode, 2nd or 3rd gear starts (V8) or 2nd gear starts (V6) can be selected from a standing start. This is useful for gentle acceleration on slippery surfaces.

To disable A/S mode and return to automatic mode, push the shift lever to the right, position **D**.

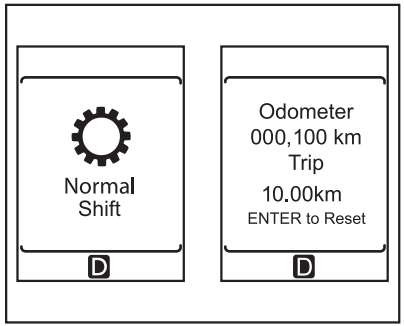

The **Normal Shift** animation appears on the display for 2 seconds.

On the bottom of the display the currently selected gear appears.

Manual transmission

Gear display

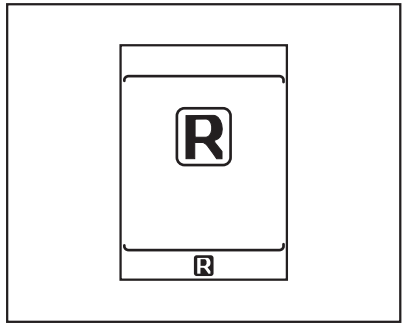

When **R** is selected, an animation appears on the display, and a chime sounds.

Shift pattern

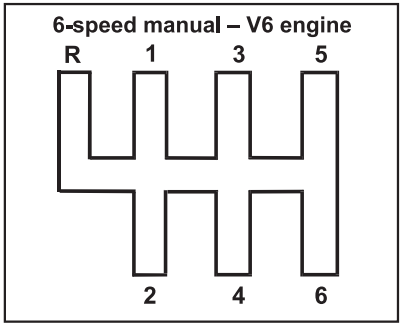

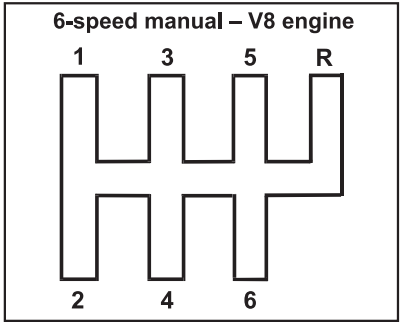

V6 and V8 engines equipped with manual transmissions have six forward gears and a reverse gear, shown on top of the shift lever.

Manual operating notes

- When shifting from one gear to another, push the clutch pedal to the floor.
- Do not engage reverse gear while the vehicle is still moving.
- To select **R**, move the shift lever sideways against spring pressure to engage reverse gear.
- Pause between pressing the clutch pedal and moving into reverse gear.
- Whenever reverse gear is selected with the ignition on, the reverse lamps illuminate.
- For vehicles fitted with a manual transmission; when on level roads, in an unladen condition, it is permissible to drive off in 2nd gear, in the interest of fuel economy.
- Do not drive with your foot resting on the clutch pedal.
- When stopped on an incline, do not hold the vehicle stationary using the clutch. Use the park brake or foot brake.
- Shift to a lower gear when climbing steep grades, before the engine starts to labour.
- Shift to a lower gear before descending steep grades.
- Do not over rev the engine when shifting to a lower gear.
- V6, 5th gear provides direct drive, whereas 6th gear provides overdrive.
- V8, 4th gear provides direct drive, whereas 5th and 6th gears provide overdrive.

Brakes

Antilock Brake System (ABS)

The ABS:

- Continuously monitors the vehicle's braking system preventing the wheels from locking up.
- Allows maximum braking effort while full steering control is retained, even in the event of panic braking.

⚠Warning

Do not let this special safety feature tempt you into taking risks when driving. Traffic safety can only be achieved by adopting a responsible driving style. You should always adjust the vehicle's speed to suit road and traffic conditions. Always maintain an adequate distance to the vehicle in front of you.

Operation

ABS operation is noticeable by pulsing of the brake pedal and the noise of the regulation process.

Keep the brake pedal fully pressed throughout the braking process, without pumping it.

Caution

When the ignition is turned on, the (ABS) warning lamp briefly illuminates. This self-check may be audible.

If the (ABS) warning lamp (ABS off) on the instrument panel display does not extinguish or illuminates when driving, a malfunction has occurred. The **ABS Fault** animation will illuminate on the display.

Note The vehicle's brake system remains operational, but without ABS assistance. Have a Holden Dealer check the system as soon as possible.

The **ABS Fault** animation will be displayed until the **TRIP** or the ENTER button are pressed.

The (ABS) warning lamp will remain illuminated until the problem is repaired.

Park brake

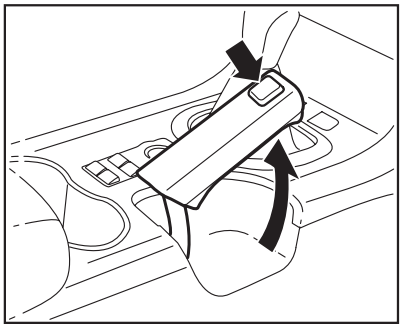

The park brake lever is located between the front seats.

Applying the park brake

Pull the lever straight up, without pressing the release button.

When the ignition is turned on and the park brake is applied, the park brake warning lamp (!) appears on the display.

Releasing the park brake

1. Pull the lever slightly upwards.
2. Push in the release button on the top of the lever and lower the lever all the way down.

⚠Warning

Never drive the vehicle with the park brake applied.

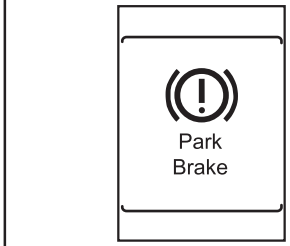

If attempting to drive off without releasing the park brake, a warning chime sounds and the **Park Brake** animation appears on the display.

The animation remains illuminated until one of the following occur:

- The park brake is released.
- The vehicle is stationary.
- **TRIP** is pressed on the steering wheel.

Ride control systems

Electronic Stability Program (ESP®)

The ESP®:

- Is an advanced feature that works in conjunction with the vehicle's ABS and includes the Traction Control System (TCS).
- Improves driving stability in any driving situation.
- Assists in maintaining vehicle stability when the vehicle's grip level is exceeded such as a sudden lane change, slippery or unexpected road conditions.
- Alters engine power and/or braking on specific wheels, improving the vehicle's steering control and power delivery, on wet or slippery roads, particularly on snow and ice.
- ESP® is a registered trademark of Daimler Chrysler AG.

⚠Warning

Do not let this special safety feature tempt you into taking risks when driving. Traffic safety can only be achieved by adopting a responsible driving style. The vehicle's speed should always be adjusted to suit road and traffic conditions.

Activation

While the ESP® is maintaining vehicle stability, the **Stability Ctrl Assistance** animation appears on the display.

ESP CTRL illuminates at the bottom of the display as long as the assistance is maintained.

The animation will be displayed until **TRIP** on the steering wheel is pressed.

Switching ESP® on and off

In certain circumstances, it may be helpful to disable the ESP®, e.g. on steep gravel inclines, or if the vehicle is bogged. It may be possible to get more traction from a slightly spinning wheel.

Note

Switch the ESP® off when snow chains are fitted, to maintain normal driving operation.

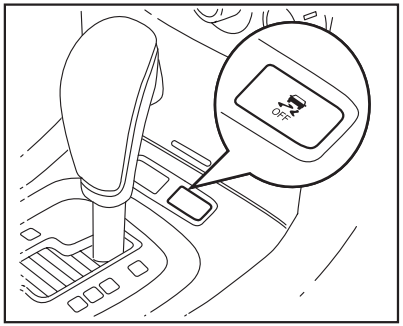

The ESP® is automatically switched on each time the engine is started.

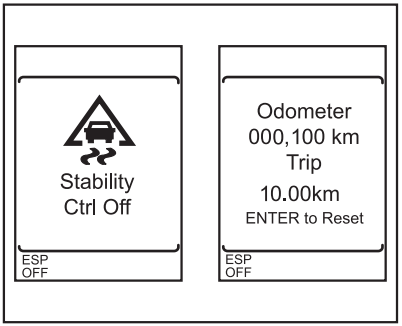

To switch off, press OFF:

- The **Stability Ctrl Off** animation appears on the display for 2 seconds.
- **ESP OFF** remains at the bottom of the display as long as the ESP® is switched off.

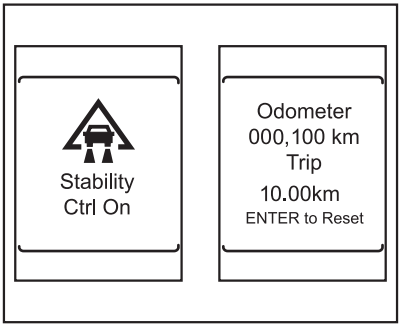

To switch on, press OFF:

- The **Stability Ctrl On** animation appears on the display for 2 seconds.
- **ESP OFF** disappears.

Malfunction indication

If pressing OFF and the animations do not display as described, a malfunction has occurred. The system will not work. Contact a Holden Dealer.

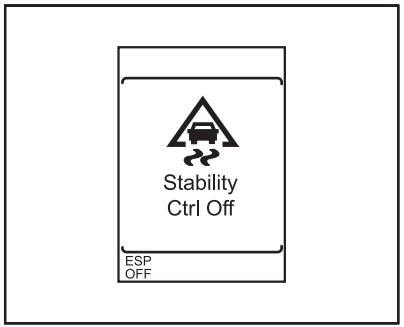

If the **Stability Ctrl Off** animation is shown, press **TRIP** on the steering wheel.

ESP OFF appears at the bottom of the display until the problem is repaired.

Electronic Brake Assist (EBA)

The EBA:

- Is incorporated into the ESP® system and detects rapid braking.
- Provides maximum braking efficiency as long as the brake pedal is depressed.
- Initiates ABS earlier, shortening the stopping distance required.

⚠Warning

Do not let this special safety feature tempt you into taking risks when driving. Traffic safety can only be achieved by adopting a responsible driving style. The vehicle's speed should always be adjusted to suit road and traffic conditions. Always maintain an adequate distance to the vehicle in front of you.

Cruise control

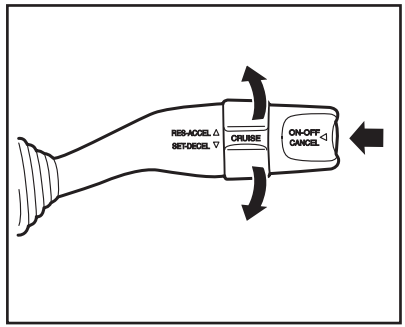

The cruise control:

- Maintains the vehicle's speed without pressure on the accelerator pedal.
- Will only operate at speeds above 38 km/h.
- Lever is located on the right side of the steering column.

Setting a speed

1. Turn the ignition on.

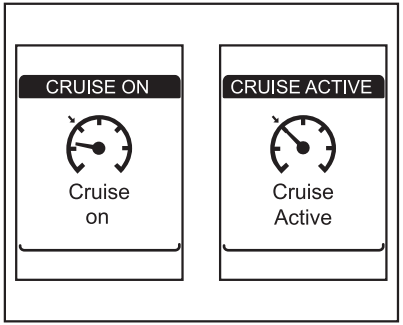

2. Press the **ON-OFF/CANCEL** switch at the end of the lever.

   The **CRUISE ON** animation appears on the display.
3. When travelling at the desired speed, rotate the collar down to the **SET-DECEL** position.

   The **CRUISE ACTIVE** animation appears on the display.
4. Release both the accelerator pedal and the collar.

After a few seconds, the animation reverts to the original trip computer display.

CRUISE ON or **CRUISE ACTIVE** appears at the top of the display.

Adjusting the set speed

To reduce the set speed, rotate the collar down to the **SET-DECEL** position.

To increase the set speed, rotate the collar up to the **RES-ACCEL** position.

After releasing it, the new speed will be maintained.

To change the speed in small increments, momentarily rotate the collar.

Pausing the cruise control

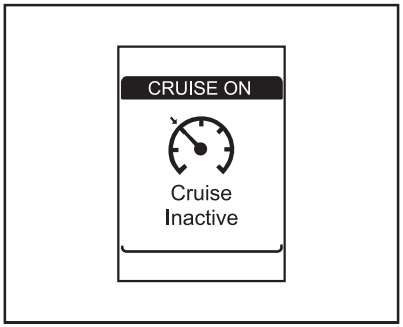

1. Press the brake pedal or the clutch pedal (manual transmission) or press the **ON-OFF/CANCEL** switch once. Cruise control deactivates.

   The **Cruise Inactive** animation appears on the display but the speed is retained in memory.
2. To regain the stored speed, momentarily rotate the collar to the **RES-ACCEL** position.

   Holding the **RES-ACCEL** position will cause the vehicle to accelerate.

Turning the cruise control off

Press the **ON-OFF/CANCEL** switch twice.

The **Cruise Off** animation appears on the display.

Notes about cruise control

- Pressing the **ON-OFF/CANCEL** switch once pauses the cruise control but keeps the speed in memory.
- A second press turns the system off and removes the speed memory.
- A third press turns the system back on to ready, without any speed memory.
- Turning the ignition off deactivates cruise control and clears the memory.

⚠Warning

Do not use the cruise control when road or driving conditions require varying speeds. A constant speed is not practical in heavy or varying traffic or on winding, slippery or rough roads.

Remember that when **CRUISE ACTIVE** is displayed, the cruise control is maintaining the vehicle's speed. Taking your foot off the accelerator pedal does not reduce the speed. To deactivate the cruise control, either press the brake pedal, press the clutch pedal (manual transmission) or push the **ON-OFF/CANCEL** switch.

The cruise control does not apply the vehicle's brakes. The vehicle may gain speed when going down steep hills.

When climbing steep hills (particularly when towing), the vehicle may lose speed. In this case, use the accelerator pedal. Release the accelerator pedal when the speed returns to the set speed.

The cruise control is cancelled if the Electronic Stability Program (ESP®) becomes active, indicated by the **Stability Ctrl Assistance** animated warning on the instrument panel display.

Object detection systems

Park Assist (PA)

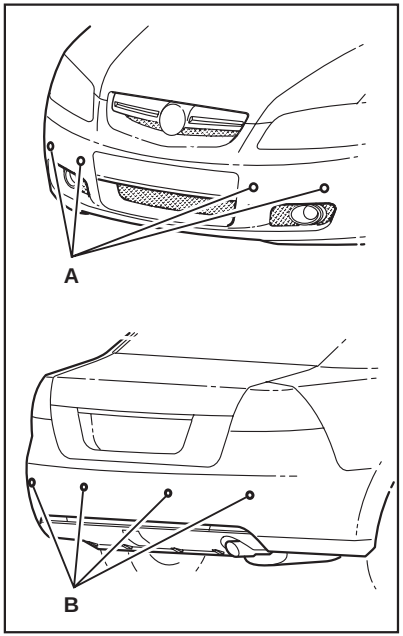

The vehicle may have one of the following two systems:

Rear Park Assist (RPA)

This system is able to detect obstacles at the rear of the vehicle when reversing.

The RPA consists of sensors on the rear (B) bumper, a control unit and a speaker in the rear of the vehicle's interior.

Dual Park Assist (DPA)

This system is able to detect obstacles in the front and the rear of the vehicle when moving forward and reversing.

The DPA consists of sensors on the front (A) and rear (B) bumpers, a control unit and speakers in the front and rear of the vehicle's interior.

⚠Warning

The driver is always responsible for taking care and attention while manoeuvring the vehicle. The PA is only an aid and is neither intended to, nor able to take over any responsibility.

The park sensors may not be able to detect all objects under every condition e.g. objects too close to the vehicle, objects above or below the sensors, or objects with a surface that absorbs ultrasonic waves. Additionally, some ambient conditions like ultrasonic waves or heavy rain can cause disruptive reflections from an object's surface. Such objects may not be detected.

Always manoeuvre the vehicle slowly to allow yourself sufficient time to react. The warning tones will sound only while the vehicle's speed is below 15 km/h.

Caution

Sensors are not working when:

- A confirmation tone does not sound.
- The **Park Aid Assist Fault** animation appears on the display.

Check and clean the sensors.

If the problem persists, contact a Holden Dealer.

Notes

- The range of the rear sensors is approximately 240 cm.
- The range of the front sensors is approximately 150 cm.

When an object is detected:

- A warning tone sounds.
- As the distance decreases, the repetition rate of the tone increases.
- At a distance of about 30 cm, the warning tone sounds continuously.
- If the distance remains constant, after about 5 seconds, the tone will stop.
- If the distance to the object increases, the tone will stop.
- When reverse gear is selected (DPA) and the rear and front sensors both detect objects, only the closest object will be indicated.
- If two objects at the same distance are detected, the object at the rear of the vehicle will be given priority.

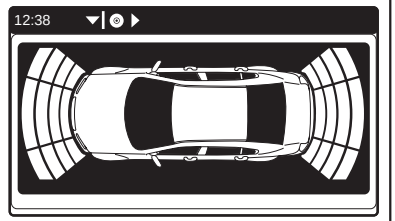

- When reverse is selected the animation is displayed on the infotainment screen.
- If the sensors are activated, an animation will display the detection range.
- If an object enters the range, the sector will illuminate green. When the distance decreases, additional sectors will illuminate and the colour will change to yellow, orange and finally red.

- When drive is selected (DPA), the animation is shown only when the sensors detect an object and the vehicle's speed is below 15 km/h.
- If a short tone is heard when there are no objects visible, it may be due to ground reflections, children or animals. Be aware.
- Keep bumper sensors free from dirt, scratches, grime, ice, frost and snow with a soft cloth.

Operation

Rear Park Assist (RPA)

The RPA is activated automatically when the following occur:

- The ignition is turned on.
- The reverse gear is selected.
- The park brake is released.

A short single tone from the rear speaker sounds to confirm that the rear sensors are operational.

Dual Park Assist (DPA)

The DPA is activated automatically when the following occur:

- The ignition is turned on.
- A gear is selected.
- The park brake is released.

Once the reverse gear is selected, a short single tone from the rear speaker sounds to confirm that both the rear and front sensors are operational.

When a forward gear is selected after reverse, the front and rear sensors will remain operational until the vehicle's speed exceeds 15 km/h.

If a forward gear is selected, only the front sensors are activated and the tone will sound from the front speaker.

Note

The DPA:

- Automatically deactivates when the vehicle's speed exceeds 15 km/h.
- Is reactivated if changing from a forward to reverse gear or vice versa, or if the ignition is turned off then on again.
- When manually deactivated, will not automatically activate until the DPA has been manually reactivated.

Manual adjustment

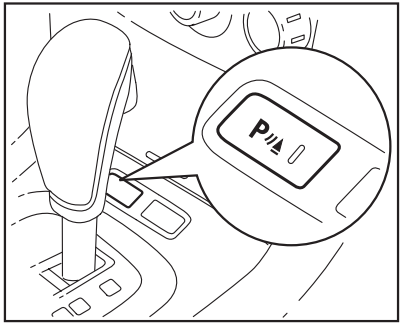

When the vehicle's speed is below 15 km/h:

- To deactivate the DPA, press P once. The light in the button will turn off.

- To reactivate the DPA, press P⁄▲ once. The light in the button will illuminate and the front sensors will activate.

  Alternatively, select reverse gear.

If the DPA is activated and the light in the P⁄▲ button:

- Does not illuminate, check that the ignition is turned on, the vehicle is in gear and the park brake is not activated.
- Flashes when the button is pressed.

  Contact a Holden Dealer.

Objects attached to the vehicle

When any device is attached to the rear of the vehicle, such as a trailer or a bicycle rack, the PA will:

- Detect this as an attached object.
- Deactivate automatically about 10 seconds after the vehicle's forward speed exceeds 15 km/h.
- Be reactivated automatically when the object is removed, the ignition is turned off then on again and the vehicle's forward speed exceeds 15 km/h.

Adjustment for a tow bar

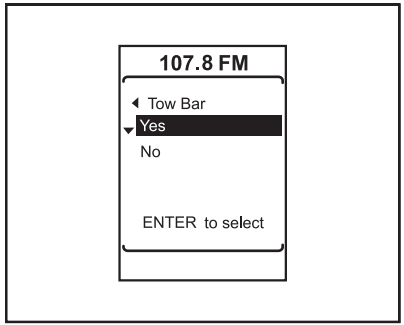

When a tow bar is fitted, the rear park sensors require adjustment to allow for the tow ball tongue:

- Enter the vehicle personalisation menu and select the feature **Tow Bar**.
- Select **Yes** and press the ENTER button.
- Select **No** and press the ENTER button if the tow ball tongue is removed.

Note

- This adjustment is for Holden approved tow bars fitted by a Holden Dealer.
- If a different tow bar is fitted, the system may detect it as an attached object and will be deactivated.
- The Holden Dealer fitted accessory, RPA, does not require adjustment for tow bar tongue removal.

Rear Vision Camera (RVC)

The vehicle may have a RVC system.

⚠Warning

Never rely solely on the reverse camera when reversing the vehicle.

There is a blind spot that can not be sensed by the rear view camera.

The reverse camera is not intended to replace the driver's judgement or attention toward the rear of the vehicle when reversing.

Before entering the vehicle always check that the area around the vehicle is clear of obstacles and people.

Always perform head checks and use the vehicle's mirrors when reversing.

If the vehicle sustains any damage in the area of the reverse camera (rear number plate surround), the camera may become misaligned. Contact a Holden Dealer.

Always keep the camera lens free from dirt, snow or ice. Only use mild soap and water with a soft cloth to clean the lens.

A view of the area behind the vehicle is displayed on the infotainment screen, when reverse gear is selected.

The RVC cannot display objects:

- Close to the corners of the bumper.
- Forward of the camera.
- Higher than the camera.

Note

- The distance of the objects seen on the screen differs from the actual distance.
- The area displayed depends on the road condition and vehicle orientation.

Cleaning

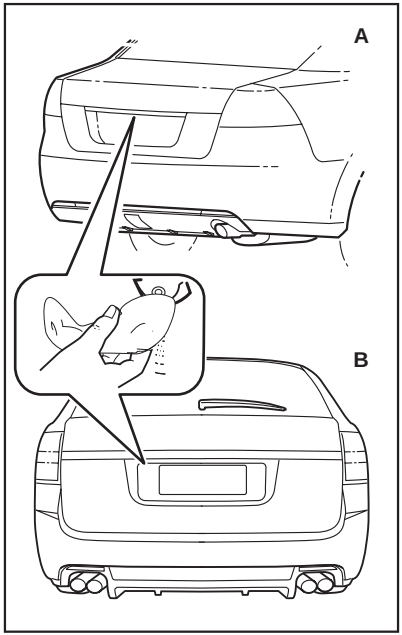

- The camera is located at the top of the rear number plate surround on a Sedan (A) and Sportwagon (B).

- The lens requires regular cleaning to ensure optimum performance.
- Use only a soft cloth, mild soap and water.

⚠Warning

Do not use abrasive cleaners or scouring pads as they could scratch the lens, impairing the systems performance.

Operation

1. Turn the ignition on.
2. Press ⏻ to turn the infotainment system on.

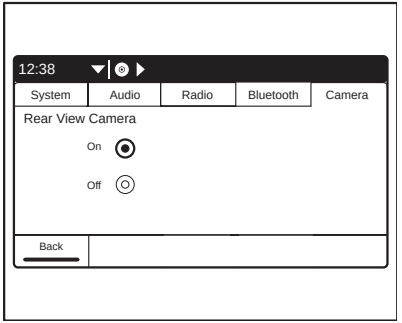

3. Press **CONFIG**.
4. Touch **Camera**.
5. Touch **Rear View Camera**.
6. Touch **On** or **Off**.

   The option selected is indicated by ⊙.
7. Touch **Back** to exit.
8. Select reverse gear.

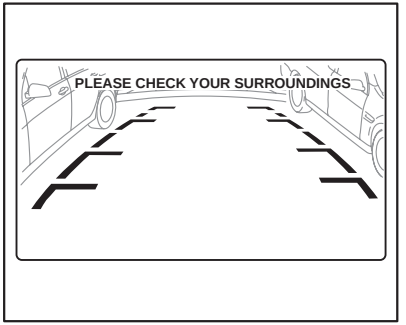

9. The camera display appears on the infotainment screen.

Notes

- Objects of different heights will appear to be different distances from the vehicle.
- The grid on the display is to used as a guide only. It does not represent a set distance from the vehicle.
- The RVC display will override all other operating displays.

- The RVC display may be temporarily interrupted when some audio system or climate control settings are changed.
- The PA animation on the infotainment screen will not be seen when the reverse camera is enabled. See Park Assist (PA) on page 230.
- The PA warning tones will still be heard when the reverse camera is enabled. See Park Assist (PA) on page 230.

The reverse camera system may be affected by the following:

- If sun or headlamp beams are shining directly into the camera lens.
- If the vehicle sustains any damage in the area of the camera lens. Contact a Holden Dealer.
- If dirt, snow or ice has built up, clean the lens. See Cleaning on page 234.

Fuel

⚠Danger

EXHAUST WARNING – CARBON MONOXIDE POISONING

Exhaust gases can produce carbon monoxide, a dangerous gas, which can cause unconsciousness and even death to both humans and animals.

Gases could be inhaled if the exhaust system on your vehicle is faulty.

To protect against exhaust gases entering the vehicle, the exhaust system and body should be inspected:

- Each time the vehicle is serviced.
- Whenever a change is noticed in the sound of the exhaust system.
- Whenever the exhaust system, underbody or rear of the vehicle is damaged.

Take the vehicle to a Holden Dealer if you think the vehicle needs inspecting for any of the above reasons.

Do not sit (or leave children or pets) in a parked vehicle for any extended period of time with the engine running. Do not run the engine in an enclosed area (such as the garage) any longer than is needed to move the vehicle.

Driving with the boot (Sedan) or tailgate (Sportwagon) open is not recommended. If you must travel with the boot (Sedan) or tailgate (Sportwagon) open, close all windows, ensure that the heater controls are set to outside (rather than recirculate) with air directed to the face and the fan on the highest speed. Do not exceed 50 km/h.

⚠Danger

FUEL

Fuel is extremely flammable and highly explosive.

Always switch off the engine of the vehicle and any mobile phones when refuelling.

Do not smoke or allow open flames or sparks near the vehicle when refuelling.

If fuel fumes are smelt while driving, the cause should be found and corrected without delay by a Holden Dealer.

Caution

FUEL ADDITIVES

Various additives are used in the formulation of good quality fuel and the use of supplementary additives in fuel is not required unless specified by Holden. Under no circumstances should fuel containing the manganese additive known as MMT (methyl cyclopentadienyl manganese tricarbonyl) be used, as this additive is known to cause contamination of catalytic converters, spark plugs and the malfunction of On-Board-Diagnostic (OBD) systems. The use of fuel additives that are not recommended by Holden may affect your New Vehicle Warranty to the extent that Holden considers that the additives affect the specifications and quality of the vehicle.

Caution

USE OF FUEL CONTAINING ETHANOL

When purchasing such fuel, we recommend that the vehicle be operated on fuel containing no more than:

3.0L V6 petrol = 85% ethanol

3.6L V6 petrol = 10% ethanol

3.6L V6 dual fuel = 10% ethanol

6.0L V8 petrol = 85% ethanol

Under no circumstances should fuel containing more than these percentages of ethanol be used. Use of such fuels may result in engine malfunction, starting and operating difficulties and materials degradation. These adverse effects could result in permanent damage to the vehicle and personal injury. It is also important to note that when ethanol blends are used, fuel consumption can be expected to

increase due to the lower energy content of ethanol.

The use of fuel containing more than these percentages of ethanol may also affect your New Vehicle Warranty to the extent that Holden considers that the fuel affects the specifications and quality of your vehicle.

If the outside temperature range is between –18°C and 0°C, the engine may take longer to start.

The use of any fuel, other than the fuel specified below, may seriously damage the vehicle and may void the warranty. Only clean fuel of good quality should be used.

Fuel type

Use unleaded petrol of regular 91 Research Octane Number (RON) rating or higher.

Use of Premium unleaded petrol (95 RON or higher) may provide a small improvement in performance and fuel economy.

Refuelling

Always fill the fuel tank at the intermediate or fast fill rate. Do not add any more fuel after the fuel filler first clicks off or fuel blows back. This allows room for the fuel to expand inside the tank.

Only trickle-fill fuel tanks when the vehicle is to be driven for more than 50 km immediately after the tank is filled. However, this is not recommended on days over 30°C.

Wipe off any overflowing fuel immediately from the vehicle. Replace the fuel cap and close the fuel opening then spray or splash with water.

Fuel filler flap

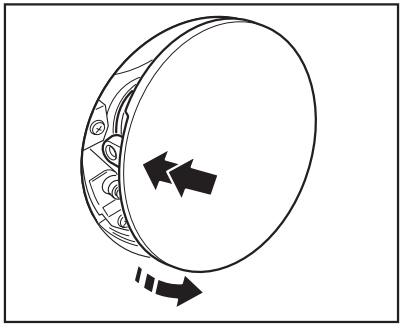

To open the fuel filler flap:

1. Unlock the vehicle.
2. Push on the rear edge of the fuel filler flap located on the right side of the vehicle.
3. To close, push on the fuel filler flap until it clicks into place.

Fuel cap

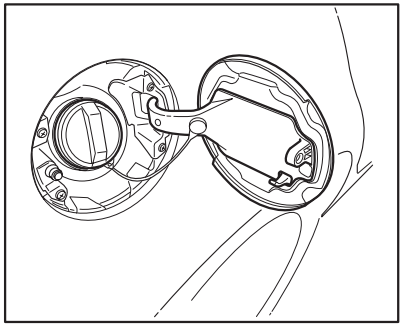

The fuel cap, under the fuel filler flap, is a ratchet type cap that is tethered to the vehicle.

1. To open, rotate the cap anticlockwise.
2. After refilling, tighten the cap by rotating clockwise until a clicking noise is heard.
3. Close the fuel filler flap.

Tank capacity

See Capacities on page 327.

LPG

Dual fuel LPG (Sedan)

The vehicle may have an LPG tank.

Holden approved LPG system emergency procedures:

⚠Warning

LPG is heavier than air and if not dispersed tends to collect in low-lying areas.

Accident or fire
Call the emergency fire services to the scene and keep people away from the vehicle.

While filling
Ensure that there is no gas leakage. If a leak is detected while filling the vehicle stop filling the vehicle, notify the filling station operator of a potential problem with the pump. If the odour still persists when disconnected, carry out the following emergency procedure steps. Select petrol operation with the fuel selector switch and take the vehicle to nearest authorised IMPCO® LPG repairer or a Holden Dealer for advice.

Note If frost is present do not touch the area until the frost has dissipated.

Suspected gas leak
Carry out the emergency procedure steps which follow. Once the steps have been followed and the odour is no longer present, select petrol operation with the fuel selector switch and take the vehicle to the nearest authorised IMPCO® LPG repairer or a Holden Dealer for advice.

Manual service valve

LPG has an odour that enables any leaks in the vehicle's LPG system to be detected.

If this odour is detected in or around the vehicle or in the event of an accident, fire or other abnormal circumstance:

1. Turn the ignition off.
2. Open the boot.

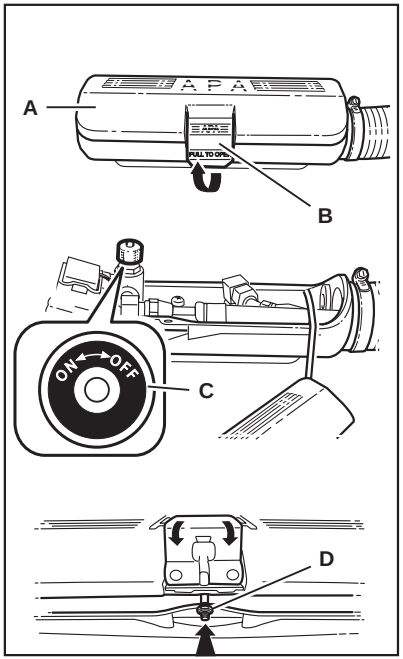

3. Open the valve box cover (A).
4. Pull the latch (B) to the upright position.
5. Lift the valve box cover up until it disengages from the tank.
6. Rotate the service valve (C) on the LPG tank clockwise to the **OFF** position.
7. Close the valve box cover until the hinge engages.
8. With the latch (B) in the upright position, engage the pin (D) in the slot.
9. Push the latch (B) to the locked position.

   The vehicle will now run on petrol.
10. Contact the nearest authorised IMPCO® LPG repairer or a Holden Dealer for advice.

Introduction

The Holden Dual Fuel system will maximise the vehicle's performance in both fuel modes while minimising exhaust emissions and retaining vehicle reliability and performance.

It is important to understand that the engine in your Holden Dual Fuel vehicle will always start on petrol and if LPG is selected on the dual fuel control switch, the vehicle will automatically transfer over to LPG when the engine has warmed up sufficiently.

The Holden Dual Fuel system has been designed to comply with the relevant Australian Standard.

It is recommended that you advise your insurance company that your new vehicle operates on both petrol and LPG as failure to do so may invalidate your insurance policy.

Your vehicle is required to display the LPG decal on both the front and rear number plates.

Vehicle storage

If the vehicle is to be stored for a long time, rotate the manual service valve (C) to the **OFF** position, located on the LPG cylinder.

Using the boot

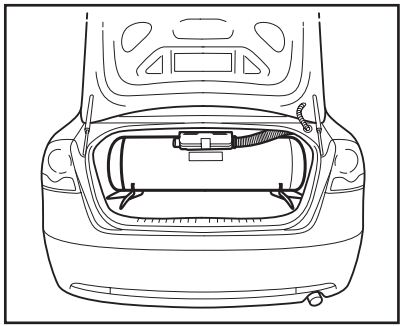

Avoid damage to the LPG tank or vent pipes. If damage occurs, contact a Holden Dealer.

New engine run-in procedure

It is recommended that the vehicle be run in on petrol for 500 km before running the vehicle on LPG.

Starting the engine

There are no special requirements for starting the dual fuel engine with either fuel selected.

LPG refuelling

⚠Warning

Observe the filling instructions and warnings displayed at the filling station.

Ensure there are no flames or sparks in the vicinity of the vehicle.

Note

LPG or petrol may be added, regardless of the fuel selected.

1. Turn the engine off.

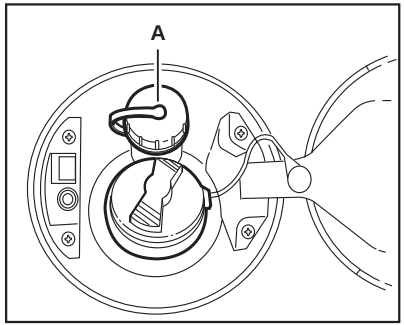

2. Remove the LPG filler cap (A) by rotating anticlockwise.
3. Connect the LPG filler nozzle, squeeze and hold the trigger.
4. Release the trigger when the bowser automatically shuts off.

Note

- A small discharge of gas from the nozzle is normal.
- The AFL (Automatic Fill Limiter) shuts off the LPG flow when the LPG cylinder is 80% full: this is to allow for liquid expansion.

⚠Warning

Do not continue trying to add more LPG once the bowser automatically shuts off.

5. Disconnect the LPG filler nozzle.
6. Screw the LPG filler cap back on.

Tank capacity

See Capacities on page 327.

Fuel selection

Changing fuels and starting

The fuel selector switch is located forward of the shift lever.

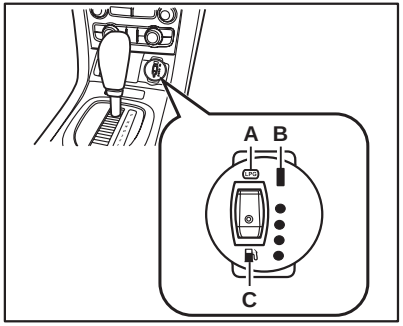

The switch has two positions and a fuel operation indicator lamp (B).

The lamp colours are as follows:

Red Petrol operation.

Amber Transition state, currently transferring between fuels.

Green LPG operation.

Petrol operation

When the switch is in the petrol position (C), the engine will start and run on petrol.

LPG operation

When the switch is in the LPG position (A), the engine will start and run on petrol before transferring to LPG.

Note

- When switching from petrol to LPG, there is a time delay of about 5 seconds.
- Under high load conditions a vehicle operating on LPG will automatically change to petrol.
- When the system is out of LPG it will automatically change to petrol operation.
- To stop the switch beeping, change the fuel selection switch to petrol or refill the LPG tank.
- Holden recommends the petrol tank have at least a quarter of a tank of petrol at all times.

Default LPG operation

Default LPG is available to customers as an option when purchasing the LPG system and cannot be disabled. This option encourages driving on LPG.

Switching between fuels

To select petrol operation:

1. Press and hold the switch in the petrol position for more than 1 second.
2. The lamp will illuminate red.

Note

- When manually switching to petrol, switching to LPG will deactivate the short beep cycle.
- If the vehicle is turned off while in petrol mode, the system will automatically return to LPG when the vehicle is started.
- When the system is out of LPG, it will automatically change to petrol operation.

- When the system is out of LPG, to stop the beeping, refill the LPG tank.

To select LPG operation:

1. Press and hold the switch in the LPG position for more than 1 second.
2. The lamp will illuminate green.

LPG fuel gauge

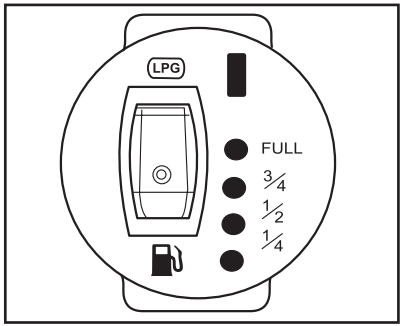

The four lights in the fuel selector switch indicate fuel level as shown.

If one light flashes, the vehicle is operating on LPG reserve.

If one light flashes and the beeper sounds, the vehicle is out of LPG.

Note

- If all four lights are flashing, the LPG tank has been over filled. The lights will stop flashing once normal tank level is reached.
- When the system is out of LPG, it will automatically change back to petrol operation.
- For vehicles fitted with the default LPG feature, the system will continue to beep until the vehicle is refuelled with LPG.
- Check the manual service valve located on the LPG tank to ensure this is not closed. See Manual service valve on page 239.
- Under high load conditions a vehicle operating on LPG will automatically change to petrol. The system will return to LPG when ready.

⚠Warning

Operating the vehicle with no petrol in the fuel tank may cause the vehicle to stall unrecoverably under high RPM/load conditions and possibly cause damage to the petrol fuel pump.

If the vehicle runs out of petrol it will not start, eliminating the ability to change over to LPG operation.

Towing

Trailer towing

The word trailer is used throughout this section and includes all types of towed vehicles, such as caravans, boat trailers or any other special purpose trailer.

Maximum towing capacities (kg) – braked trailer

Engine	3.0L V6		3.6L V6		6.0L V8
Transmission	**Automatic**	**Manual**	**Automatic**	**Manual**	**Automatic**
Sedan	1600	1600	2100	1600	2100
Sedan with LPG	-	-	2100	-	-
Sportwagon	1600	-	2100	1600	2100

Note The maximum unbraked towing capacity for all vehicles is 750 kg.

Towing

Handling, durability and economy may be affected by towing a trailer.

For recommended and mandatory towing equipment, see Towing and loading equipment on page 246.

A Holden Dealer will assist with supply and installation of towing equipment.

Overloading

Never exceed the loads given for the towing equipment fitted to the vehicle.

All mandatory equipment must be fitted, otherwise you may void the New Vehicle Warranty, to the extent that Holden considers the overloading or missing equipment to have affected the specifications or quality of the vehicle. See Towing and loading equipment on page 246.

⚠Warning

Holden towing equipment is recommended where it is available. Where it is not available, no recommendation is made as to the make of equipment which should be used. Holden will not accept liability for defects occurring in towing equipment not marketed by Holden or for defects in the vehicle arising from the use of such equipment or for loss or injury caused by use of such equipment. The use of such equipment may void your New Vehicle Warranty, to the extent that Holden considers the non-recommended equipment affects the specifications or quality of your Holden vehicle. It is inadvisable to mix and match different brands of towing equipment, as equipment is usually designed as an integrated package.

Manual transmission

When towing, do not exceed 100 km/h. Local laws may require a lower maximum speed.

Automatic transmission

For the recommended automatic shift modes to use when towing, see Automatic transmission on pages 214 and 216.

Trailer recommendations

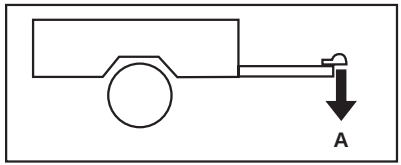

A trailer hitched to a vehicle places a weight on the tow bar. This weight is called the tow bar ball weight or tow ball load (A).

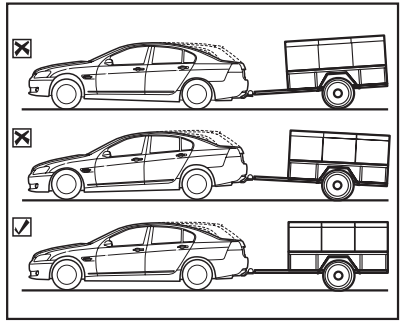

The tow ball load should be between 5 % and 10 % of the loaded trailer weight. Adjust by moving items forwards or backwards within the trailer, to change the balance.

If the tow ball load is too light or too heavy, the steering and handling of the vehicle may be affected.

Axle loads must not be exceeded when the tow ball load is included. See Axle loads on page 325.

If maximum axle loads are exceeded, weight should be removed from the rear of the vehicle and transferred onto the trailer.

Ensure the weight of the packed trailer is not greater than the towing capacity of the Holden approved tow bar package fitted to the vehicle.

Towing and loading equipment

Tow load	Mandatory equipment	Recommended equipment
Up to 1,200 kg	Holden 1,200 kg rated tow bar	
	Holden trailer wiring harness	
	Brakes on the trailer if the gross trailer mass (GTM) is more than 750 kg	
Between 1,201 kg and 1,600 kg	Holden 2,100 kg rated tow bar	Load distribution hitch
	Holden trailer wiring harness	Superlift shock absorbers (Sedan)
	Brakes on the trailer	Adjust pressure per note 1 on the following page up to a maximum pressure of 650 kPa
Between 1,601 kg and 2,100 kg	Holden 2,100 kg rated tow bar	Superlift shock absorbers (Sedan)
	Holden trailer wiring harness	Adjust pressure per note 1 on the following page up to a maximum pressure of 650 kPa
	Brakes on the trailer	Load distribution hitch

Load distribution hitch

The vehicle may have a load distribution hitch.

A load distribution hitch transfers load to the vehicle's front wheels aiding brake performance. This also enables more load to be carried in the vehicle without exceeding the rear axle load limit.

Superlift shock absorbers (Sedan)

The vehicle may have superlift shock absorbers.

They do not increase the carrying capacity of the vehicle. Do not exceed maximum loads for the vehicle. Overloading of axle parts may shorten the life of the vehicle.

Note

1. Superlift shock absorbers help to raise the rear of the vehicle and improve ground clearance. However, as superlift pressure is increased, the weight distribution changes, i.e. the proportion of load on the rear axle increases. This means that very high superlift pressures combined with a fully laden vehicle may exceed the rear axle load limit. Do not exceed the maximum pressure of 650 kPa.
2. Adjust superlift inflation pressure so that the bottom edges of the vehicle doors are horizontal. Do not exceed the maximum pressure of 650 kPa.
3. Superlift air pressure must never be less than 100 kPa or the airbags will be torn, even when no trailer is attached to the vehicle.

⚠Warning

At no time may the total front or rear axle load exceed the maximums specified. See Axle loads on page 264.

Superlift shock absorber (Sedan) inflation pressure should never operate below the minimum or above the maximum values shown on the tag attached to the inflation valve.

Towing precautions

- When heavily loading the vehicle or when towing, inflate tyres to the maximum recommended pressure. See Tyre placard on page 293.
- Ensure that a load distribution hitch is correctly distributing the tow ball load. See Towing and loading equipment on page 246.
- Ensure that superlift shock absorbers are adjusted correctly. See Superlift shock absorbers on page 247.

- Tighten the tow ball retaining nut to 140 Nm (Newton metres) and check the torque frequently.
- Vehicles handle differently when towing. Take a couple of short distance trips with the trailer before taking a long trip.
- Have the vehicle and trailer correctly maintained and serviced, with particular attention given to the brakes, tyres, suspension, wheel bearings, towing coupling and lighting.
- Use an extended-arm mirror on both sides of the vehicle if necessary.
- Headlamps may need re-aiming after the loaded trailer has been hitched, particularly if a load distribution hitch is not used.
- Use a lower gear and the brakes, when descending steep hills.
- Automatic transmission: At highway speeds it is recommended that cruise control be used. Cruise control prevents the transmission from unnecessarily changing gears, particularly on grades. See Automatic transmission on pages 214 and 216 for further recommendations when towing.
- Do not use axle-mounted hitches.
- Ensure that the tow bar does not obscure the rear number plate. Remove the tow bar tongue when not required for towing.
- If a tow bar is removed, have any mounting holes in the underbody sealed to prevent entry of exhaust fumes, dust and water.
- Park Assist (PA) will require adjustment to allow for the installation or removal of the tow bar tongue. See Adjustment for a towbar on page 233.

  The Holden Dealer fitted accessory, Rear Park Assist (RPA), does not require adjustment for tow bar tongue removal.

Trailer brakes

- Trailer brakes are mandatory on trailers with a gross trailer mass (GTM) of more than 750 kg.
- Consult the appropriate regulatory body in your State or Territory for the legal requirements of trailer brakes.

Running-in when towing

It is recommended that a new vehicle be driven for at least 1,500 km before towing.

If towing is necessary before this, do not exceed 80 km/h. This also applies if the vehicle is fitted with a new or reconditioned engine, transmission or rear axle.

Vehicle maintenance

More frequent vehicle maintenance is required when using the vehicle to tow. Refer to the Service/Warranty Booklet in the vehicle's glove box.

Conversions and add-ons

Fitting driving lamps or insect screens

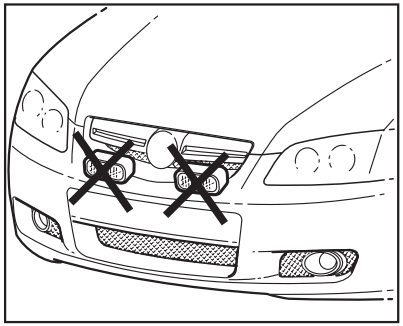

Do not fit any accessory over the upper or lower air intakes at the front of the vehicle, as this may affect engine cooling.

Caution

In high load and high temperature applications (e.g. towing) no objects should be fitted over the upper or lower air intake at the front of the vehicle, as this could affect cooling.

Fitting roo/nudge bars

If a roo/nudge bar is to be fitted, it is critical that the Holden approved roo/nudge bar be used. Other types must not be fitted.

The Holden roo/nudge bar is available from a Holden Dealer and has been compatibility tested with the vehicle's design, including the Holden airbag system.

⚠Warning

Fitting other types of roo/ nudge bars may affect crash performance, airbag performance and engine cooling.

Roo/nudge bars:

- Should not be fitted to vehicles operating in suburban areas, as they increase the risk of injury to a pedestrian in the event of a collision.
- Are only recommended for country/outback areas, where additional protection from straying animals is required.

Vehicle care

General information 250
Vehicle checks 252
Bulb replacement 270
Electrical system 286
Vehicle tools 292
Wheels and tyres 293
Jump starting 309
Appearance care 314

General information

Where specified, use only Holden genuine parts and accessories.

Emission information

The emission control systems are designed to reduce the amount of hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx) that are emitted from the engine and fuel system into the atmosphere. HC and NOx, when exposed to sunlight under certain conditions, contribute to photochemical smog. In addition, CO is toxic when it becomes highly concentrated in the air.

Emission control system

Major emission control systems that the vehicle may have are:

1. Evaporative emission control system. This system is designed to prevent the escape of fuel vapour from the fuel system and recycle the vapours through the normal combustion process.
2. Crankcase emission control system. This system is designed to prevent blow-by gases from escaping into the atmosphere and recycle them through the combustion process.
3. Exhaust emission control system. The various components of this system operate collectively to limit HC, CO and NOx emissions in the exhaust gas. The exhaust emission control system consists of components including electronic control of spark, fuel and idle speed. In addition vehicles have a catalytic converter and closed loop mixture control system.

It is recommended that service and repair to fuel or emission systems be carried out by an authorised Holden Dealer.

Owner responsibility

The engine, engine control system and exhaust system of the vehicle must NOT be modified in any way.

⚠Warning

Any person who removes, modifies or hinders any part of the emission control system may be contravening Australian Design Rules. It is also illegal to drive a vehicle modified in this way.

Maintenance requirements

Have the vehicle serviced at the frequency shown in the Maintenance schedule, in the Service/Warranty Booklet.

It is recommended that servicing be carried out by an authorised Holden Dealer who will maintain the vehicle's emission control system as per the Service/Warranty Booklet.

Reducing fuel consumption

Engine

Have the vehicle serviced regularly in accordance with the maintenance schedule in the Service/Warranty Booklet.

Transmission

For vehicles fitted with a manual transmission; when on level roads, in an unladen condition, it is permissible to drive off in 2nd gear, in the interest of fuel economy.

Tyre pressure

Keep the tyres at the recommended pressures.

Wheel alignment

Maintain correct front and rear wheel alignment.

Warm ups and idling

Avoid long engine warm ups. They are unnecessary and waste fuel.

Avoid long engine idling.

Accelerating, driving and braking

Accelerate gently and avoid rapid starts.

Drive the vehicle at steady speeds where possible (after running-in).

Manual transmission: It is desirable to reach top gear as soon as possible, but do not force the engine to labour in top gear.

Riding the brake

Do not rest your foot on the brake pedal when you do not intend to brake.

Air conditioning

Switch off the air conditioning when not required, however, once every 2 weeks, with the engine running, switch the air conditioning on for 5 to 10 minutes to lubricate the seals (even in winter).

Vehicle checks

Bonnet

Opening

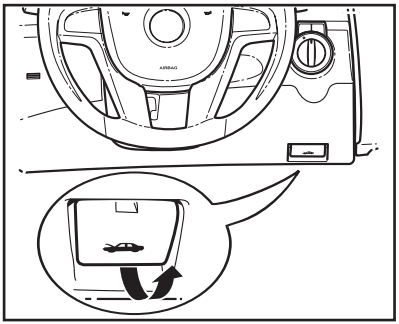

Pull the lever towards you.

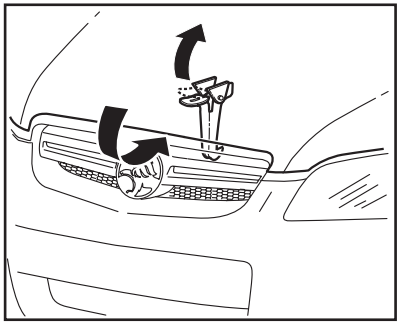

Push up on the front edge of the release catch and lift. Gas struts automatically take over to lift and hold the bonnet in the open position.

Closing

⚠Warning

To avoid injury and/or damage to the vehicle, check each time, before the bonnet is closed, that the contact area is unobstructed.

Lower the bonnet and allow it to drop into the catch. Check that the bonnet is engaged.

⚠Warning

If while driving you notice that the bonnet has not been properly closed, pull the vehicle over to the side of the road at the earliest possible moment and close the bonnet correctly.

Note

- If the wiring of the bonnet switch is damaged or tampered with, it will be detected by the vehicle control system. The alarm will sound when the alarm system is armed.
- If the bonnet is not engaged when the vehicle is locked, will flash immediately. Unlock the vehicle, close the bonnet securely and relock.

Engine compartment overview

V6 engine

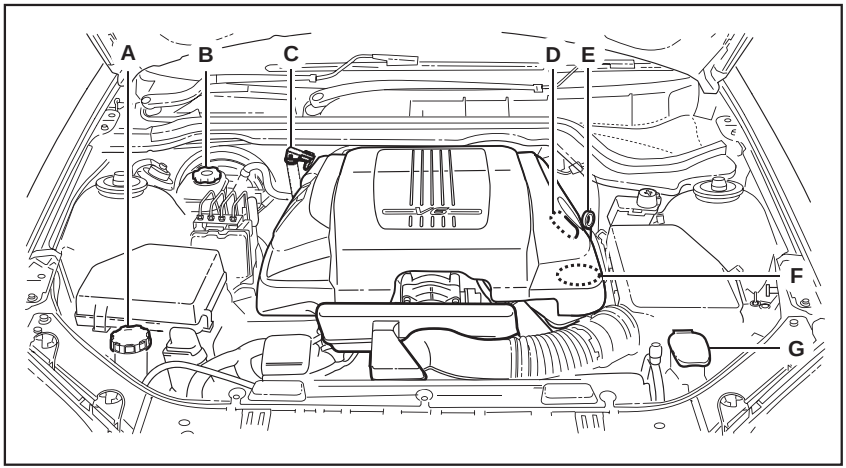

A. Engine coolant reservoir, see page 260
B. Clutch/brake fluid reservoir, see page 267
C. Automatic transmission dipstick and tube (4 speed), see page 259
D. Engine oil filler cap, see page 257
E. Dipstick for engine oil, see page 257
F. Power steering fluid reservoir, see page 265

   For access to the cap, see Engine cover on page 256
G. Windscreen washer fluid reservoir, see page 266

V8 engine

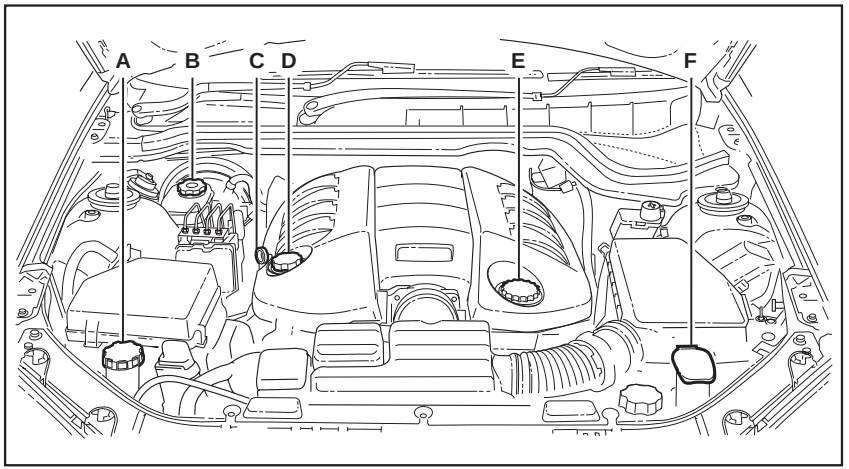

A. Engine coolant reservoir, see page 260
B. Clutch/brake fluid reservoir, see page 267
C. Dipstick for engine oil, see page 257
D. Engine oil filler cap, see page 257
E. Power steering fluid reservoir, see page 265
F. Windscreen washer fluid reservoir, see page 266

Engine cover

⚠Warning

Do not place hands on any under bonnet components when the engine is HOT or RUNNING.

Before removing the engine cover, allow the engine to cool sufficiently.

Removal

Remove the engine cover to access the power steering and radiator caps.

1. Turn the ignition off and remove the key.
2. Place the shift lever in **P** and apply the park brake firmly.

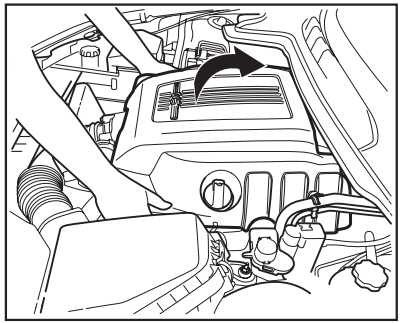

3. Open the bonnet. Lift the cover upwards approximately 15 cm.

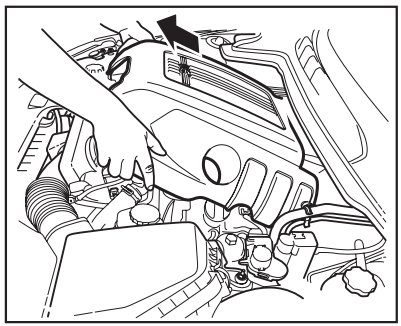

4. Pull the cover towards the front of the vehicle.

Replacement

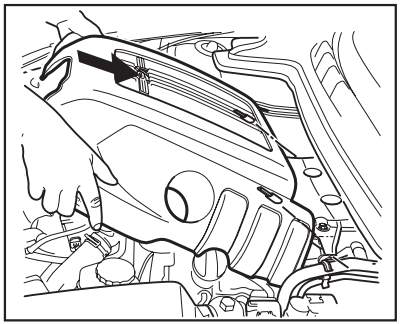

1. Place the cover over the rear guide tabs.
2. Lower the front of the cover so that the hole on the left side slides over the oil filler cap.
3. Press down on both front corners to engage the fasteners. Pull upwards on the cover to ensure it is secure.

Engine oil

Checking oil level

The engine must be at operating temperature and the ignition turned off for at least 10 minutes.

1. Park the vehicle on a level surface.
2. Remove the dipstick and wipe clean.
3. Insert the dipstick firmly.
4. Remove and read the oil level. The level should be between the area/marks (A) and (B). Add oil if the level is at area/mark (A).

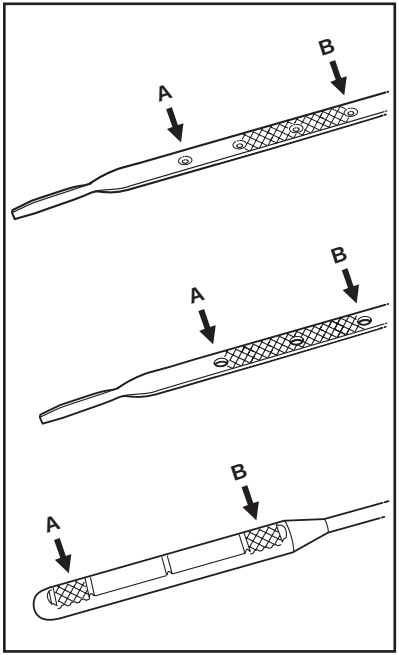

Different dipsticks are used depending on engine variant.

A. Add mark
B. Upper mark

Adding engine oil

See Capacities on page 327.

1. Rotate the engine oil filler cap anticlockwise and remove.
2. Add enough oil to reach within the area/mark (B).
3. Check the level on the dipstick and add further oil if necessary.

   The engine oil must not exceed the area/mark (B).
4. Replace the engine oil filler cap tightly by rotating clockwise.

Note

Non-detergent and other low quality oils, the use of break-in oil, tune up compounds, friction reducing compounds and other supplemental additives are not recommended. Their use increases costs, may be detrimental to the operation of the vehicle and may void the New Vehicle Warranty, to the extent that Holden considers the non-recommended fluid to have affected the specifications or quality of the vehicle.

Engine oil change intervals

Refer to the Service/Warranty Booklet.

Engine oil life system

The engine is dependent on oil for lubricating critical areas subjected to high friction loads:

- The cylinder walls
- The pistons and rings
- The valve stems

Some oil from these areas is carried into the combustion chamber and burnt during the combustion process.

Other factors that contribute to the rate of oil consumption in the engine:

Operation of the vehicle

High speed driving and heavy towing increases engine temperature, which lowers oil viscosity, causing more oil to reach the combustion chamber and get burnt away.

Always check the oil level prior to towing or going on a long trip.

Quality and grade of oil

If an oil is too ‘thin’ (low viscosity), the oil consumption will increase. Use only the recommended grades of oil.

Oil level

Maintain the required oil level.

Over filling causes:

- Oil to splash onto the cylinder walls
- Excess oil to be drawn into the combustion chamber and burnt
- Oil in the sump to become aerated causing damage to the engine

Dilution

When a vehicle is frequently driven on short trips, the engine often fails to reach normal operating temperatures:

- The oil becomes diluted by fuel and moisture that settles in the oil pan.
- This may raise the oil level creating a false reading on the engine oil dipstick.

For example, in a vehicle that has accumulated 1,500 km of short distance or intermittent city operation and has consumed a normal amount of oil, the level may not have dropped from the area/mark (B), due to dilution. If this vehicle is driven for some distance at highway speeds on a warm day, the dilution elements evaporate, resulting in a sudden drop in oil level.

Measuring oil consumption

The amount of oil added for the kilometres travelled indicates the oil economy of the engine.

- Check the oil level at the start and finish of the test on a level surface.
- Allow time for the oil to drain (approximately 10 minutes after the engine is switched off).
- Avoid minor top ups of 0.25 to 0.5 litres.

Engine oil consumption may be assessed when the vehicle has run at least 10,000 km.

To test consumption:

1. Add sufficient oil to bring the level up to the area/mark (B) on the dipstick.
2. Note the odometer reading
3. Check the oil periodically.
4. When the level reaches the area/mark (A), measure the amount of oil required to return the level back to the area/mark (B).
5. Note the odometer reading.

If the oil requires regular topping up, contact a Holden Dealer.

Automatic transmission fluid (4 speed)

Checking fluid level

Drive the vehicle for at least 20 km to ensure the fluid is hot.

1. Park the vehicle on a level surface with the engine running.
2. Ensure that the shift lever is in **P** and apply the park brake.
3. Lift the handle (A) and remove the dipstick.
4. Wipe clean with a clean cloth or paper.
5. Insert the dipstick.
6. Remove and read the fluid level. When the fluid is hot, the level should be within the area (C).

Note

Six speed automatic transmission fluid levels are checked when the vehicle is serviced by a Holden Dealer.

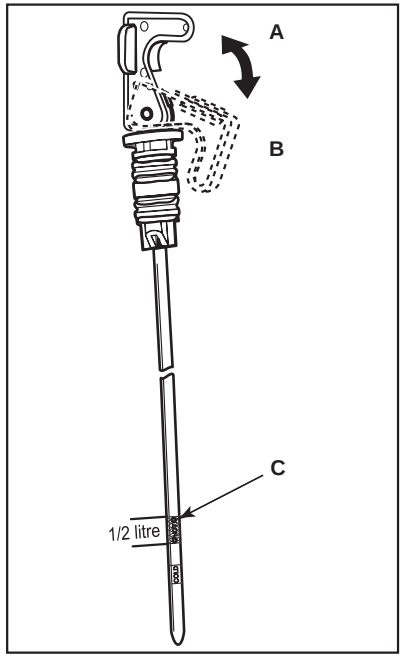

Adding transmission fluid

Use only Holden specified automatic transmission fluid. See Recommended fluids, lubricants and parts on page 319.

1. Add fluid into the automatic transmission dipstick tube (where the dipstick is stored).
2. Wait 1 minute for the fluid to settle (clean up any spilt fluid).
3. Check the level on the dipstick while the engine is running and add further fluid if necessary.

   The fluid level must not exceed area (C).
4. Replace the dipstick and lock the handle (B).

If the transmission fluid requires regular topping up, contact a Holden Dealer.

Engine coolant

Note

For all engine variants, the coolant reservoir is in the same position within the engine compartment.

Engine coolant level

Check the coolant level at least once a week. The cap is yellow with the word **DEXCOOL**.

Checking coolant level

⚠Warning

Do not remove the radiator cap if the engine and radiator are still hot. Scalding fluid and steam can be blown out under pressure which could cause serious burns.

1. Turn the ignition off.
2. Rotate the coolant cap one-eighth of a turn anticlockwise and slowly pull out the dipstick.
3. When the engine is cold, the coolant level should be at or above the minimum mark (A).

   When the engine is warm, the level should be between half full and the maximum mark (B).

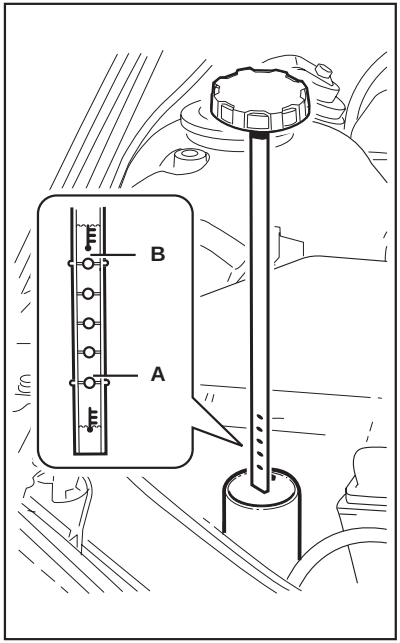

Adding coolant

Caution

Do not spill coolant on the vehicle's exterior surfaces as it can damage the paintwork. If you do, wash it off immediately.

For engine coolant specifications and water-to-coolant ratio, see Recommended fluids, lubricants and parts on page 319. Always use the specified ratio.

1. Mix a solution of Holden coolant and clean fresh water.
2. Add coolant into the coolant dipstick tube (where the dipstick is stored).
3. Check the level on the dipstick and add further coolant if necessary.

   The fluid level must not exceed the maximum mark (B).
4. Replace the dipstick.
5. Rotate the cap one-eighth of a turn clockwise until secure and the word **DEXCOOL** can be read from the front of the vehicle.

In emergency situations, plain clean fresh water may be used temporarily until the correct Holden coolant is obtained. Replace as soon as possible from the nearest Holden Dealer.

If the coolant requires regular topping up, contact a Holden Dealer.

How the engine coolant works

- The coolant contains special corrosion inhibitors.
- Coolant helps the cooling system in hot weather by increasing the boiling point.
- Coolant protects against freezing down to –37°C, provided the specified concentration is maintained.

⚠Warning

Corrosion inhibitors and antifreeze fluids are poisonous. Use extreme care when handling. If swallowed, seek medical attention. Do not remove the coolant reservoir cap if the engine and radiator are still hot. Scalding fluid and steam can be blown out under pressure which could cause serious burns.

If the engine overheats or loses coolant, see Engine overheating on page 262.

Engine overheating

Caution

Immediate action is required if the engine overheats. This is indicated by one or more of the following:

- The engine temperature gauge needle moving over to the **H**.
- The animated warning **Engine Temp Hot** appearing on the central display, see page 82.
- Steam escaping from under the bonnet.
- A loss of power.
- A loud knocking or pinging noise.

Continued driving EVEN FOR A SHORT TIME could cause engine damage. Stop the vehicle as soon as it is safe to do so and perform the cooling system checks.

⚠Danger

Do not open the bonnet if you can see or hear steam or coolant escaping from the engine compartment. Scalding fluid and steam can be blown out under pressure which could cause serious burns. Wait until no steam or coolant can be seen or heard before opening the bonnet.

Do not remove the radiator cap if the engine and radiator are still hot. Scalding fluid and steam can be blown out under pressure which could cause serious burns.

Do not place hands near under bonnet components as the cooling fan may start working unexpectedly even when the engine is not running and the ignition is turned off.

Cooling system checks

1. Leave the engine idling.
2. Ensure that the shift lever is in **P** or neutral and apply the park brake.
3. Exit the vehicle and audibly check that the cooling fan is working.

If the fan is working and the engine temperature gauge needle has not returned to its normal position within a few minutes:

1. Turn the ignition off and remove the key.
2. Look for leaks at the radiator hoses and connections, heater hoses and connections, radiator and water pump.

⚠Warning

Take care when checking these areas as they may still be hot.

3. Check the air intake area in the front bumper to ensure that it is clear. See Air intake on page 315.
4. If you do not find anything wrong, check the engine coolant level. See Engine coolant on page 260.
5. DO NOT run the engine until any problems have been corrected.

Low coolant level

⚠Danger

Do not remove the radiator cap if the engine and radiator are still hot. Scalding fluid and steam can be blown out under pressure which could cause serious burns.

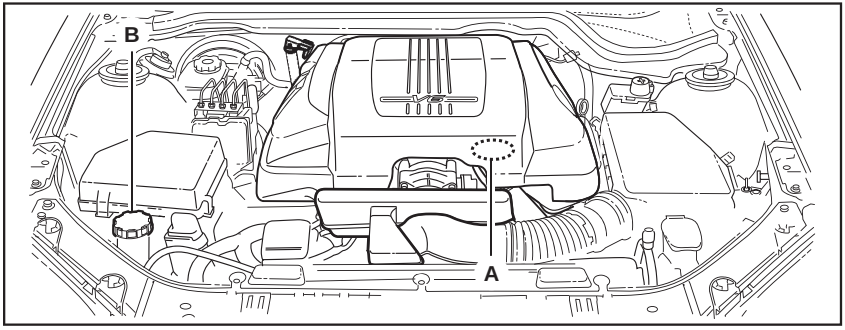

V6 engine shown

When the engine is cool, check the coolant reservoir level and radiator level and fill as follows:

Note
For all engine variants, the coolant reservoir is in the same position within the engine compartment.

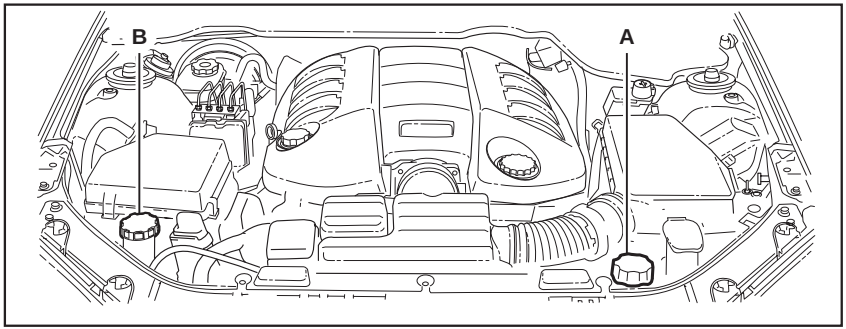

V8 engine shown

1. Check the coolant reservoir level (B). Add coolant if low. See Engine coolant on page 260.

⚠Danger

Do not remove the radiator cap if the engine and radiator are still hot. Scalding fluid and steam can be blown out under pressure which could cause serious burns.

Remove the engine cover if required. See Engine cover on page 256.

2. Locate the radiator cap (A).
3. Cover the cap with a thick cloth and rotate slowly anticlockwise to remove.

Caution

Do not spill coolant on the vehicle's exterior surfaces as it can damage the paintwork. If you do, wash it off immediately.

4. As well as adding coolant to the coolant reservoir, add coolant directly through the radiator cap opening until full.
5. Wait 30 seconds for the coolant to settle.
6. Add more coolant if the level drops.

Caution

Take care not to spill coolant on the accessory drive belts.

If a spill occurs, rinse the belts immediately with fresh water.

7. Start the engine.

8. Add coolant through the radiator cap opening until full.

   Wait 30 seconds and top up if the level drops.
9. Replace the radiator cap.
10. Turn the ignition off.
11. Check the coolant reservoir dipstick and add further coolant if necessary, up to level (C).

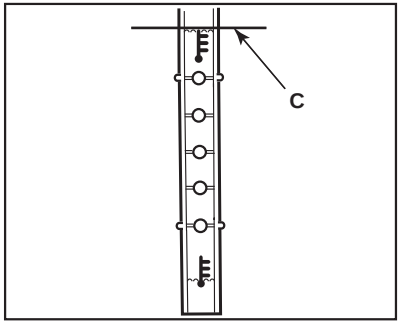

Check the coolant reservoir level for the next two days.

If the coolant requires regular topping up, contact a Holden Dealer.

Note
The following may cause the engine to temporarily operate at high temperatures, especially on hot days:

- Climbing a long hill.
- Stopping immediately after high speed driving.
- Idling for long periods in traffic.
- Towing a heavily laden trailer or caravan.

If the engine temperature gauge shows **H**, switch off the air conditioning.

Power steering fluid

Checking fluid level

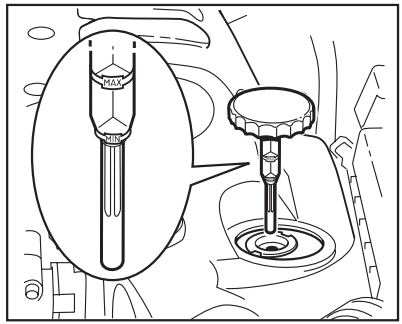

V6 engine shown

Drive the vehicle for at least 20 minutes to ensure the fluid is warm. Checking the level when cold is not recommended.

Note
For all V6 engine variants, the power steering fluid reservoir locations are in similar positions within the engine compartment.

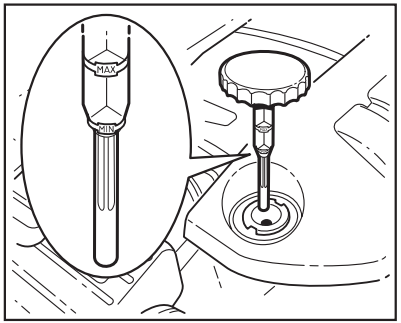

V8 engine shown

1. Wipe the sides of the cap clean.
2. Rotate the cap anticlockwise.
3. Remove and read the fluid level. When the engine is hot, the level should be at the **MAX** level.

   When the engine is cold, the fluid level must be between **MIN** and **MAX**.

Adding power steering fluid

Use only Holden specified power steering fluid. See Recommended fluids, lubricants and parts on page 319.

1. Turn the ignition off.
2. Add power steering fluid.

   Do not overfill the reservoir.
3. Secure the cap and clean up any spilt fluid.

If the power steering fluid requires regular topping up, contact a Holden Dealer.

Washer fluid

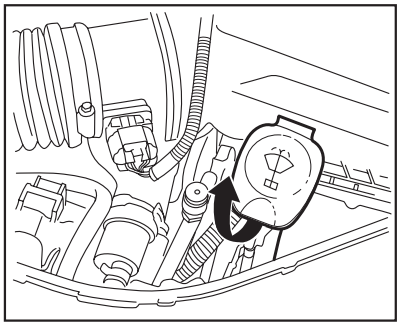

The washer fluid reservoir supplies water to the front windscreen washer and rear window washer (Sportwagon).

Check the fluid level weekly.

Adding washer fluid

1. Use the correct amount of washer fluid additive. Refer to a Holden Dealer.

   Do not use ordinary soap or detergent as they froth up and damage the wiper rubbers.
2. Secure the cap.

Brake fluid

(Automatic transmission)

⚠Warning

Brake fluid is poisonous and corrosive and will damage the paint finish of the vehicle if spilt.

Checking the brake fluid level

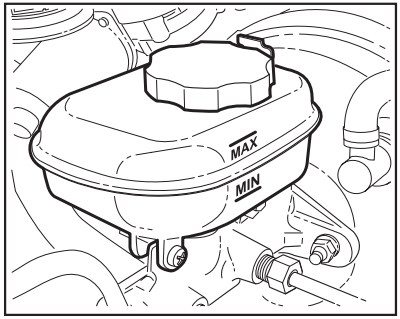

Check the brake fluid level weekly.

The level should be between the **MIN** and **MAX** area.

If the fluid level is correct, do not remove the reservoir cap, as brake fluid exposed to the atmosphere will quickly absorb moisture.

Adding brake fluid

Use heavy duty brake fluid. See Recommended fluids, lubricants and parts on page 319.

1. Turn the ignition off.
2. Wipe the sides of the cap clean.
3. Rotate anticlockwise to remove.
4. Top up with heavy duty brake fluid.

⚠Warning

Use only new brake fluid. Use of old, used or inferior brake fluid may endanger the functioning of the brake system.

5. Secure the cap and clean up any spilt fluid.

If the brake fluid requires regular topping up, contact a Holden Dealer immediately.

Clutch/brake fluid

(Manual transmission)

⚠Warning

Clutch/brake fluid is poisonous and corrosive and will damage the paint finish of the vehicle if spilt.

Checking the clutch/brake fluid level

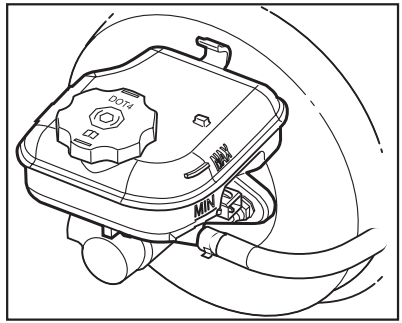

Check the clutch/brake fluid reservoir weekly.

The level should be between the **MIN** and **MAX** area.

If the fluid level is correct, do not remove the reservoir cap, as brake fluid exposed to the atmosphere will quickly absorb moisture.

Adding clutch/brake fluid

Use heavy duty brake fluid. See Recommended fluids, lubricants and parts on page 319.

1. Turn the ignition off.
2. Wipe the sides of the cap clean.
3. Rotate anticlockwise to remove.
4. Top up with heavy duty brake fluid.

⚠Warning

Use only new brake fluid. Use of old, used or inferior brake fluid may endanger the functioning of the brake system.

5. Secure the cap and clean up any spilt fluid.

If the clutch/brake fluid requires regular topping up, contact a Holden Dealer immediately.

Battery

⚠Warning

Batteries emit an explosive gas mixture which may be ignited. Therefore, you should keep sparks and flames away from the battery at all times. Never smoke near a battery.

Batteries contain sulphuric acid. If acid contacts skin or clothing, flush immediately with plenty of water. In case of eye contact, flush with plenty of water and contact a doctor immediately. Battery acid also damages paint and fabrics. To minimise damage, wash off immediately.

Take care with all metal objects and tools including items you may wear (for example jewellery, rings and metal watch bands) near battery terminals.

Battery replacement

⚠Warning

A specifically developed battery with a ventilation system is required for this vehicle. Any other standard battery may cause explosive gases to enter the rear compartment or passenger cabin.

Do not remove the caps on the top of the battery. The battery supplied in the vehicle is maintenance free and does not require checking or filling.

The battery vent tube must be installed correctly to ensure the explosive gases are vented outside the vehicle.

Only use a manufacturer recommended battery as a replacement, otherwise the electric power management (EPM) system may not operate correctly.

For replacement, refer to a Holden Dealer or authorised repairer.

The battery is located inside the boot (Sedan), in the cargo area (Sportwagon), on the left, behind an access panel. For removal (Sportwagon), see Sportwagon tail lamp access on page 280.

Battery disconnection

The battery may discharge if the vehicle is not used for approximately six weeks.

If the battery is disconnected it may discharge after approximately 12 weeks. Trickle feed on a battery charger overnight, before installing back into the vehicle.

If the battery is disconnected or discharged, the tailgate (Sportwagon) will not open normally. See Manual tailgate release on page 24.

If the battery is disconnected:

- Some trip computer displays will be reset.
- Some personal identity key settings may be forgotten. The driver's settings will be remembered the next time the features are adjusted. See Personal identity keys on page 18.

For emergency starting when the battery is flat, see Jump starting on page 309.

Bulb replacement

Contact a trained service technician if unsure about the bulb replacement process.

When replacing bulbs:

- Turn the ignition off and remove the key.
- Turn off related switches.
- Fit bulbs of the specified wattage only.
- Do not touch bulbs or reflectors with bare hands.
- Clean stained bulbs with methylated spirits.

Bulbs to be changed by a Holden Dealer

- Fog lamps
- Instrument panel lamps
- Rear high level stop lamp
- Boot lamp (Sedan)
- Sun visor lamps
- Footwell lamps
- Exterior mirror lamps
- Front interior dome/reading lamps

Caution

Condensation may temporarily appear on the inside of exterior lamp lenses after rain or washing the vehicle. Condensation occurs when there is a temperature difference between the inside and outside of the lamp allowing a fine mist on the inside surface of the lamp lens. This condensation will disappear when the vehicle is in a dry environment or the lamp is on. If water does collect in the lamp contact a Holden Dealer.

Front lamps

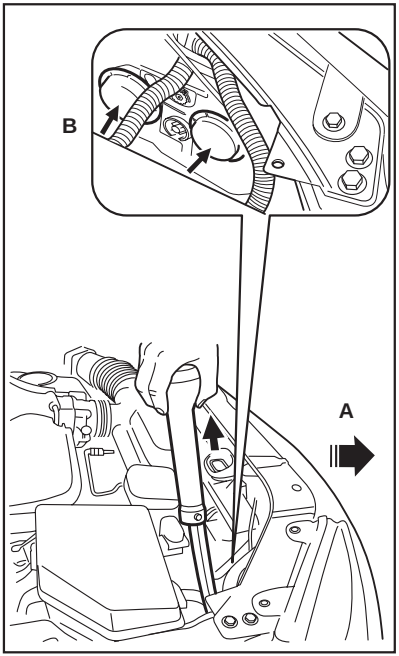

A. Front of vehicle
B. Headlamp bulbs location, driver side

1. Open the bonnet and locate the coolant reservoir to access:
   - Front park bulbs
   - Front turn signal bulbs
   - High and low beam bulbs
2. Pull up on the coolant reservoir filler neck (including the cap).
3. Drain the filler neck before pulling out.

   Place a clean rag over the opening of the coolant reservoir.
4. Unclip the air filter box cover (C) and move rearward.
5. Disconnect the air flow meter connector (D) (V8 only).

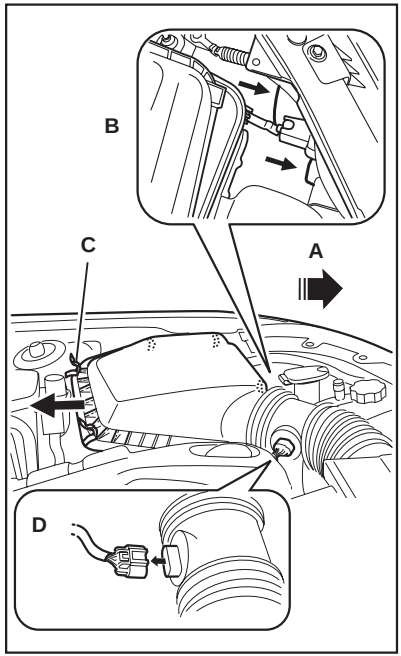

A. Front of vehicle
B. Headlamp bulbs location, passenger side

Front lamp assembly

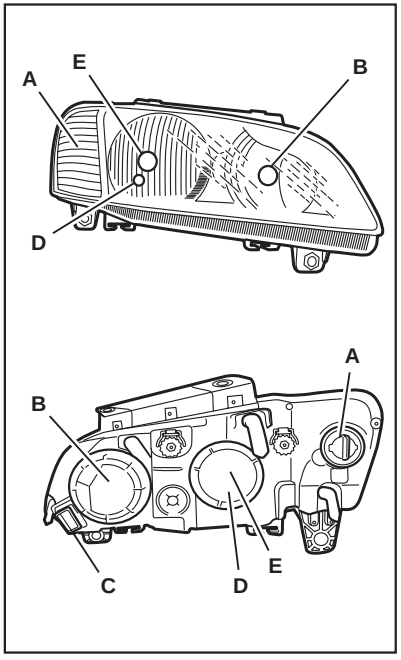

Driver side shown

A. Front turn signal lamp (PY21W amber bulb)
B. Headlamp inboard high beam (H9 bulb, 65W)
C. Headlamp wiring connector
D. Park lamps (W5W bulb)
E. Headlamp outboard low beam (H7 bulb, 55W)

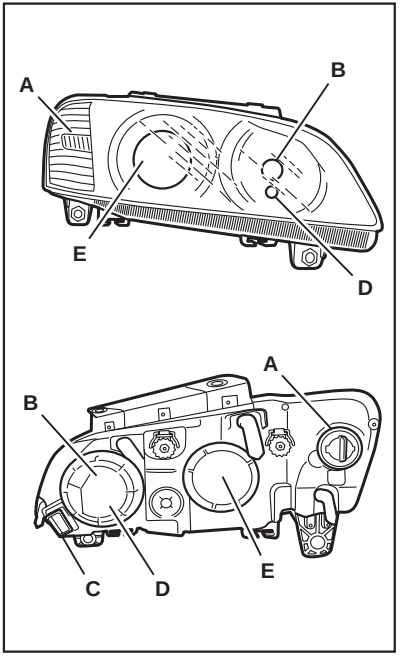

Driver side shown

Depending on the model variant, the park lamp bulb (D) may be in either of two positions.

Headlamps

Outboard low beam

1. To access the headlamps, see Front lamps on page 270 and follow the steps.

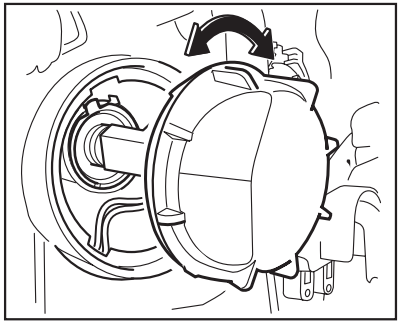

2. Rotate the outboard dust cap anticlockwise and remove.

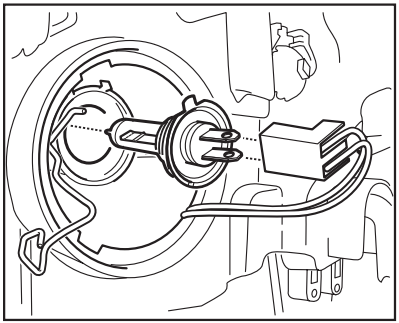

3. Pull to remove the wiring harness connector from the rear of the bulb.
4. Press and unclip the bulb spring retainer and pivot clear of the bulb.

   Note
   Check the orientation of the bulb tang for replacement.
5. Remove the bulb from the headlamp.
6. Fit the new bulb into the headlamp ensuring the location tang is located correctly.
7. Refit the bulb spring retainer into its original position.
8. Install the wiring harness connector and dust cap (ensuring the rubber seal is in place).
9. Install components removed in Step 1.
10. Check lamp operation.

Inboard high beam

1. To access the headlamps, see Front lamps on page 270 and follow the steps.

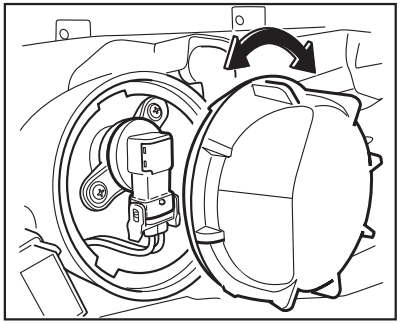

2. Rotate the inboard dust cap anticlockwise and remove.
3. Remove the wiring harness connector by squeezing the two tangs on the harness connector and pulling the connector downwards.

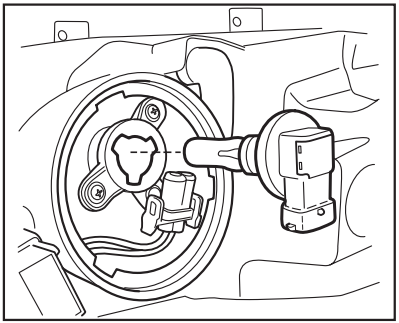

4. Twist the bulb anticlockwise to remove.

   Note
   The different sized locating tangs on the bulb base allow the bulb to sit correctly into the headlamp in one position only.
5. Twist the bulb clockwise to install.
6. Install the wiring harness connector and dust cap (ensuring the rubber seal is in place).
7. Install components removed in Step 1.
8. Check lamp operation.

Parking lamps

Front park lamps (Type A)

1. To access the headlamps, see Front lamps on page 270 and follow the steps.

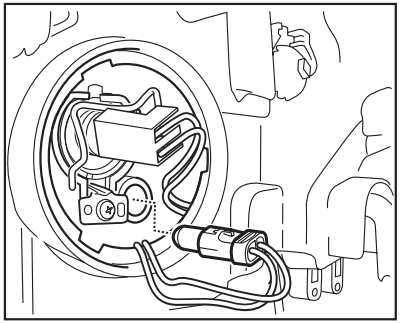

2. Remove the outboard low beam dust cover to access the bulb.
3. Remove the park lamp bulb holder by pulling it straight out.
4. Remove the park lamp bulb by pulling it straight out of the holder.
5. Insert the new bulb into the holder.

6. Install the holder.
7. Replace the low beam bulb dust cap (ensuring the rubber seal is in place).
8. Install components removed in Step 1.
9. Check lamp operation.

Front park lamps (Type B)

1. To access the headlamps, see Front lamps on page 270 and follow the steps.

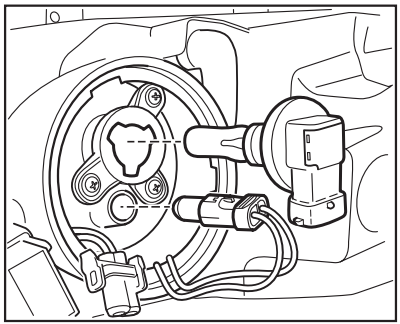

2. Remove the inboard high beam dust cover to access the bulb.
3. Remove the high beam bulb to access the park lamp bulb. See Inboard high beam on page 272.
4. Remove the park lamp bulb holder by pulling it straight out.
5. Remove the park lamp bulb by pulling it straight out of the holder.
6. Insert the new bulb into the holder, then install the holder. Install the high beam bulb and dust cap (ensuring the rubber seal is in place).
7. Install components removed in Step 1.
8. Check lamp operation.

Front turn signal lamps

1. To access the headlamps, see Front lamps on page 270 and follow the steps.
2. Remove the outboard dust cap.

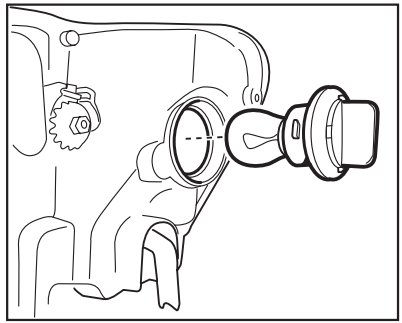

3. Rotate the bulb holder anticlockwise and remove.
4. Lightly press the bulb and twist anticlockwise out of the holder.
5. Insert the new bulb and install the bulb holder.

   Ensure that the same colour bulb is used.

6. Install components removed in Steps 1 and 2.
7. Check lamp operation.

Side marker lamps

(W5W bulb)

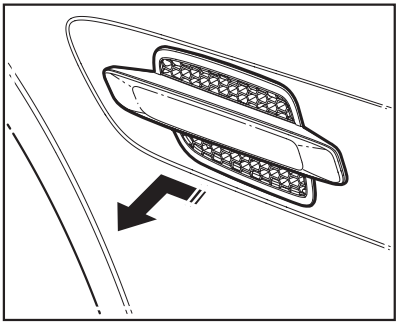

1. Grasp the lens at the rear, push forwards and pull away from the body of the vehicle.
2. Separate the bulb holder from the lens assembly by rotating the bulb holder anticlockwise.
3. Remove the bulb by pulling it straight out of the holder.
4. Insert the new bulb into the bulb holder.
5. Install the bulb holder into the lens housing.

   The bulb holder only fits into the lens housing one way. Keep rotating the bulb holder clockwise until it fits into place and can be tightened.
6. When inserting the lamp, first insert the rear of the housing into the body panel before pushing the front inwards.
7. Check lamp operation.

Tail lamps

Sedan tail lamp assembly

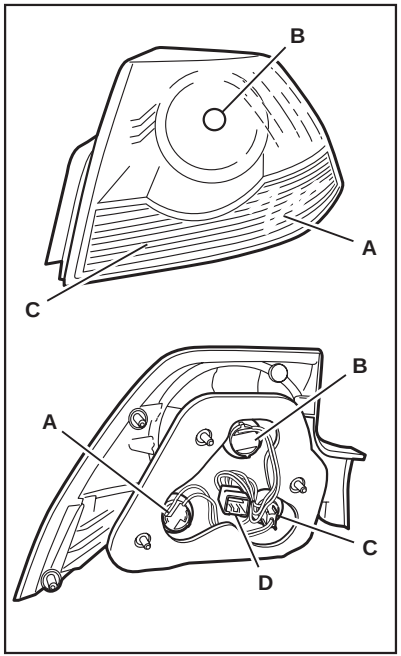

Driver side shown

A. Turn signal lamp (PY21W amber bulb)
B. Stop/tail lamp (P21/5W bulb)
C. Reverse lamp (P21W bulb)
D. Rear lamp wiring connector

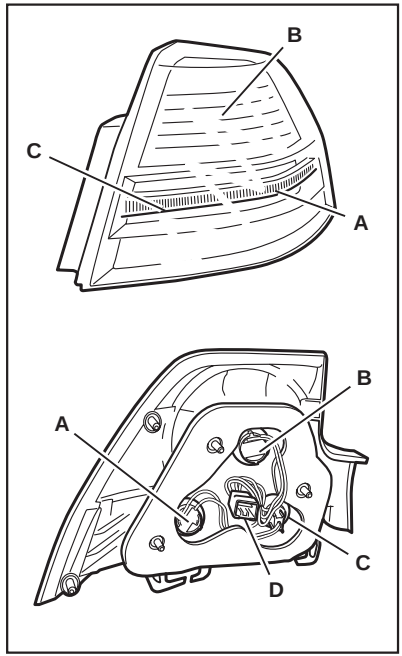

Driver side shown

The outside appearance of the lamp will differ depending on the model variant.

Sedan tail lamp access

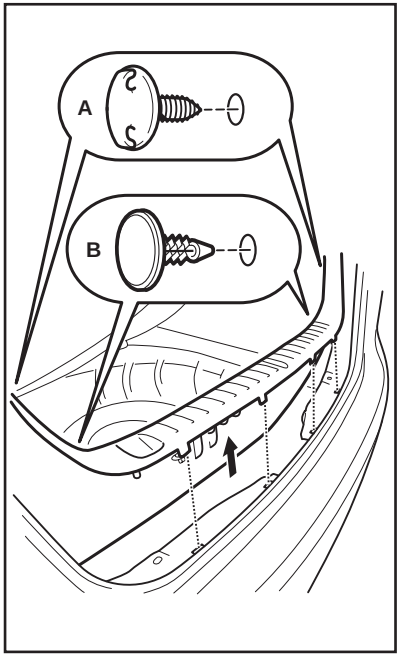

To access the tail lamp turn signal, stop/tail and reverse bulbs:

1. Open the boot.
2. Raise the spare wheel cover and attach the T-piece to the boot lid. See Spare wheel access on page 304.
3. There are two types of fastening systems for the plastic boot trim:
   1. Using a flat-blade screwdriver, remove the two retaining pins (B).

      When replacing the retaining pins, push them directly into the holes.
   2. Rotate anticlockwise and remove the two T shaped retaining screws (A).

      If the vehicle has a convenience net, there will be four T shaped retaining screws (A).
4. Grasp the plastic boot trim and pull directly upwards to remove.

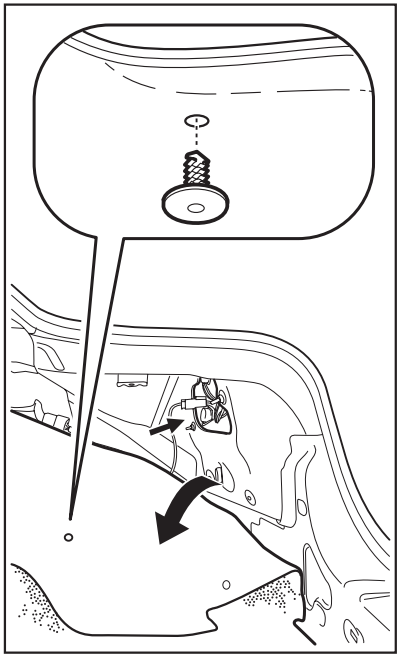

5. Remove the boot lining securing pin(s) by rotating anticlockwise and pulling down at the same time.

6. Lower the spare wheel cover.
7. Pull the boot lining away to reveal the rear of the lamp.

   When replacing the boot lining securing pin(s), push directly into the hole(s).
8. To replace the trim, align the guide tabs with the holes and push the trim down.
9. When the trim is refitted ensure the lip of the rubber boot seal is positioned on top of the trim.

Sportwagon tail lamp assembly

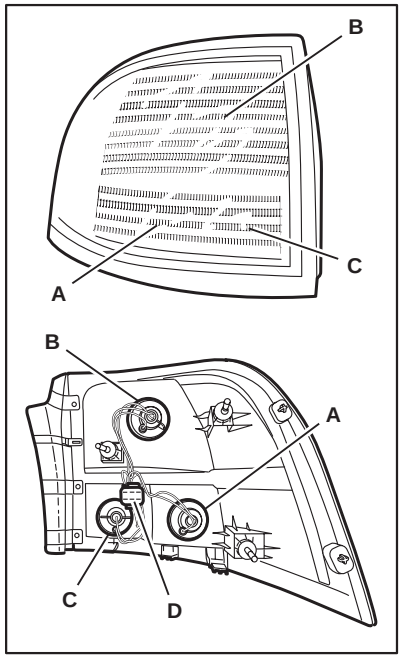

Passenger side shown

A. Turn signal lamp (PY21W amber bulb)
B. Stop/tail lamp (P21/5W bulb)
C. Reverse lamp (P21W bulb)
D. Rear lamp wiring connector

Sportwagon tail lamp access

To access the rear turn signal, stop/tail and reverse bulbs:

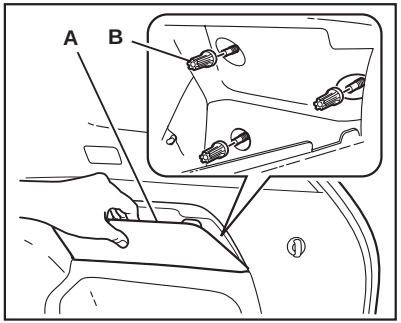

Driver side shown

1. Open the tailgate.
2. To access the driver side lamp, remove the cover (A) from the top and pull away from the cargo area trim.

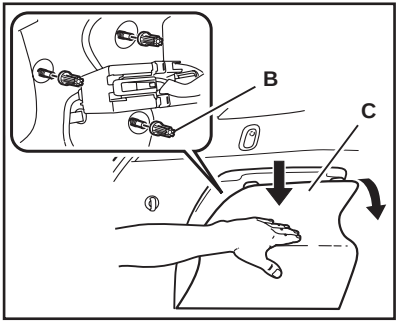

Passenger side shown

3. To access the passenger side lamp, remove the battery compartment cover (C) by pushing down at the centre.
4. Undo the three lamp assembly securing nuts (B).

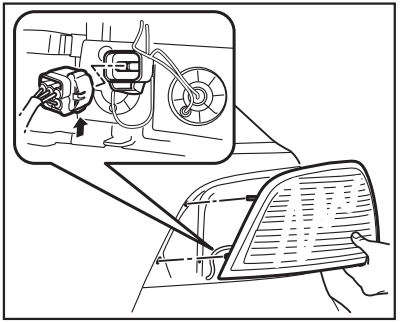

5. Remove the lamp assembly.

   Disconnect the wiring connector by pushing the tab at the bottom of the connector.

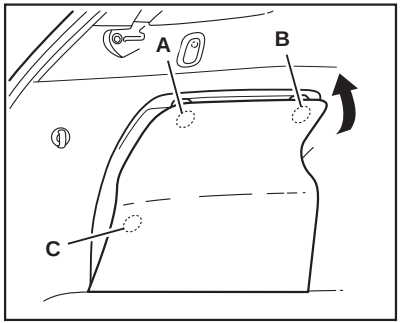

Passenger side shown

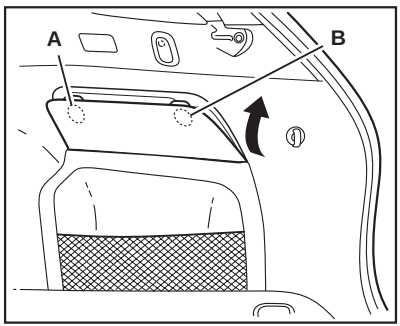

Driver side shown

6. To install the covers, align the locating tabs along the bottom edge of the cover with the slots in the trim.
7. Push the cover in the sequence and positions shown until it engages securely.

Tail lamp turn signal, stop/tail, reverse

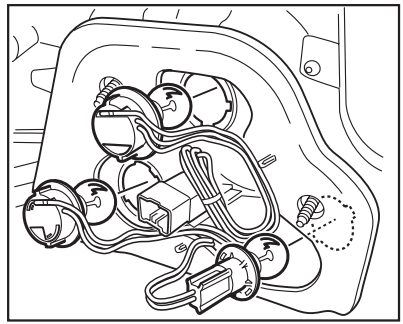

Sedan shown

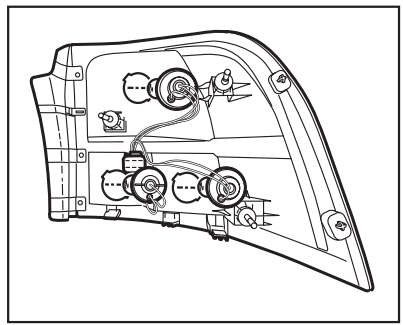

Sportwagon shown

1. To access to the lamp assembly, see Tail lamps on page 277.
2. From the rear of the assembly, rotate the bulb holder anticlockwise to release.
3. Lightly press the bulb and twist anticlockwise out of the holder.
4. Install the new bulb into the bulb holder by pushing it into the holder and rotating it clockwise.

   Ensure that the same colour bulb is used.
5. Install the bulb holder into the lamp.
6. Install the components removed in Step 1.
7. Check lamp operation.

Number plate lamp

Sedan (W5W bulb)

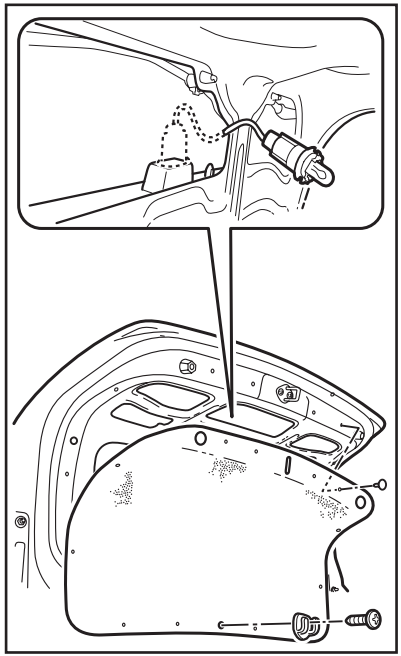

1. Open the boot.
2. Use a Phillips head screwdriver, to remove the clip at the lower edge of the boot lid.
3. If the vehicle has a boot lid lining, remove the 12 securing pins with a flat-blade screwdriver.
4. Remove the boot lid lining panel without bending.
5. Remove the bulb holder from the lamp housing by rotating the bulb holder anticlockwise.
6. Pull the bulb out of the bulb holder.
7. Push the new bulb into the bulb holder.
8. Install the bulb holder into the lamp housing by rotating the bulb holder clockwise.
9. Reinstall the boot lining in the reverse order.
10. Check lamp operation.

Sportwagon (W5W bulb)

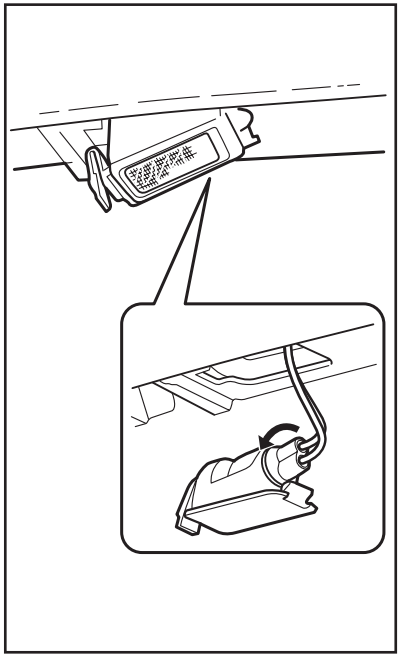

1. Push the locking tang at the end of the lamp housing towards the lens.
2. Pull the lamp assembly downwards.
3. Remove the bulb holder from the lamp housing by rotating the bulb holder anticlockwise.
4. Pull the bulb out of the bulb holder.
5. Push the new bulb into the bulb holder.
6. Install the bulb holder into the lamp housing by rotating the bulb holder clockwise, ensuring that the seal is undamaged.
7. Place the fixed tang into the number plate surround.
8. Push the lamp upwards to engage the locking tang.
9. Check lamp operation.

Interior lamps

Rear dome/reading lamps

(W5W bulb)

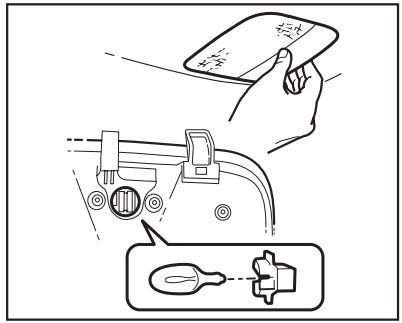

If the vehicle has rear interior dome/ reading lamps:

1. Pull the forward edge of the dome lamp downwards, using only fingers.
2. From the rear side, remove the bulb holder from the lamp housing by rotating the bulb holder anticlockwise.

   Note Do not remove the lens from the lamp assembly.

3. Pull the bulb out of the bulb holder.
4. Push the new bulb into the bulb holder.
5. Install the bulb holder into the lamp housing by rotating the bulb holder clockwise.
6. Refit the lamp into the rearward facing locating tabs.
7. Push the forward facing edge upward into the head lining until firmly in place.
8. Check lamp operation.

Rear dome/reading lamps with Rear Seat Entertainment (RSE)

(W5W bulb)

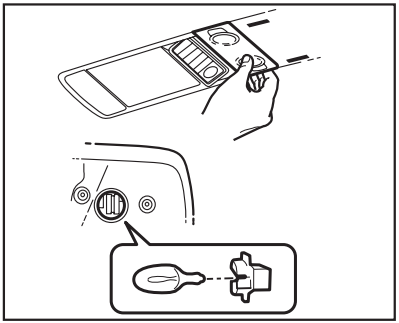

If the vehicle has RSE:

1. Pull down on the left or right edge of the lamp section using only fingers.
2. From the rear, remove the bulb holder from the lamp housing by rotating the bulb holder anticlockwise.
3. Pull the bulb out of the bulb holder.
4. Push the new bulb into the bulb holder.
5. Install the bulb holder into the lamp housing by rotating the bulb holder clockwise.
6. Refit the lamp section by firmly pushing it directly upward into the console.
7. Check lamp operation.

Glove box lamp, Door courtesy lamps, Cargo area (Sportwagon)

(Festoon bulb, 5W)

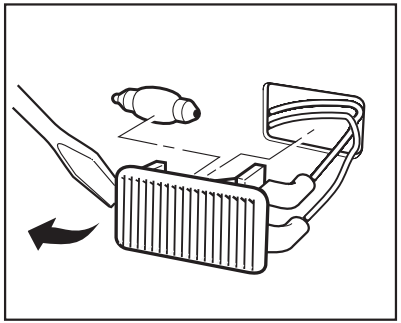

The vehicle may have a glove box lamp, door courtesy lamp and/or a cargo area lamp:

1. Remove the lens housing with a fine flat-blade screwdriver.
2. Pull the tab holding the bulb (opposite end to wiring) backwards and pull the bulb out.
3. To install a new bulb, pull the tab backwards.
4. When the new bulb is in place, feed the wiring back into the cavity and push the lens housing back into place.

Electrical system

⚠Warning

Turn off the ignition (LOCK position) and any electrical equipment before changing a fuse.

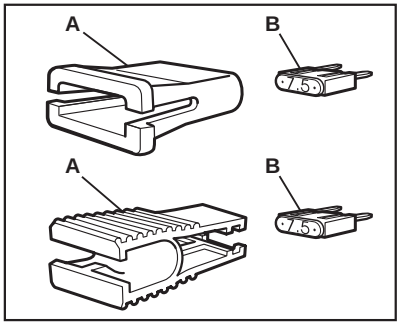

A. Fuse puller

B. Fuse

A fuse puller is provided in the cabin and engine compartment fuse panels, which can be used on each of the three fuse panels.

Spare fuses of various ratings are provided in the cabin and engine compartment fuse/relay boxes.

Replace blown fuses promptly.

Always replace a blown fuse with one of the same amperage.

The amperage is shown on the fuse's head:

Colour	Rating (amps)
Grey	2
Brown	7.5
Red	10
Blue	15
Yellow	20
Natural	25
Green	30

Replace the fuse cover securely after use.

⚠Warning

When replacing a fuse be sure to use a fuse of the specified amperage.

Never install a wire or similar as it could damage electrical components and cause a fire.

Any improper alterations to the electrical system may cause a fire hazard and engine damage. To maintain your own safety and that of the vehicle, have any work involving the electrical system or the replacement of high current fuses or relays carried out by a Holden Dealer.

Fuses and relays

Rear fuse panel

The fuse panel is located on the left side of the boot/cargo area, above the battery.

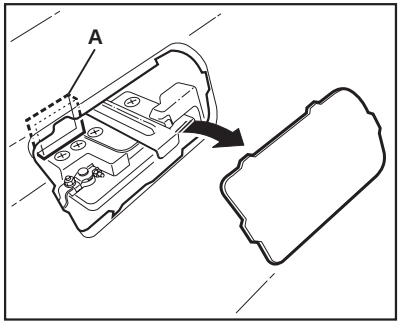

Sedan shown

A. Fuse panel

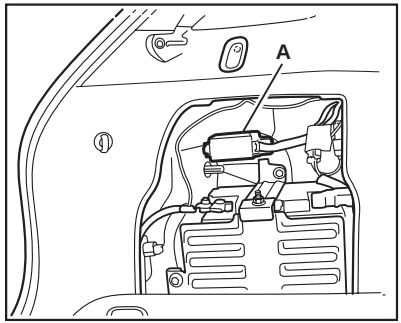

Sportwagon shown

A. Fuse panel

Remove the battery compartment cover to gain access. See Sportwagon tail lamp access on page 280.

Fuse and relay index

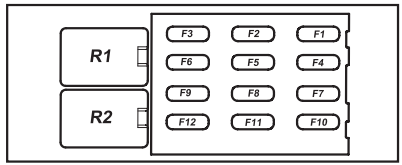

Fuses

F1	REAR SEAT ENTERTAINMENT	(10A)
F2	AMPLIFIER	(30A)
F3	DEALER OPTIONS	(10A)
F4	RADIO & INFOTAINMENT	(25A)
F5	INST/DISP/RFA/DLC	(10A)
F6	REAR ACCESSORY POWER OUTLET (APO)	(20A)
F7	TRAILER	(30A)
F8	SPARE	
F9	SPARE	
F10	ECM BATT	(15A)
F11	RVC SENSE	(7.5A)
F12	FUEL PUMP	(20A)

Relays

R1	SPARE
R2	SPARE

Cabin fuses and relays

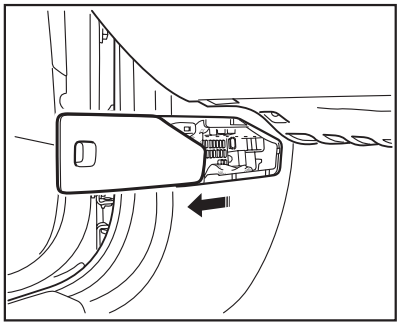

Pull on the slot in the fuse panel cover and slide rearwards to access the fuse panel.

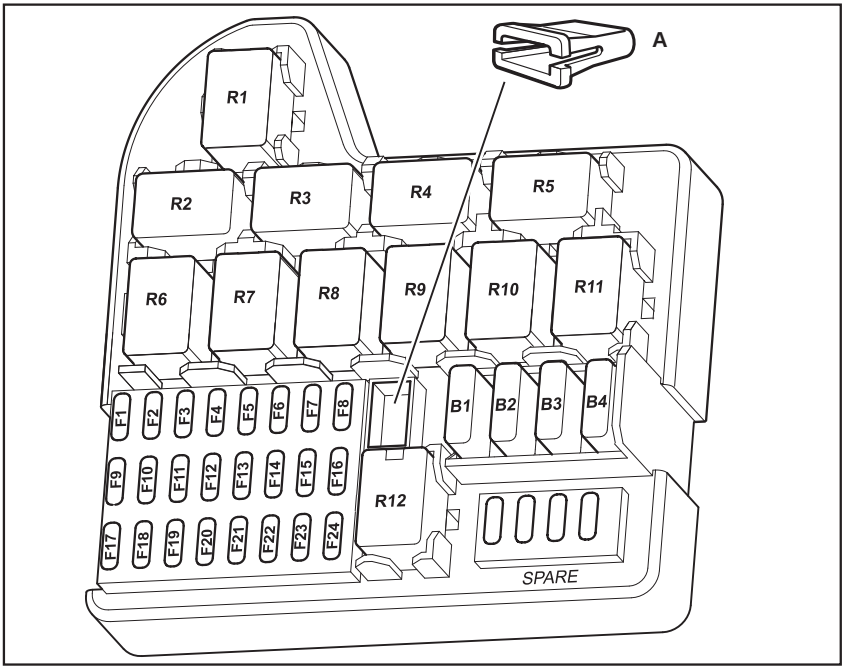

A. Fuse puller

Cabin fuse and relay index

Circuit breakers:

B1 POWER WINDOWS BATTERY ..... (20A)
B2 POWER WINDOWS RAP ..... (20A)
B3 POWER SEATS ..... (20A)
B4 SPARE

Fuses:

F1 SIR (SRS)..... (10A)
F2 REAR END RELEASE/ SEDAN ..... (10A)
WAGON ..... (30A)
F3 DOOR LOCKS ..... (25A)
F4 INADVERT POWER/ LED DIM..... (15A)
F5 COURTESY LIGHTS/RT FT TURN SIGNAL..... (15A)
F6 TURN SIGNAL RIGHT, SIDE AND REAR..... (15A)
F7 EDI ..... (15A)
F8 TURN SIGNALS LEFT..... (15A)
F9 BCM LOGIC ..... (10A)
F10 STOP LAMPS/ PARK ASSIST ..... (15A)
F11 CONSOLE LIGHTING..... (15A)
F12 IGN SW/THEFT..... (2A)
F13 REAR LIGHTER..... (20A)
F14 FRONT APO (AUXILIARY POWER OUTLET) ..... (20A)
F15 OUTSIDE MIRROR/ RPA OPTION..... (2A)
F16 PHONE/KEY LK/ISRVM/ RAIN SENSOR..... (10A)
F17 SUNROOF ..... (20A)
F18 REAR WIPER..... (20A)
F19 SPARE
F20 SPARE
F21 SPARE
F22 FRONT LIGHTER/ FRONT APO..... (20A)
F23 STRG WHEEL ILLUMINATION ..... (2A)
F24 RAP CONTROL PWR WDO ..... (2A)

Relays:

R1 RAP-RETAIN ACCESSORY POWER RELAY
R2 ALL DOOR LOCK RELAY
R3 PASS DOOR UNLOCK RELAY
R4 SPARE
R5 REAR END RELEASE RELAY
R6 DRIVERS DOOR UNLOCK RELAY
R7 SPARE
R8 ACCESSORY POWER RELAY
R9 SPARE
R10 SPARE
R11 SPARE
R12 FUEL PUMP RELAY

Engine compartment fuses and relays

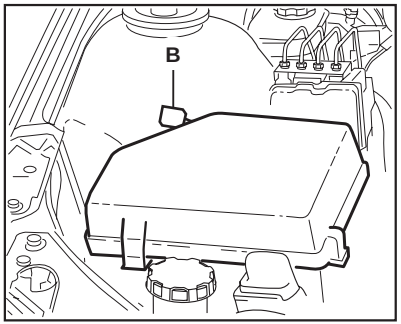

This is the main fuse/relay box.

Remove the clip-on cover to access.

B. Vacuum pump relay (R21)

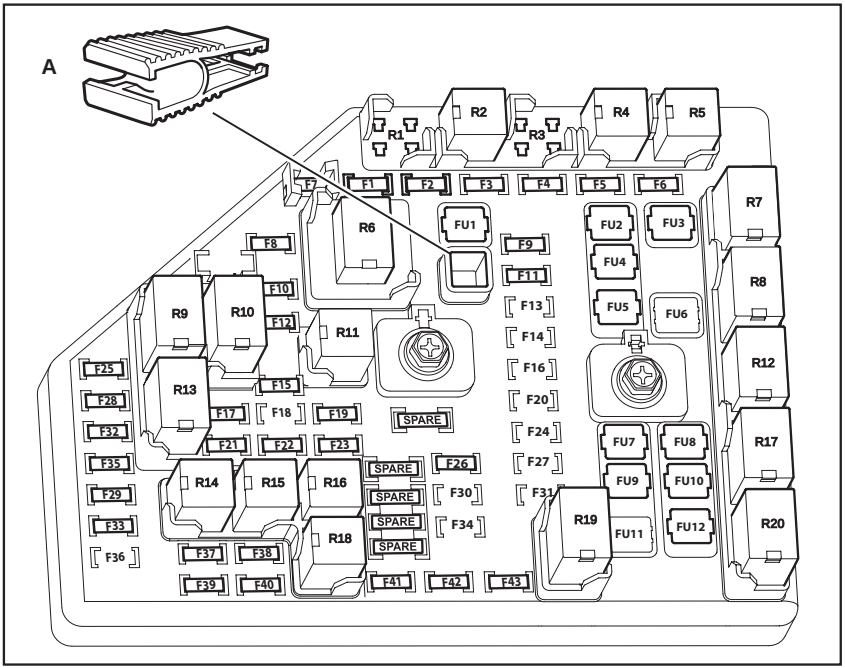

A. Fuse puller

Engine compartment fuse and relay index

Fuses:

FU1 BRAKE VACUUM PUMP ..... (20A)
FU2 REAR DEFOG..... (40A)
FU3 ABS MOTOR..... (40A)
FU4 BATT MAIN 3 ..... (50A)
FU5 BATT MAIN 1 ..... (50A)
FU6 SPARE
FU7 BATT MAIN 2 ..... (50A)
FU8 STARTER..... (40A)
FU9 HVAC BLOWER MOTOR..... (40A)
FU10 FAN 1 ENGINE COOLING (RIGHT)..... (30A)
FU11 SPARE
FU12 FAN 2 ENGINE COOLING (LEFT) ..... (30A)
F1 COMM ENABLE..... (10A)
F2 HVAC BATT..... (10A)
F3 BACK UP LAMP..... (15A)
F4 FOG LAMPS (FRONT)..... (15A)
F5 ABS VALVES..... (25A)
F6 SPARE
F7 HEADLAMP WASH..... (30A)
F8 HORN..... (15A)
F9 TCM..... (15A)
F10 LEFT LOW BEAM (BASE/HID) ..... (10/20A)
F11 SPARE ..... (10A)
F12 RIGHT LOW BEAM (BASE/HID) ..... (10/20A)
F13 SPARE
F14 SPARE
F15 FRONT WIPER ..... (30A)
F16 SPARE
F17 THEFT HORN ..... (10A)
F18 A/C CLUTCH..... (10A)
F19 RIGHT HIGH BEAM..... (10A)
F20 SPARE
F21 FRONT WASHER (WSW).... (15A)
F22 SPARE
F23 LEFT HI BEAM..... (10A)
F24 SPARE
F25 REVERSE LOCKOUT/TOSS/ CANISTER VENT/ FUEL SNSR ..... (15A)
F26 REAL TIME DAMPING..... (25A)
F27 SPARE
F28 ECM 1/ODD COILS..... (15A)
F29 EVEN COILS/ INJECTORS..... (20A)
F30 SPARE
F31 SPARE
F32 EMISSION 2..... (15A)
F33 EMISSION 1..... (15A)
F34 SPARE
F35 ODD INJECTORS/COILS/ ECM 1 ..... (20A)
F36 SPARE
F37 SPARE
F38 IGNITION BODY ..... (10A)
F39 IGNITION ENGINE/FSCM ... (10A)
F40 AIRBAGS ..... (10A)
F41 SPARE
F42 RIGHT PARK LAMP..... (10A)
F43 LEFT PARK LAMP ..... (10A)

Relays:

R1 SPARE
R2 COMM ENABLE RELAY
R3 A/C CLUTCH COMPRESSOR RELAY
R4 BACK UP LAMPS RELAY
R5 FOG LAMP RELAY -FRONT
R6 HEADLAMP-LO BEAM RELAY
R7 HEADLAMP WASH RELAY
R8 RR DEFOG RELAY
R9 FRONT WIPER HIGH RELAY
R10 FRONT WIPER LOW RELAY
R11 HEADLAMP-HI BEAM RELAY
R12 CRANK RELAY
R13 POWER TRAIN RELAY
R14 IGNITION RELAY
R15 FRONT WASH RELAY
R16 HORN RELAY
R17 ENGINE COOLING FAN 1 RELAY
R18 PARK LAMPS RELAY
R19 ENGINE COOLING FAN 2 RELAY
R20 ENGINE COOLING FAN 3 RELAY
R21 VACUUM PUMP RELAY

Vehicle tools

Tools

Tyre repair kit

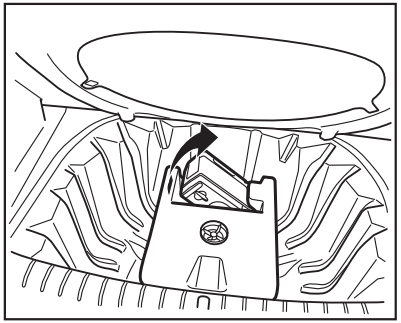

The vehicle may have an emergency tyre sealant and air compressor kit in place of the jack, tools and spare tyre. It is located in a foam container in the boot/cargo area. See Tyre sealant and air compressor kit on page 298.

Spare wheel

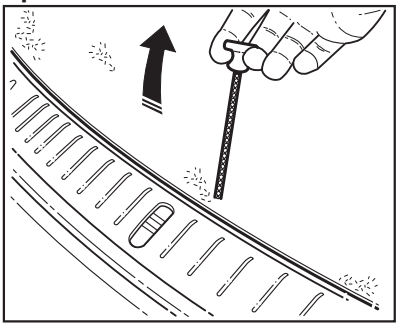

Sedan shown

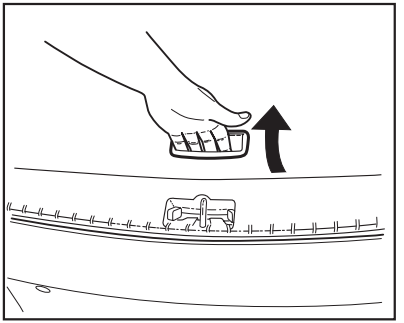

Sportwagon shown

The vehicle may have a spare wheel, located in a compartment in the floor of the boot/cargo area. See Removing the spare tyre on page 304.

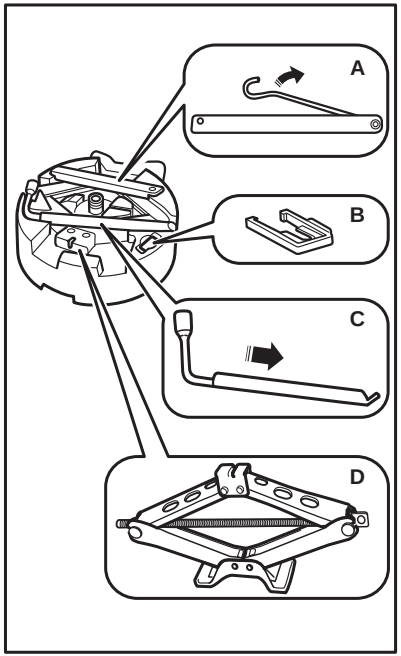

A. Jack handle
B. Nut cap tool
C. Wheel wrench
D. Jack

Wheels and tyres

Tyre placard

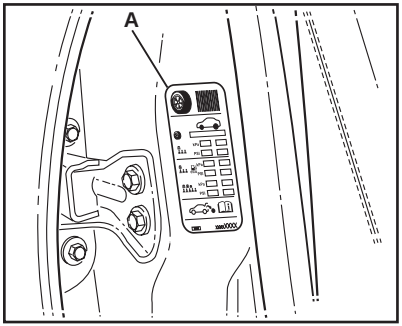

The correct pressures for tyres are shown on the tyre placard (A) in the passenger's door opening (B pillar).

The front tyre pressures are shown in the left column and the rear tyre pressures are shown in the right column.

The placard may display the tyre size and pressures using the following icons:

: Tyre size, minimum load rating, minimum speed rating

: Tyre pressure at normal load

: Tyre pressure for fuel economy driving at normal load

: Tyre pressure at maximum load

: Spare tyre pressures:

- Temporary spare: T155/80 R17 111M 420 kPa (60 psi)
- Full size spare: set to tyre pressure

Tyre pressure

Keep the tyres at the recommended pressures to avoid increased fuel consumption, uneven and premature tyre wear.

The correct pressures are shown on the tyre placard and in the tyre pressure table. See Tyre pressure on page 328.

- Tyre pressure should be checked when cold as tyre pressure will increase as the tyres warm up.
- Check the air pressure of tyres (including the spare) weekly, to ensure occupant safety, as well as reducing fuel consumption and increasing the life of the tyres.
- Check pressures when the vehicle has been stationary for over 3 hours. If tyre pressures must be checked immediately after driving more than 2 km, increase tyre placard pressure by 10 %.
- Use a tyre pressure gauge to check the tyres. Simply looking at the tyres is not sufficient.
- Replace any valve dust caps or extensions.
- Check the condition of the tyre tread and inspect for stones or abnormal wear.
- For constant long distance or rough road driving, daily checking is recommended.
- Tyre pressures may need to be increased depending on the load on the vehicle. See Vehicle weight on page 324.
- If the vehicle is loaded to half the maximum payload, the tyres should be inflated half way between the minimum and maximum pressures given on the tyre placard.

Low profile sports tyres

The vehicle may have low profile tyres.

Low profile tyres are expected to experience greater wear than conventional tyres, depending on driving conditions.

Follow the tyre care and maintenance instructions to maximise the life of the tyres.

Tread depth

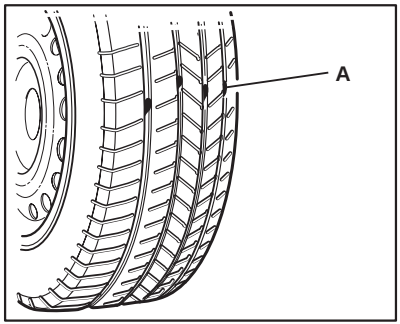

Replace the tyres when:

- They are worn to the point where the tread indicators (A) appear.

  The tyres originally fitted to the vehicle have built-in tread indicators. When only 1.5 mm of tread remains, these indicators show as plain bars across the tread pattern at regular intervals around the tyre.
- The tread or sidewall is cut, split, or cracked deep enough to expose the cord or fabric.
- The tyre has a bump or bulge in it, indicating some kind of internal damage.
- The tyre has a puncture, cut or other damage which can not be repaired because of the size or location of the damage.
- The cord or fabric is showing.

⚠Warning

Do not attempt to drive on a flat tyre more than is necessary to stop safely. Driving even a short distance can damage the tyre and wheel beyond repair. Tyres which have been repaired or retreaded are not capable of being driven safely at high speeds. Therefore, their use is not recommended.

Tyre rotation

It is recommended that you:

- Rotate tyres approximately every year or 15,000 km, whichever occurs first.

  Driving conditions, driving techniques, vehicle loading and weather may warrant more frequent tyre checks and rotation.

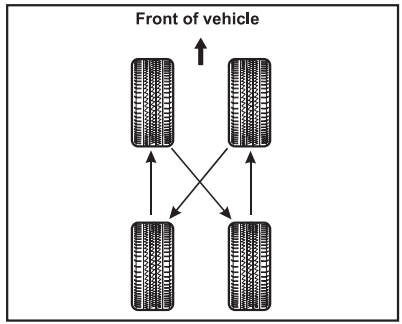

Front and rear tyres can wear differently depending on:

- Types of roads driven on
- Driving habits

- Tyre pressures
- Wheel alignment and balance

New tyres should be fitted in pairs to the front. If replacing only one tyre, pair it on the same axle with the least worn of the other three.

Buying new tyres

Refer to the tyre placard on the vehicle for tyre size and load rating.

Using a different size or type of tyre may affect:

- Ride
- Handling
- Speedometer accuracy
- Vehicle ground clearance
- Tyre clearance
- Snow chain clearance

Tyres with heavy treads and those made for better grip in the wet, should only be operated within the limits recommended by the manufacturer.

Tyres with a higher speed or load rating are acceptable, provided they are fitted to a suitable rim size.

Replacing the factory fitted wheels and tyres with non-genuine wheels and tyres may affect the New Vehicle Warranty as well as the vehicle's insurance policy.

Contact a Holden Dealer for advice on suitable tyres.

Wheel alignment and tyre balance

Improper wheel alignment or balance can cause:

- Tyres to wear fast and unevenly
- The vehicle to pull to one side
- Vibration

If any of these problems exist, have the vehicle checked by a Holden Dealer.

Tyre condition is checked when the vehicle is serviced by a Holden Dealer. They are able to diagnose any unusual signs of wear. If tyres are rotated, it is recommended that balance be checked at the same time.

Tyre chains

Due to lack of clearance, tyre chains cannot be fitted to vehicles equipped with the following wheel and tyre configurations:

- 245/45R18 18 x 8
- 245/40R19 19 x 8
- 245/35R20 20 x 8

If these vehicles need to be driven in the snow, consider changing to the following wheel and tyre configurations:

- 225/60R16 16 x 7 (suitable for V6 vehicles only)
- 225/55R17 17 x 7 (suitable for V6 vehicles only)

Tyre chains should be fitted only on the rear wheels.

Remove large hub caps and valve extensions that contact parts of the chain.

⚠Warning

Tyre chains may only be used at speeds up to 50 km/h. Tyre chains should only be used for short distances if the roads are not snow covered. The hard road surface causes rapid wear and the chain may break. Tyre chain links should not be thicker than 13 mm and the clasp should be well away from the bodywork. Thicker chains may damage the vehicle body.

Check the tyre placard for correct tyre pressures. See Tyre placard on page 293.

Whenever tyre chains are fitted, switch off the ESP®. See Electronic Stability Program (ESP®) on page 225.

Tyre sealant and air compressor kit

The vehicle may have an emergency tyre sealant and air compressor kit, in place of the jack, tools and spare tyre.

The tyre sealant and air compressor kit can be used to temporarily seal a small puncture up to 6 mm in the tread area of the tyre. It can also be used to inflate an underinflated tyre.

The vehicle must be driven for 8 km after the tyre is sealed and inflated to the recommended pressure, to ensure the sealant is distributed evenly.

Take the vehicle to a Holden Dealer to have the tyre repaired or replaced as soon as possible.

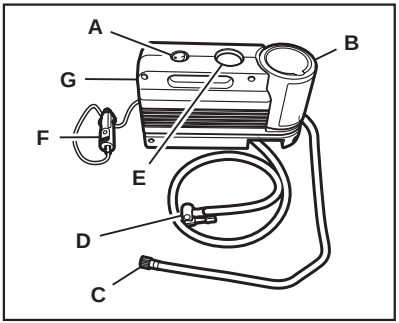

The kit includes:

A. On/off switch
B. Tyre sealant canister
C. Sealant-air delivery hose
D. Air-only delivery hose
E. Pressure gauge
F. 12 volt power connection
G. Air compressor

Tyre sealant

The sealant cannot seal sidewall damage, large punctures, or a tyre that has unseated from the wheel.

Follow the safety instructions on the tyre sealant canister.

Check the expiry date on the tyre sealant canister before use. The tyre sealant canister must be replaced before its expiry date.

There is only enough sealant to seal one tyre.

After usage, the tyre sealant canister and sealant-air delivery hose must be replaced as an assembly.

Replacement tyre sealant canisters are available from a Holden Dealer.

Temporary puncture repair

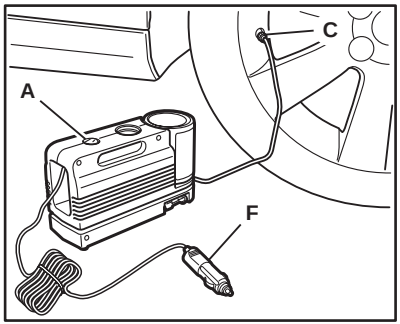

1. All passengers must exit the vehicle.
2. Inspect the damaged tyre.

   Do not remove any objects that have penetrated the tyre.
3. Unwrap the sealant-air delivery hose (C) from the side of the compressor.
4. Remove the 12 volt power connection (F) from the kit.

   Do not connect to the power socket yet.
5. Unscrew the tyre valve cap anticlockwise and remove.
6. Attach the sealant-air delivery hose (C) onto the tyre valve. Rotate it clockwise until tight.
7. Switch the on/off switch (A) to the **O** position.
8. Plug the 12 volt power connection into the vehicle power socket. See Power outlets on page 73.

   Do not jam the 12 volt power connection cable in the door, boot/tailgate or window.
9. Start the engine and let it idle to ensure the battery does not run down.

⚠Warning

Do not run the engine in an enclosed area or with passengers in the vehicle. See page 236 for exhaust gas warnings.

10. Switch the on/off switch (A) to the **I** position.

    The kit will begin to inject sealant and air into the tyre.

    Sealant may leak from the puncture hole until the vehicle is driven and the hole has sealed.
11. Check the air pressure gauge (E).

    If there is no pressure reading while the compressor is running, check for leaks at the connection between the tyre valve and the sealant-air delivery hose (C).
12. Inflate the tyre to the inflation pressure on the tyre placard. See Tyre placard on page 293.

    The pressure gauge (E) will initially read high while the compressor injects the sealant into the tyre. Once the sealant injection is complete, the pressure will quickly drop. It will start to rise again as the tyre inflates with air.

⚠Warning

Do not over inflate tyres due to risk of injury or damage to the tyre. Refer to the tyre placard for recommended inflation pressure.

13. Switch the compressor off to get an accurate reading.

    The pressure gauge (E) reads slightly high while the compressor is on.

    The compressor may be switched on and off until the correct pressure is reached.

14. Switch the on/off switch (A) to the **O** position.

    Note
    The tyre is not sealed and will continue to leak air until the vehicle is driven and the sealant is distributed in the tyre.

⚠Warning

If the recommended pressure cannot be reached after approximately 15 minutes, the vehicle should not be driven. The tyre is too severely damaged and the tyre sealant and air compressor kit cannot inflate the tyre. Disconnect and stow the tyre sealant and air compressor kit back in its original position. Contact a Holden Dealer.

⚠Warning

Be careful when handling the tyre sealant and air compressor kit as they may be hot after usage.

15. Unplug the 12 volt power connection (F) from the power socket.
16. Rotate the sealant-air delivery hose (C) anticlockwise and remove.
17. Replace the tyre valve cap.
18. Place the tyre sealant and air compressor kit back in the boot/ cargo area.

⚠Warning

Always stow the tyre sealant and air compressor kit in its original position. Unsecured loads increase the risk of injury during heavy braking, sudden avoidance manoeuvres or a collision.

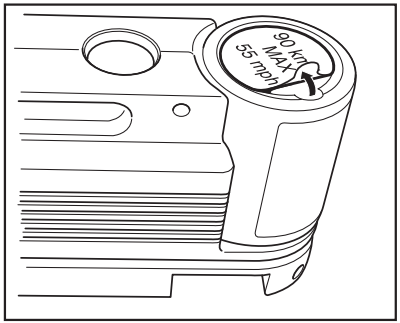

19. After inflating the tyre, remove the maximum speed label and place it in a visible location.

    It reminds you to drive cautiously and not to exceed 90 km/h until the damaged tyre is replaced or repaired.
20. Drive the vehicle immediately for at least 8 km to distribute the sealant evenly within the tyre.
21. Stop at a safe location to check the tyre pressure. To inflate tyres without sealant, see page 301.

22. If the tyre pressure has fallen more than 10 psi (68 kPa), below the recommended inflation pressure, do not continue driving. Contact a Holden Dealer.

    If the tyre pressure has dropped less than 10 psi (68 kPa), inflate to the recommended inflation pressure.

23. Wipe off any sealant from the wheel, tyre or vehicle.
24. Dispose of the used tyre sealant canister at a Holden Dealer or in accordance with local and State codes and practices. Replace with a new canister.

This is a temporary puncture repair. Take the vehicle to a Holden Dealer to have the tyre repaired or replaced as soon as possible.

Inflating tyres without sealant

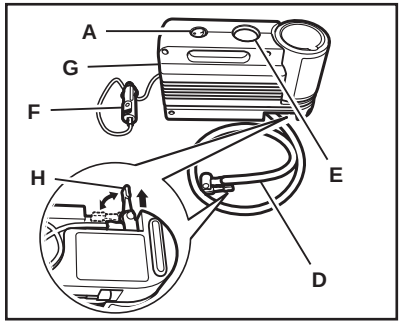

A. On/off switch
D. Air-only delivery hose
E. Pressure gauge
F. 12 volt power connection
G. Air compressor
H. Lever

1. Lift the lever (H) and pull the air-only delivery hose (D) from the bottom of the kit.
2. Remove the tyre valve cap by rotating it anticlockwise.
3. Push the air-only delivery hose (D) onto the tyre valve and push the lever (H) down to secure.
4. Plug the 12 volt power connection (F) into the vehicles power socket. See Power outlets on page 73.

   Do not jam the 12 volt power connection cable in the door, boot/tailgate or window.

5. Start the engine and let it idle to ensure the battery does not run down.

⚠Warning

Do not run the engine in an enclosed area or with passengers in the vehicle. See page 236 for exhaust gas warnings.

6. Switch the on/off switch (A) to the **I** position.

⚠Warning

Do not over inflate tyres due to risk of injury or damage to the tyre. Refer to the tyre placard for recommended inflation pressure.

7. Check the pressure gauge (E).

   If there is no pressure reading while the compressor is running, check for leaks at the connection between the hose and the tyre valve.

8. Inflate the tyre to the recommended inflation pressure using the air pressure gauge (E).

   The pressure gauge (E) reads slightly high while the compressor is on.

9. Switch the compressor off to get an accurate reading.

   The compressor may be switched on and off until the correct pressure is reached.

10. Switch the on/off switch (A) to the **O** position.

⚠Warning

Be careful when handling the tyre sealant and air compressor kit as they may be hot after usage.

11. Disconnect the 12 volt power connection (F) and the air-only delivery hose (D).
12. Replace the tyre valve cap.
13. Place the tyre sealant and air compressor kit back in the boot/ cargo area.

⚠Warning

Always stow the tyre sealant and air compressor kit in its original position. Unsecured loads increase the risk of injury during heavy braking, sudden avoidance manoeuvres or a collision.

Replacing the tyre sealant canister

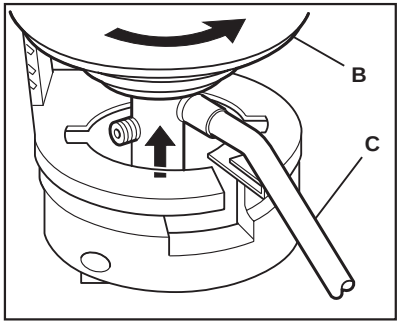

After a temporary puncture repair, replace the tyre sealant canister.

To remove the canister:

1. Unlock the air-only delivery hose (D) from the tyre sealant canister by pulling up on the lever (H).
2. Pull the air-only delivery hose (D) from the tyre sealant canister.
3. Unwrap the sealant-air delivery hose (C) from the air compressor (G).

4. Rotate the tyre sealant canister (B) anticlockwise so the sealant-air delivery hose (C) is aligned with the slot in the compressor.
5. Lift the tyre sealant canister (B) from the compressor and replace with a new tyre sealant canister, available from a Holden Dealer.
6. Dispose of the tyre sealant canister at a Holden Dealer or in accordance with local or State codes and practices.

To install a new tyre sealant canister:

1. Align the sealant-air delivery hose (C) with the slot in the compressor.
2. Push the tyre sealant canister (B) down and rotate it clockwise.
3. Wrap the sealant-air delivery hose (C) around the compressor channel.
4. Push the air-only delivery hose (D) onto the tyre sealant canister (B) inlet.
5. Push the lever (H) down.

Tyre changing

⚠Warning

All passengers must be out of the vehicle when it is being jacked.

Do not jack a vehicle with a trailer attached. Remove the trailer first.

Only jack the vehicle on hard, level surfaces.

Ensure moving parts of the jack are adequately lubricated before use.

Use the jack only at the designated lifting points. Use in other locations may result in the vehicle falling off the jack, or damage to the vehicle.

If using a jack (or hoist) other than the jack supplied with the vehicle, see page 308.

Do not start or run the engine while the vehicle is supported by the jack.

Use the jack only for lifting the vehicle when changing wheels.

Do not get under a vehicle that is supported by a jack. No person should place any portion of their body under a vehicle that is supported by a jack.

Vehicles with alloy wheels may have a steel spare wheel. Drive carefully and do not exceed 80 km/h if the tyre size or tread pattern of the spare tyre is different to the other tyres on the vehicle. Although the spare tyre was fully inflated when the vehicle was new, it can lose air over time. Check the inflation pressure regularly.

After installing the spare tyre on the vehicle, stop as soon as possible to check the inflation pressure is correct. Have the flat tyre repaired or replaced and installed back on the vehicle as soon as possible.

Removing the spare tyre

1. Park on a hard, level surface, in a safe location.
2. Apply the park brake firmly.
3. Switch the hazard warning flashers on.
4. Remove the ignition key.
5. Place manual transmissions in reverse gear and automatic transmissions in **P**.

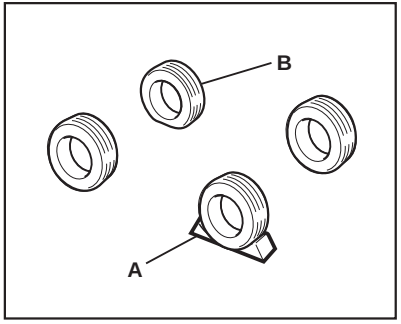

6. Chock the wheel diagonally (A) opposite the flat tyre (B) with a suitable solid object.

Spare wheel access

7. Open the boot/tailgate.
8. Pull up on the cover strap/ handle.
9. Lift the cover by attaching the T-piece/hook to the boot lid/ tailgate opening.

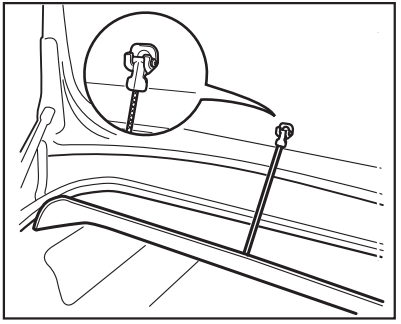

Sedan shown

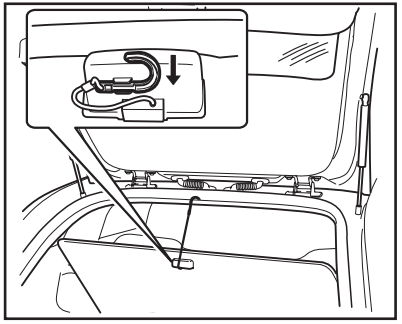

Sportwagon shown

For spare wheel cover removal (Sportwagon), see page 307.

10. Undo the retainer nut by hand and remove the spare wheel.

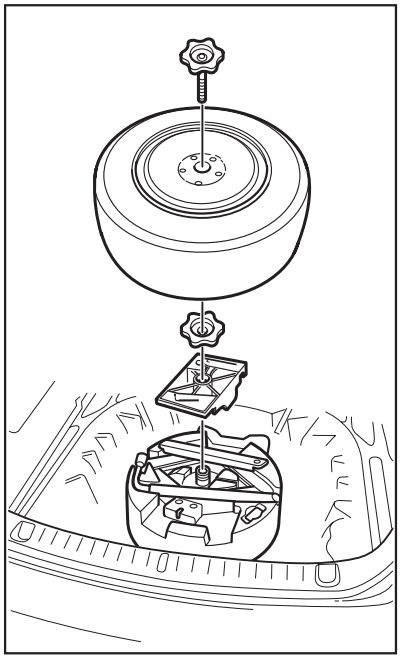

11. If the vehicle has a second retaining nut and panel, remove.
12. Remove the tools (jack handle, wheel wrench, jack and nut cap tool (for vehicles with nut caps). See Tools on page 292.

    Remove the tool container from the vehicle if required.
13. If a full wheel cover is fitted, lever it off with the wheel wrench.

    If a centre cap is fitted that covers the wheel nuts, remove using the wheel wrench.

    If the centre cap is secured using the wheel nuts, it will be removed as the wheel nuts are removed in Step 23.

    If individual wheel nut caps are fitted, remove each nut cap individually using the nut cap tool. Insert the nut cap tool into the nut cavity, squeeze the tool to grasp the nut cap and pull outwards to remove it.
14. Loosen the wheel nuts in an anticlockwise direction, one half to a full turn, but do not remove the wheel nuts.

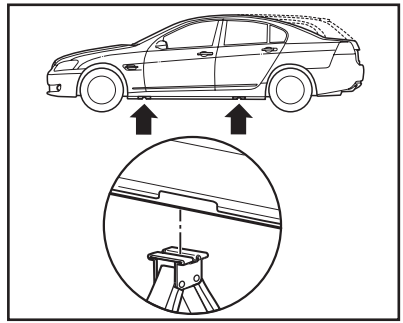

15. Position the jack beneath the jack location closest to the wheel being changed.

    The locations are identified by cutouts in the underside of the door sill.
16. Wind the jack up by hand until it engages with the jacking point.

    Ensure that the jack is not tilted and the base is resting squarely on the ground.

⚠Warning

Failure to position the jack as described could cause the vehicle to slip off the jack.

Do not get under a vehicle that is supported by a jack. No person should place any portion of their body under a vehicle that is supported by a jack.

17. Unfold the jack handle so it forms a right angle.

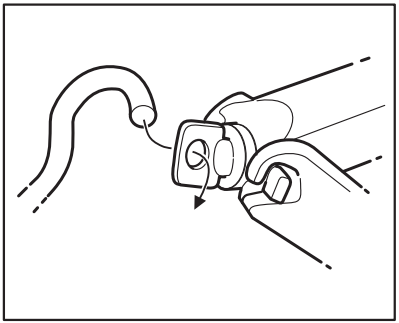

18. Fit the jack handle onto the jack by sliding the hook through the loop on the end of the jack.
19. Grasp the hooked fold out section with one hand.

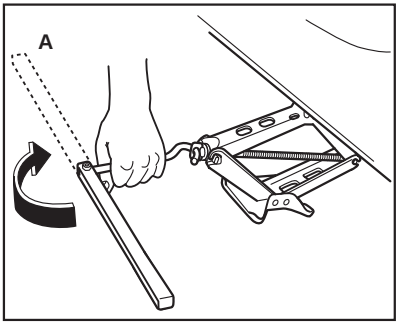

20. With the other hand turn the handle through 180 degrees until it reaches position (A).

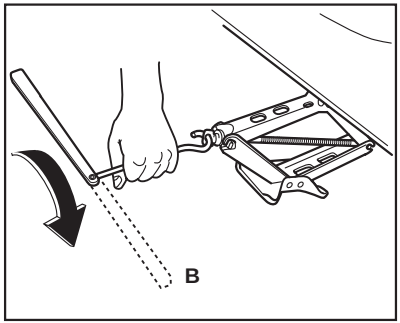

21. Rotate the handle clockwise from position (A) to position (B).
22. Repeat Steps 19 to 21 until the bottom of the flat tyre is about 5 cm above the ground.
23. Remove the wheel nuts and place in a clean, dry place.
24. Exchange the wheel on the vehicle with the spare wheel.
25. Replace the wheel nuts and lightly tighten with the wheel nut wrench.
26. Lower the vehicle by reversing the jacking procedure.
27. Remove the jack from under the vehicle.
28. With the wheel on the ground, use the extended wheel nut wrench to tighten the wheel nuts in the sequence shown.

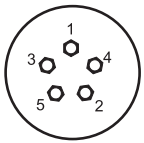

⚠Warning

To tighten the wheel nuts, the wrench must be fully extended.

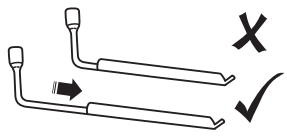

Spare wheel cover removal (Sportwagon)

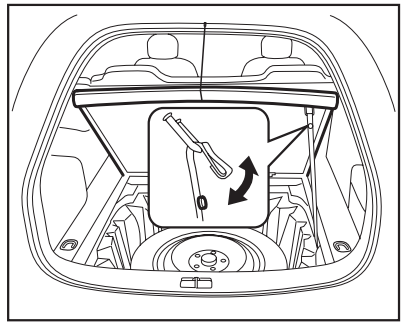

1. Lift the spare wheel cover.
2. Attach the hook to the tailgate opening.
3. Unclip the press stud.
4. Support the cover and detach hook from the tailgate opening.
5. Remove the cover.
6. Reverse the procedure to install the cover.

   Align the two locating tabs at the forward edge of the cover with the holes in the floor.

29. Replace wheel trims or nut caps.

    For a full wheel trim, line up the tyre valve with the hole in the wheel trim and align the wheel trim clip-in legs.

30. Replace the tools, container and flat tyre in the boot/cargo area.
31. Tighten the upper retaining nut, lower retaining nut and panel firmly by hand.
32. Replace the spare wheel cover.

⚠Warning

As soon as possible after changing a wheel, have the wheel nuts tightened with a torque wrench to 170 ± 20 Nm (Newton metres). Wheel nuts must be tightened evenly to the correct torque in the sequence shown (refer to Step 28), as wheel nuts which have not been tightened properly could eventually allow the wheel to come off while the vehicle is moving.

Trolley jack or vehicle hoist

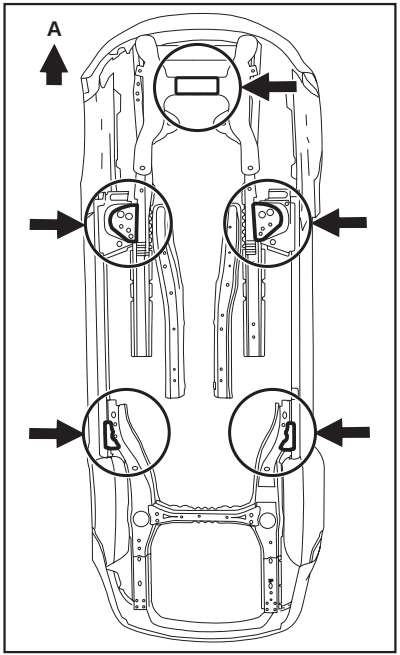

A. Front of vehicle

To raise the vehicle, position the jack under the centre of the suspension cross member or hoist pad locations.

⚠Warning

Do not jack under the suspension control arms. Do not get under a vehicle that is supported by a jack. No person should place any portion of their body under a vehicle that is supported by a jack.

Jump starting

Read the following warnings and procedure in full before attempting to jump start the vehicle.

If you are still unsure about jump starting, Holden strongly recommends for your safety and that of the vehicle that you seek the assistance of a suitably trained service technician.

If the vehicle battery is disconnected or discharged, the tailgate (Sportwagon) will not open normally. See Manual tailgate release on page 24.

⚠Warning

Do not push start or tow start either a manual or an automatic vehicle. If unburnt fuel were to reach the catalytic converter and ignite, the converter could overheat or be destroyed by backfire. Therefore, if the battery is flat, jump start, but do not push start the vehicle.

Batteries produce explosive gases, contain corrosive acids and supply levels of electrical current high enough to cause burns. Therefore, adhere to the following when working near a battery:

- Do not attempt jump starting directly from the battery in the boot (Sedan) or cargo area (Sportwagon).
- Do not let the jumper lead clamps touch each other or other metal parts.

- Do not allow the jumper leads to contact any rotating engine components.
- Do not use open flames or sparks near the battery.
- Do not smoke near the battery.
- Never use a quick charger to start the engine.
- The battery must be removed from the vehicle for recharging.
- When refitting the battery make sure the vent tube is correctly installed.
- Only use the recommended battery otherwise the electric power management system may not work correctly. Refer to a Holden Dealer for battery replacement.
- Wear eye protection such as safety glasses and avoid leaning over the battery.

- Battery acid is corrosive. If it gets on your skin, wash with plenty of water immediately. If it gets in your eyes you should not only flush with lots of water, but should also seek medical help. Battery acid also damages paint and fabrics. To minimise damage, wash it off immediately.
- Remove rings, metal watch bands and other metal jewellery before working around the battery.
- If a permanently connected hands free telephone kit is fitted to the vehicle, remove the fuse for the telephone kit before jump starting. Remember to replace the fuse afterwards.

Jump starting connection posts

The jump start positive (A) and negative (B) posts are located in the engine bay on the passenger side.

These posts are used instead of a direct connection to a battery.

The positive jump start connection is covered by a red cap.

1. Push the clip to release the top.
2. Remove to expose the terminal.

Caution
Do not make any connections at point (C) as costly damage to the vehicle could result.

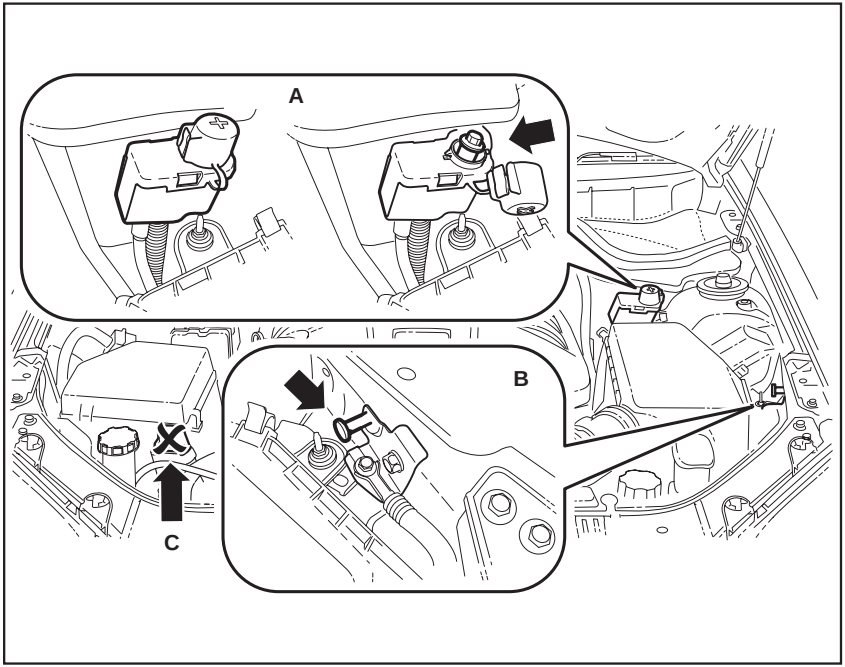

Jump starting procedure

Note
The battery in both vehicles must have a negative earth and a 12 volt rating.

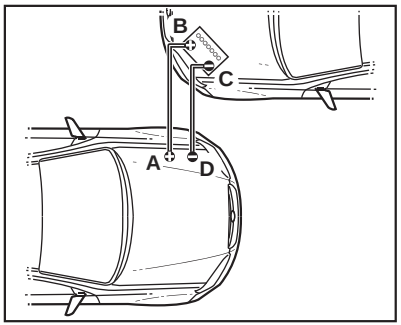

1. Position the two vehicles so that they are NOT touching.
2. Apply the park brakes.
3. Put automatic transmissions in **P** and manual transmissions in neutral.
4. Turn the ignition off.
5. Turn off all lamps and accessories in both vehicles, except the hazard warning flashers or any lights needed for the work area.
6. Attach one end of the RED jumper lead to the jump start positive post (A).
7. Attach the other end of the RED jumper lead to the positive terminal (B) of the charged battery.
8. Attach one end of the BLACK jumper lead to the negative terminal (C) of the charged battery.
9. Attach the other end of the BLACK jumper lead to the jump start negative post (D).
10. Start the engine in the vehicle with the charged battery and allow to idle for at least 4 minutes.
11. Start the engine of the vehicle with the flat battery.
12. Turn off the headlamps, rear demister, air conditioning and audio system of the vehicle with the flat battery.
13. Allow both vehicles to run for at least 4 minutes while connected, to stabilise battery voltage.
14. Leave the engines running while removing the BLACK negative jumper lead first, followed by the RED positive jumper lead.

Note

- Refit the red protective cap to the positive jump start post following removal of the jump leads.
- While removing each clamp, do not touch any other metal while the other end remains attached.

Towing a disabled vehicle

⚠Warning

Flat tray towing is the only recommended towing procedure.

A slot and rope location is provided to move a bogged or disabled vehicle a short distance or to pull the vehicle onto a flat tray tow truck.

Use only wheel lashings to secure the vehicle to the flat tray tow truck.

Do not attach towing equipment to the bumpers or brackets, suspension or cross members.

To prevent damage, use only proper towing equipment.

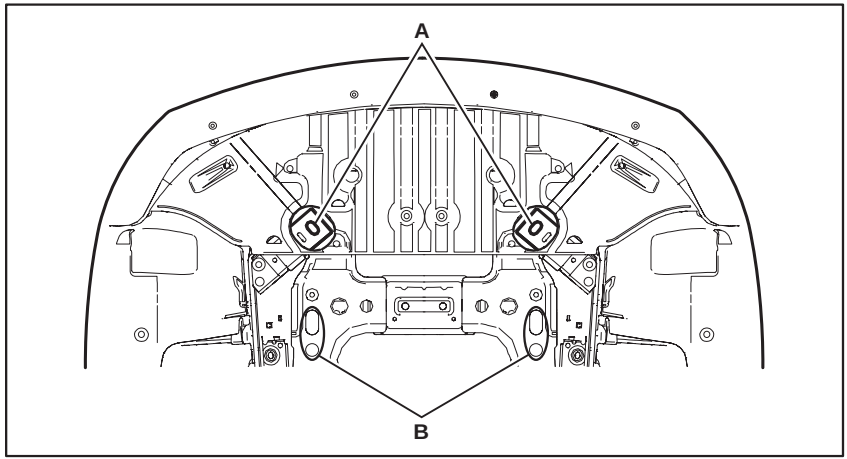

Attachment locations

An oval shaped slot (A) is provided underneath the front of the vehicle.

Access to the slot is via the circular hole in the black plastic splash shield underneath the front of the vehicle.

A hook of the appropriate size, attached to the cable, should be used in the slot.

A rope cannot be threaded through the slot.

A rope can be looped through the holes at the rope location (B).

Appearance care

Exterior care

Washing

The paintwork of the vehicle is exposed to environmental influences. Wash and wax regularly. When using automatic vehicle washes, select a programme that includes waxing.

Bird droppings, dead insects, resin, pollen and the like should be cleaned off immediately, as they contain aggressive constituents which can cause paint damage. Failure to do so may result in permanent damage, particularly in hot weather conditions.

Road bloom is a gradual build up of road and environmental grime. This should be removed with a paint cleaner once a year, in addition to normal washing.

If using a vehicle wash, comply with the vehicle wash manufacturer's instructions. Never use an automatic wash that requires anything touching the paint (other than water). The wipers must be switched off. Remove antenna and external accessories such as roof racks etc.

If you wash your vehicle by hand, make sure that the insides of the wheel housings are also thoroughly rinsed out.

Clean edges and folds on opened doors and the bonnet as well as the areas they cover.

Have the door hinges of all doors greased by a Holden Dealer.

Caution

Do not clean the engine compartment with a steam-jet or high-pressure jet cleaner.

Thoroughly rinse and chamois off the vehicle. Rinse chamois frequently. Use separate chamois for painted and glass surfaces: remnants of wax on the windows will impair vision.

Do not use hard objects to remove spots of tar. Use tar removal spray on painted surfaces.

Note

For certain body colours, some variation in gloss and colour may exist in the engine bay or boot (Sedan) and on the underside of the vehicle.

⚠Warning

Take care when moving the vehicle after washing, in case water has affected the brakes. Applying the brakes lightly will indicate whether they have been affected. To dry them quickly, lightly apply the brakes while maintaining a slow forward speed with a clear area ahead, until brake performance returns to normal.

Exterior lamps

Headlamp and other lamp covers are made of plastic. Do not use any abrasive, solvent based cleaners or caustic agents and do not dry-clean them.

Air intakes

Clear debris from the air intakes, between the bonnet and windscreen and below the front bumper, when washing the vehicle.

Polishing and waxing

Wax the vehicle regularly (at the latest when water no longer beads).

Polishing is necessary only if the paint has become dull or if solid deposits have become attached to it.

Paintwork polish with silicone forms a protective film, making waxing unnecessary.

Plastic body parts must not be treated with wax or polishing agents.

Windows and windscreen wiper blades

Use a soft lint-free cloth or chamois leather together with window cleaner and insect remover.

- Never use abrasive cleaners to clean glass.
- Refer to a Holden Dealer for windscreen washer additive.
- Old wiper blades can cause windscreen scratching. Regularly inspect and replace them.

Caution
Do not operate the wiper blades by hand as this damages the wiper drive mechanism.

When cleaning the rear window, make sure the heating element inside is not damaged.

Clean smearing wiper blades with a soft cloth and window cleaner.

Wheels and tyres

Do not use high-pressure jet cleaners.

- Remove oil and grease with soap and water or detergent.
- Do not use petrol to clean tyres.
- Use a good quality tyre and bumper shine if required.
- A good quality wheel cleaner can be used for cleaning alloy wheels.
- Do not use abrasive cleaners.

Door drain holes

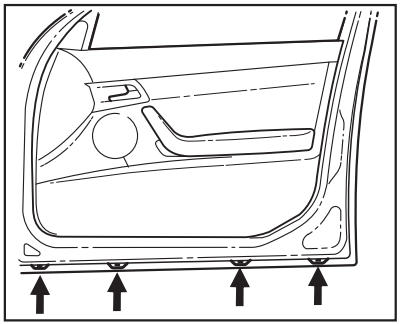

- Clear drain holes at the bottom of the door panels from dirt and other foreign materials which could trap water inside the panels.
- Clean clogged drain holes with a plastic pin or peg.
- Avoid scratching the paint work.

Paintwork damage

Rectify minor paintwork damage with a touch-up pen before rust forms.

Have more extensive damage or rust areas repaired by your Holden Dealer.

Caution

Do not spill coolant on the vehicle's exterior surfaces as it can damage the paint work. If you do, wash it off immediately.

Underbody

Substances can cause rust under the vehicle.

- Hose the underbody with clean water whenever the vehicle is washed.
- Where the vehicle is exposed to heavy concentrations of corrosive materials, inspect and wash the complete underbody at least once each year, preferably after winter exposure.

Interior care

⚠Warning

Many cleaning products are toxic, flammable or may damage the interior. When cleaning the interior, avoid volatile cleaners such as acetone, lacquer thinners, enamel reducers, nail polish removers, or cleaners such as laundry soaps, bleaches or reducing agents. Never use carbon tetrachloride, petrol or naphtha for any cleaning purpose. Ensure that the vehicle is well ventilated while using any cleaners and always follow the cleaning product manufacturer's recommendations. Water based cleaners, rather than solvent based cleaners, are recommended.

Steam cleaning of seats is not recommended.

Interior and upholstery

Only clean the vehicle interior, including the instrument panel fascia and panelling, with a dry cloth or interior cleaner.

The instrument panel should only be cleaned using a soft damp cloth.

Clean fabric upholstery with a vacuum cleaner and brush. Remove stains with an upholstery cleaner.

Clean seat belts with a mild, non-abrasive soap and lukewarm water.

After washing, thoroughly, sponge the solution out of the belts.

Leather

Clean regularly using a leather revitaliser or mild detergent.

- Apply revitaliser using a lint free cloth and rub it onto the leather.
- Do not saturate the leather with the cleaner and do not pour on directly.
- Allow to dry naturally.
- For deeply embedded soil and dirt, use a leather cleaner.
- After using a leather cleaner/ revitaliser, apply a leather protector.

  A leather protector is designed to repel dirt and provides water resistance.

Note

- Clean and protect leather at least twice a year.
- Do not use synthetic cloths or brushes.

Caution
Close Velcro fasteners as open Velcro fasteners on clothing could damage seat upholstery.

Plastic and rubber parts

Plastic and rubber parts can be cleaned with the same cleaner as used to clean the body. Use interior cleaner if necessary. Do not use any other agent. Avoid solvents and petrol in particular. Do not use high pressure jet cleaners.

Floor mats

- Pull up the small peg at the corner to remove the mat.
- Push the mat down onto the peg to replace.

Service and maintenance

General information 318
Recommended fluids, lubricants and parts 319

General information

Service information

In order to ensure economical and safe vehicle operation and to maintain the value of your vehicle, it is of vital importance that all maintenance work is carried out at the proper intervals as specified.

See your Service/Warranty Booklet for the service schedules and for more information.

Recommended fluids, lubricants and parts

Engine type	3.6L multipoint fuel injection V6	3.6L (SIDI) direct injection V6	3.0L (SIDI) direct injection V6	Generation IV V8
Engine oil specification	SAE 5W-30 ILSAC GF4; API SM			
Coolant specification	50% clean fresh water and 50% Dexcool® anti-freeze coolant, conforming to specification number GM6277M			
Automatic transmission fluid	Dexron® VI			
Manual transmission fluid	SAE 75W-90 GL5 conforming to Esso specification number JWS2250C			Holden part number 12378329
Differential oil	Castrol SAF Carbon Modified SAE 75W/85 API GL5 GM			
Brake and clutch fluid	Heavy duty brake fluid, Dot 4 plus, SAE J1704 or conforming to Holden specification number HN 2456			
Power steering fluid	Dexron® VI			
Battery	Maintenance free 12 V, with ventilation system. LN2 460 cold cranking amps (CCA), 85 minutes reserve capacity. The vehicle may have an LN3 battery. LN3 600 cold cranking amps (CCA), 120 minutes reserve capacity.			

⚠Warning

Use only a manufacturer recommended battery with a ventilation system. Use of other batteries may affect the electric power management system and allow explosive gases into the vehicle cabin. Refer to a Holden Dealer or authorised repairer.

Technical data

Vehicle identification 320
Vehicle data 323

Vehicle identification

ISOVIN plates

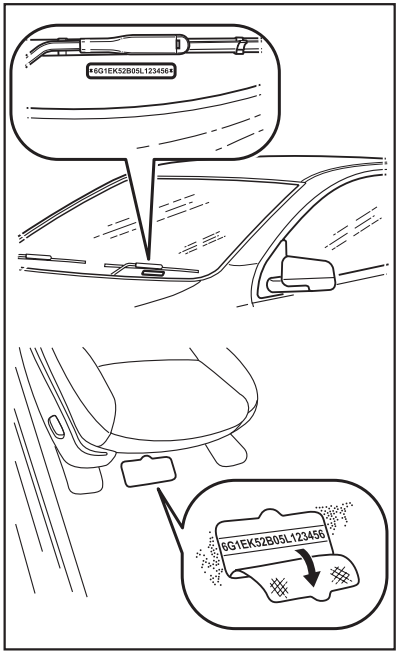

Each vehicle has its own, individual International Standards Organisation Vehicle Identification Number (ISOVIN), which is shown behind the windscreen on the left side and under the right front seat, under a carpet flap.

Compliance label

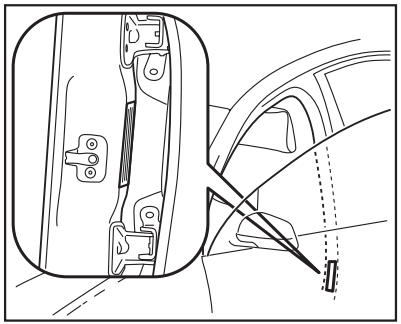

This label shows the vehicle make, model series, date of manufacture, Vehicle Identification Number (VIN), approved seating capacity and approval number.

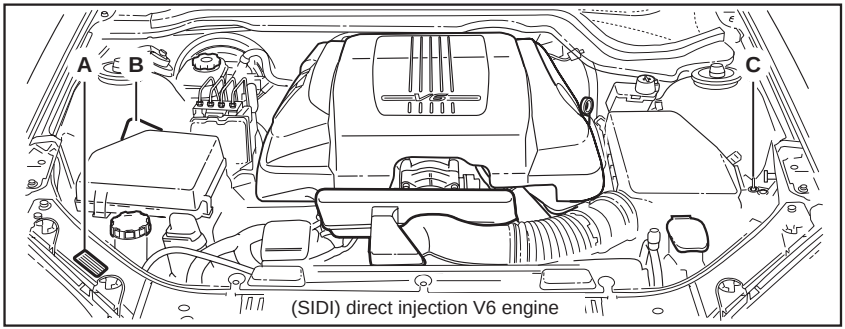

(SIDI) direct injection V6 engine

Cooling system/ air conditioning label

Label (A) shows the warnings for the air conditioning and cooling system as well as information on the air conditioning refrigerant and compressor oil.

LPG compliance plate

The vehicle may have an LPG compliance plate.

The plate (B) shows the installation date, plate number, permit number, certificate of compliance number, cylinder (LPG tank) number, Vehicle Identification Number (VIN) and engine number.

Body and option plate

Plate (C) shows the model identification, Vehicle Identification Number (VIN), paint and trim colour combination, air conditioning, paint number, engine, transmission, axle ratio options, suspension options (where applicable) and build date.

Engine number location

V6 engine

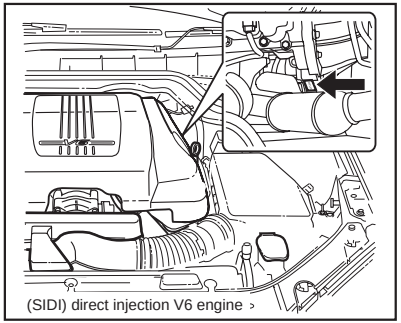

(SIDI) direct injection V6 engine ›

The engine number is located at the rear of the engine on the passenger side.

View the engine number from under the vehicle.

V8 engine

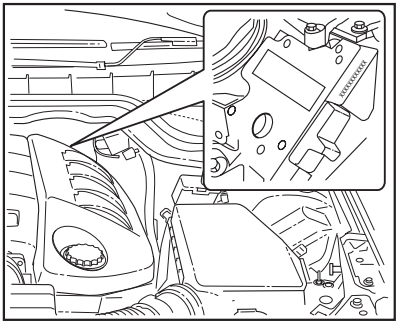

The engine number is located at the rear of the engine on the passenger side.

The engine number can be viewed from the top, using a mirror, after the engine cover has been removed. See Engine cover on page 256.

Vehicle data

Engine data

Engine type	3.6L multipoint fuel injection V6	3.6L (SIDI) direct injection V6	3.0L (SIDI) direct injection V6	Generation IV V8
Engine	3564 cc	3564 cc	2986 cc	5967 cc
Engine power and torque	Please refer to holden.com.au			
Octane rating (RON)	Unleaded regular 91 or higher			
Ethanol compatibility	E10	E10	E85	E85

Air conditioning specifications

Refrigerant type	R-134A
Refrigerant charge	580 g +/- 20 g
Compressor oil type	Polyalkylene glycol (Holden part no. 90510419)
Compressor oil refill capacity	120 ml +/- 10 ml

⚠Warning

The air conditioning system should be serviced by qualified personnel only. Improper service methods may cause personal injury.

Vehicle weight

Overloading is a safety hazard and could also shorten the life of the vehicle.

Maximum vehicle payloads

	Occupants (average 68 kg each)	Luggage (kg)	Total load (kg)
Sedan	5	68	408
Sportwagon			
Omega	5	140	480
Berlina, International	5	80	420
SV6, SS, SS V-Series, Calais, Calais V-Series	5	68	408

Axle loads

Maximum front and rear axle loads

Do not exceed the maximum axle loads, including the weight of any options or accessories fitted to the vehicle. Take the roof rack load into account when determining the rear axle load. Weigh at a weighbridge if unsure.

	Front axle load (kg)		Rear axle load (kg)	
	V6	V8	V6	V8
Sedan				
Without LPG	1080	1100	1300	1300
Omega LPG	1080	-	1340	-
Berlina LPG, International LPG	1080	-	1300	-
Sportwagon				
Omega	1080	-	1425	-
SV6, Berlina, International, Calais	1080	-	1350	-
SS	-	1100	-	1350
V-Series, V-Series Redline	1080	1100	1370	1370

Dimensions (mm)

	Length	Width excl. mirrors	Width incl. mirrors	Height	Wheel base	Front overhang	Rear overhang	Front track	Rear track
Sedan									
Omega	4900	1899	2100	1471	2915	852	1133	1602	1618
SV6, SS, SS V-Series, SS V-Series Redline	4902	1899	2100	1471	2915	853	1134	1592	1608
Berlina, International	4900	1899	2100	1471	2915	852	1134	1602	1618
Calais	4903	1899	2100	1471	2915	855	1134	1602	1618
Calais V-Series, Calais V-Series Redline	4903	1899	2100	1471	2915	855	1134	1592	1608
Sportwagon									
Omega	4902	1899	2100	1479	2915	852	1135	1602	1618
SV6, SS, SS V-Series, SS V-Series Redline	4901	1899	2100	1479	2915	853	1133	1592	1608
Berlina, International	4902	1899	2100	1479	2915	852	1135	1602	1618
Calais	4905	1899	2100	1479	2915	855	1135	1602	1618
Calais V-Series, Calais V-Series Redline	4905	1899	2100	1479	2915	855	1135	1592	1608

The above figures are based on the design dimensions.

Capacities

Engine type	3.6L multipoint fuel injection V6	3.6L (SIDI) direct injection V6	3.0L (SIDI) direct injection V6	Generation IV V8
Refill engine oil including filter (approximately)	6.7 L	6.7 L	6.7 L	7.6 L
Coolant (approximately)	10.0 L	10.0 L	10.0 L	11.0 L
Fuel tank	71.0 L	71.0 L	71.0 L	71.0 L
LPG tank (approximate usable)	75.0 L			

Tyre pressure

Tyre size	Recommended pressure													
	Normal load				Eco normal load				Maximum load				Spare	
	Front		Rear		Front		Rear		Front		Rear		-	
	kPa	PSI	kPa	PSI	kPa	PSI	kPa	PSI	kPa	PSI	kPa	PSI	kPa	PSI
225/60 R16 98V	250	36	250	36	270	39	270	39	270	39	300	44	300	44
225/55 R17 97V					-	-	-	-						
245/45 R18 96V					-	-	-	-						
245/45 R18 100V					-	-	-	-						
245/40 R19 98W					-	-	-	-						
T155/80 R17 111M	-	-	-	-	-	-	-	-	-	-	-	-	420	60

Customer information

Customer satisfaction procedure 329
Customer assistance offices..... 329

Customer satisfaction procedure

We want you to be happy with your new vehicle, together with the people you deal with while you have the vehicle.

Normally, any problems with the sales, operation, servicing, parts/accessories or the validity of original equipment supplied with your vehicle will be handled by your Holden Dealer Sales and Service Department.

We realise however that, with the best intentions, misunderstandings sometimes occur.

Therefore, we suggest you discuss any concern with one of the Holden Dealer management people.

If you have not received satisfaction from the Sales Manager or Service Manager, go to the General Manager or to the Dealer Principal.

By now you should have satisfaction. If not, the Holden Customer Assistance office is at your disposal.

Customer assistance offices

Australia

The Holden Customer Assistance representatives can be telephoned from anywhere within Australia for only the cost of a local call.

The contact number is:

1800 033 349

Naturally, telephoning is the quickest and the best way to contact. However, if you prefer to write the address is:

The Manager
Holden Customer Assistance Centre
GPO Box 1714
Melbourne 3001

Your letter should clearly outline your concern or query and include:

- Your name and address
- Telephone numbers, both private and business
- Servicing dealer's name and address
- Vehicle model
- Vehicle identification number (I.S.O.V.I.N.), refer to the inside front cover of the Service/ Warranty Booklet in your vehicle's glove box
- Date of purchase
- Current odometer reading

Most of this information will be found on the Vehicle Identification Certificate, located inside the front cover of the Service/Warranty Booklet in your vehicle's glove box.

Before you write however, remember that the telephone is the quicker and more efficient means of communication.

New Zealand

The information in this Owner's Handbook applies primarily to Australian Holden vehicles and there may be some differences to the Warranty and Owner Assistance provisions for New Zealand.

Applicable details for New Zealand are set out in the Holden Warranty and Owner Assistance Information booklet enclosed in the New Zealand glove box wallet.

New Zealand Assistance can be reached on:

0800 HOLDEN (**0800 465 336**)

This number provides access to New Zealand Roadside Assistance as well as New Zealand Customer Assistance.

If you prefer to write the address is:

The Manager
Holden Customer Assistance Centre
PO Box 11195
Ellerslie
Auckland 1542

A

ABS 223
Accessories
- Battery saver 115
- Power socket 73
- Retained Accessory Power (RAP) 212

Active Fuel Management (AFM) 94, 104
Active safety systems
- Antilock Brake System (ABS) 223
- Electronic Brake Assist (EBA) 227
- Electronic Stability Program (ESP®) 225

Active Select (A/S) mode 220
Airbags 43
- Airbag fault warning 77
- Airbags and child restraints 43
- SRS warning light 77

Air compressor kit 298
Air conditioning 13, 201
- Specifications 323

Air pressure, tyres 294
Alarm system 25
Alternator warning lamp 78
Anchorage points, child restraints 52
Anti-theft alarm 26
Antifreeze 261
Antilock Brake System (ABS) 223
Approach lighting 111
Armrests 40
Assist grips 31
Automatic transmission 13, 213
- 4 speed 213
- 6 speed 216
- Active Select (A/S) 89, 220
- Fluid 260, 319
- Powertrain braking 218
- Sport shift 88, 216, 218
- Transmission messages 88

Auxiliary devices 138, 163
Axle loads 245, 325

B

Battery 268
- Disconnection 269
- Jump starting 309
- Replacement 269

Battery saver 81, 115
Bluetooth® music 144
Bluetooth® phone 70, 192
Bonnet 252
Boot
- Key 4, 22
- Release button 23

Brakes 223
- ABS 223
- ABS warning lamp 80
- Brake fluid level 267
- Brake warnings 79
- Electronic Brake Assist (EBA) 227
- Park brake 224

Bulb replacement 270
Bull bars 249

C

Camera (rear vision) 234
Capacities, fluid 327
Caravan, towing 244
Carbon monoxide, warning 236
Cargo area (Sportwagon) 57
Car key 4, 16

CD/DVD player 145
CD player 132
Central locking 16, 20
Changing a flat tyre 292, 303
Child restraints 43, 49
  Anchor points 52
  Types of restraint 49
Child safety locks 22
Child safety switch 31
Cleaning 314
  Camera 234
  Exterior 314
  Interior 316
Climate control 13, 200
  Air conditioning controls ... 13, 201
  Display size 205
  Sensors 207
Clock 121
Clutch 212, 222
  Fluid 267
Compliance labels 321
Console 56
Convenience net 58
Coolant
  Capacities 327
  Cooling system messages 82
  Engine coolant 260
  Specification 319
  Temperature gauge 74
Cruise control 81, 227
Cup holders 54
Customisation options 104

D

Dashboard layout 9, 67
Default LPG operation 242
Delayed headlamps 111
Demister, rear window 205
Demister, windscreen 205
Differential oil 319
Dimensions 326
Dimmer, instrument lighting 112
Dipping headlamps 11, 110
Dipstick
  Automatic transmission fluid .. 259
  Engine oil 257
Display, climate control 205
Dome lamps 113
Door ajar light 80
Doors 20
  Child safety locks 22
  Key 16
  Locking and unlocking 20
  Lock snibs 21
Driving
  Parking 213
  Running-in 208
  Safety 213
  Starting the engine 212
Driving lamps 249
Driving precautions 208
DVD player 145
  Advanced features 161
  Auxiliary devices 163
  Battery replacement 149
  Controls 145, 146
  Disc types 149
  Display menu 157
  DVD operation 150
  Error messages 156
  Headphones 145
  Loading, ejecting 150

DVD player continued
Maintenance ... 145
MP3 playback ... 155
On-screen menus ... 156
Playback ... 151
Remote controls ... 145
Video CD ... 155
Video format, auxiliary mode ... 164
Video screen(s) ... 148

E

Egress lighting ... 111
Electric mirrors ... 27
Electric seat ... 35
Electric windows ... 29
Electronic Brake Assist (EBA) ... 227
Electronic Stability Program (ESP®) ... 225
Emergencies
Bulb replacement ... 270
Changing a flat tyre ... 303
Customer assistance ... 329
Emergency exit hammer ... 62
Engine overheating ... 262
Flat battery ... 311
Emergencies continued
Flat tyre ... 303
Fuse replacement ... 286
LPG system ... 239
Towing a disabled vehicle ... 313
Emissions ... 250
Engine
Compartments ... 254
Cooling system ... 260
Cover ... 256
Number locations ... 322
Overheating ... 262
Specifications ... 323
Starting ... 15, 88, 212
Temperature warning ... 82
Engine oil ... 257
Adding oil ... 257
Capacities ... 327
Change interval ... 258
Consumption ... 258
Dipstick ... 257
Low oil pressure warning ... 82
Enter button ... 92
Ethanol ... 237, 323
Exhaust fumes, warning ... 236
Exterior lighting ... 11, 109
Exterior mirrors ... 27

F

Fan, climate control ... 203
Flat battery ... 311
Flat tyre ... 292
Changing a flat tyre ... 292, 303
Tyre sealant ... 298
Fluid levels
Automatic transmission ... 259
Brake ... 267
Clutch ... 267
Engine oil ... 257
Power steering ... 265
Windscreen washer ... 266
Free turning door locks ... 22
Fuel ... 236
Additives ... 237
Consumption, reduction ... 251
Ethanol ... 237
Fuel cap ... 239
Fuel filler flap ... 238
Fuel type ... 238

Fuel continued
Fumes warning 237
Gauge 75, 243
Low fuel warning 84
LPG 239
Octane rating 238, 323
Precautions 236
Refuelling 238
Selector switch 242
Tank capacity 327
Type 238
Very low fuel warning 84
Fuses and relays 287

G

Gas cylinders 66, 210
Gauges 74
Fuel 75, 243
Information displays 74
Speedometer 75, 97
Tachometer 75
Temperature 74
Glove box 54
Boot release button 23
Key 18
Graphic Information Display (GID) 81

H

Hand brake 224
Hazard warning 12, 111
Headlamps 273
Customising 111
High beam indicator lamp 110
Operation 109
Head restraints 6, 34
Heated mirrors 28
Heating and ventilation 200
Help screens 105
Help system (infotainment) 198
High beam 11, 80, 110
Horn 12, 71

I

Identification labels 321
Identification numbers 322
Ignition lock/switch 15, 211
Immobiliser 26
Indicators/warning lamps 74
Infant and child restraints 49
Inflation, tyres 294, 298
Infocard 20
Information displays 74
Infotainment system 116
Bluetooth® music 144
Bluetooth® phone 192
CD players 131
Clock 121
Controls 119
Date 122
Display brightness 122
Help system 198
iPod® 138
MP3 134
Navigation 165
Operation 121
Radio 126
Rear Seat Entertainment (RSE) 145
Settings 123
Theft-deterrent feature 117
Time 121

Infotainment system continued
USB port 141
Virtual CD changer (VCDC) ... 136
Insect screens 249
Instrument panel 10, 67
Interior lamps 11, 283
Interior mirrors 29
iPod® 138

J

Jack
Jacking locations 305
Operation 305
Storage 293
Trolley jack locations 308
Jacking equipment
Jack 293, 305
Nut cap tool 293, 305
Wheel wrench 293, 305
Jump starting 309

K

Keys 4, 16
Glove box 18
Ignition key 16
Infocard for keys 20
Matching transmitter(s) 17
Panic/vehicle locate button 17
Personal identity 18
Storage 19

L

Lighting 109
Approach lighting 111
Battery saver 115
Boot lamp 114
Bulb replacement 270
Cargo area lamp 114
Delayed headlamps 111
Dimmer 112
Driving lamps 249
Fog lamps 112
Glove box lamp 114
Hazard lamps 12, 111
Headlamps 110
High/low beam 11, 110
Lighting continued
Interior lamps 11, 112
Lamp control 109
Night panel mode 113
Personal identity keys 111
Puddle lamps 110, 111
Reading lamps 114
Reverse lamps 110, 111
Sun visor lamps 114
Turn signals 12, 112
Load anchors 63
Loading capacity 324, 325
Loading the vehicle 209, 324
Locks
Bonnet lock 252
Boot lock 22
Child safety locks 22
Door locks 4, 20, 21
Door locks, free turning 22
Emergency boot release 23
Ignition lock/switch 211
Locking and unlocking 4, 20

LPG
Default operation 242
Dual fuel LPG (Sedan) 239
Emergency procedures 239
Fuel gauge 243
Fuel selector switch 242
LPG fuel gauge 243
Manual service valve 239
Operation 242
Refuelling 241
Starting the engine 241
Tank capacity 241, 327
Vehicle storage 240
Lumbar support 36

M
Maintenance 251
Manual door locks 21
Manual service valve 239
Manual tailgate release 24
Manual transmission 267
Memory seat
Memory settings 38
Using personal identity keys 39
Mirrors
Exterior 7, 27
Heated 28
Interior 7, 29
MP3 134

N
Navigation 165
Address settings 173
Configuring the system 179
Overview 166
Points of Interest (POI) 177
Route settings 170
Symbols 189
New vehicle running-in 208
Nudge bars 249
Number locations (engine) 322
Nut cap tool 293

O
Object detection systems 230
Octane rating 238, 323
Odometer
Single window display 93
Triple window display 97, 98
Oil
Adding oil 257
Change interval 258
Checking oil level 257
Consumption 258
Differential oil 319
Dipstick 257
Low pressure warning 82
Overheating 262
Engine temperature warning 82
Overspeed 95, 103

P
Panic/vehicle locate button 17
Park Assist (PA) 230
Dual Park Assist (DPA) 232
Rear Park Assist (RPA) 232
Tow bar adjustment 233
Park brake 224
Park brake warning 79
Parking 15, 213
Parking lamps 274
Personal identity keys 18, 111
Petrol operation 242
Phone 120, 192

Polishing 315
Pollen/dust filter 207
Power mirrors 7, 27
Power seat 35
Power socket 73
Power steering
Fluid 265
Precautions 209
Powertrain braking 218
Power windows 29
Puncture 295, 298
Push/tow start warning 309

R

Radiator cap 260, 263
Radio 126
Rain sensor 72
Reading lamps 114, 283
Rear Seat Entertainment (RSE) 145
Rear view mirror 29
Rear Vision Camera (RVC) 234
Rear window demister 205
Refuelling 238
Relays 287
Remote control, DVD 146
Restraints 34
Child restraints 49
Infant restraints 50
Retained Accessory Power (RAP) 212
Ride control systems 225
Roo bars 249
Roof rack loads 66
Running-in a new vehicle 208

S

Safety mode warning 83
Seat belt pretensioners 48
Seat belts 7, 40
Seat belt warning 76
Shoulder height adjust 42
Seats 5, 34
Adjustment 5, 35
Child restraints 49
Front seats 35
Head restraints 34, 35
Memory 38
Rear seat 39
Security
Alarm 25
Card/numbers 20
Servicing 318
Shock absorbers, superlift 247
Snow chains 297
with ESP® 225
Spare wheel 292
Specifications 319, 323
Air conditioning 323
Axle loads 325
Capacities 327
Dimensions 326
Engine 323
Loading 324
Towing capacity 244
Tyre pressure 328
Speedometer 74, 97, 104
Speed warning preset 95
Sport mode 216, 218
Sports tyres 294
Stability control 225

Starting
Flat battery 309
Normal..... 14, 208
Steering
Power steering fluid..... 265
Tilt 8, 70
Storage compartments 54
Sunglasses holder 56
Sunroof 31
Cleaning and maintenance 33
Operation 31
Sun visor mirrors 29
Supplemental Restraint System (SRS)..... 44
Airbags..... 43
Seat belt pretensioners 48
Symbols (navigation)..... 188, 190

T

Tachometer..... 74
Tailgate (Sportwagon)..... 24
Tank capacity..... 327
Technical data..... 320
Telephone..... 192
Temperature gauge 74
Temperature sensors..... 207
Theft-deterrent feature.....117
Tilt steering 8, 70
Time..... 121
Tools 292
Towing 244
Caravan/trailer..... 244
Equipment..... 246
Load distribution hitch 247
Loading 244
Precautions 247
Towing slot 313
Traction control..... 225
Traffic Message Channel (TMC) 185
Trailer towing 244
Transmission
Automatic 13, 213
Manual 14, 221
Transmission fluid..... 259, 319
Trip button 70, 92
Trip computer 92
Customisable features 104
Single-window..... 93
Triple-window..... 97
Trolley jack locations 308
Turn signals 12, 112
Tyre pressure..... 294, 328
Tyres
Chains..... 297
Grip 210
Placard..... 293
Replacement..... 296
Rotation..... 295
Sealant and air compressor kit..... 298
Sports tyres..... 294
Tread depth..... 295

U

Underspeed..... 96, 104
USB port..... 141

V

Vanity mirrors..... 29
Vehicle care..... 250
Vehicle Identification Number (VIN) 321
Vehicle loading 324

Vehicle personalisation 104
Cylinder mode 108
Entering 104
Exiting 105
Help screens 105
Lighting 107
Navigating the menu 105
Park Assist (PA) 108
Reset settings 106
Security 106
Trip computer 107
Vehicle storage 240
Ventilation system 200
Vents 201
Video CD 155
Virtual CD Changer (VCDC) 136

W

Warning lights 74
Washer fluid 266
Washing the vehicle 314
Water crossing 210
Wheels and tyres 293
Windows 29
Windscreen demister 205
Windscreen washer fluid 266
Wiper blades 315
Wipers and washers 13, 71